 
 


The following catalog
has gaps in its page
numbers, or doesn't
have any numbers.
We have chosen to
leave the page
numbering in the
order that Acrobat
assigns it.

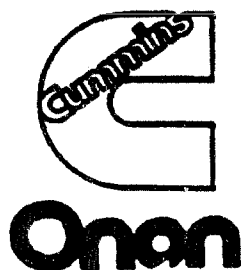 


PRODUCT GUIDE

Starter Index

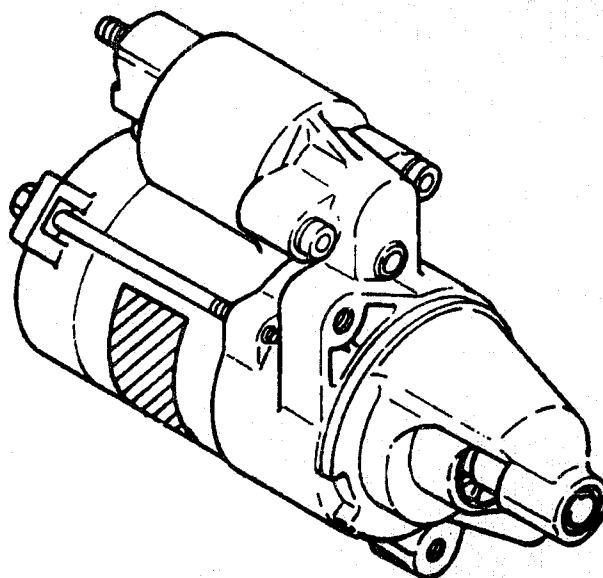


185-2116

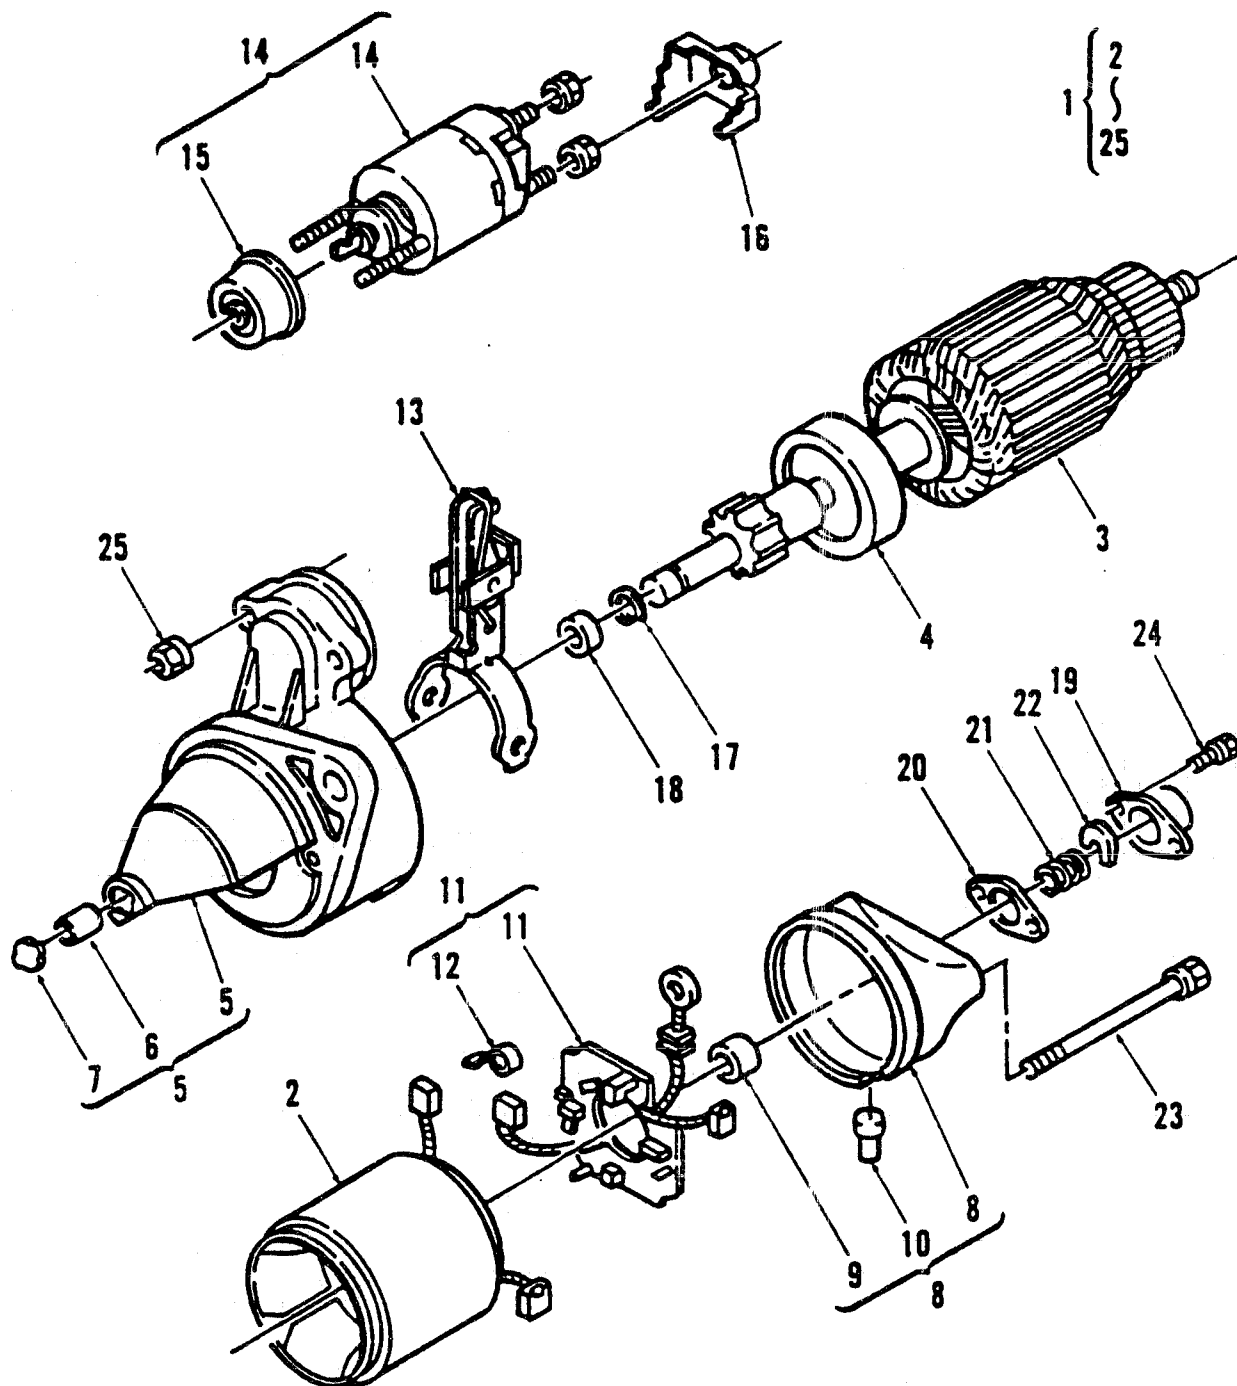

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-2116	1	Starter, Complete - 12 VDC
2	185-2322	1	Coil, Field
3	185-2321	1	Armature
4	185-2319	1	Clutch
5	185-2118	1	Housing, End - Drive
6	185-2295	1	Bushing, Sleeve
7	185-2335	1	Cover
8	185-2326	1	Housing, End - Brush
9	185-2327	1	Bushing, Sleeve
10	185-2119	1	Cover
11	185-2329	1	Rig. Brush
12	185-2330	4	Spring
13	185-2320	1	Lever, Drive

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
14	185-2117	1	Solenoid
15	185-2331	1	Cover, Plunger
16	185-2323	1	Insulator, Terminal
17	185-2111	1	Ring, Retaining
18	185-2195	1	Spacer, Sleeve
19	185-2332	1	Housing
20	185-2333	1	Gasket
21	185-2325	1	Spring
22	185-2324	1	Clip, Retaining
23	185-2328	2	Bolt, Hex
24	185-2383	2	Screw, Machine - Pan Head
25	185-2334	2	Nut, Hex

 
185-2493

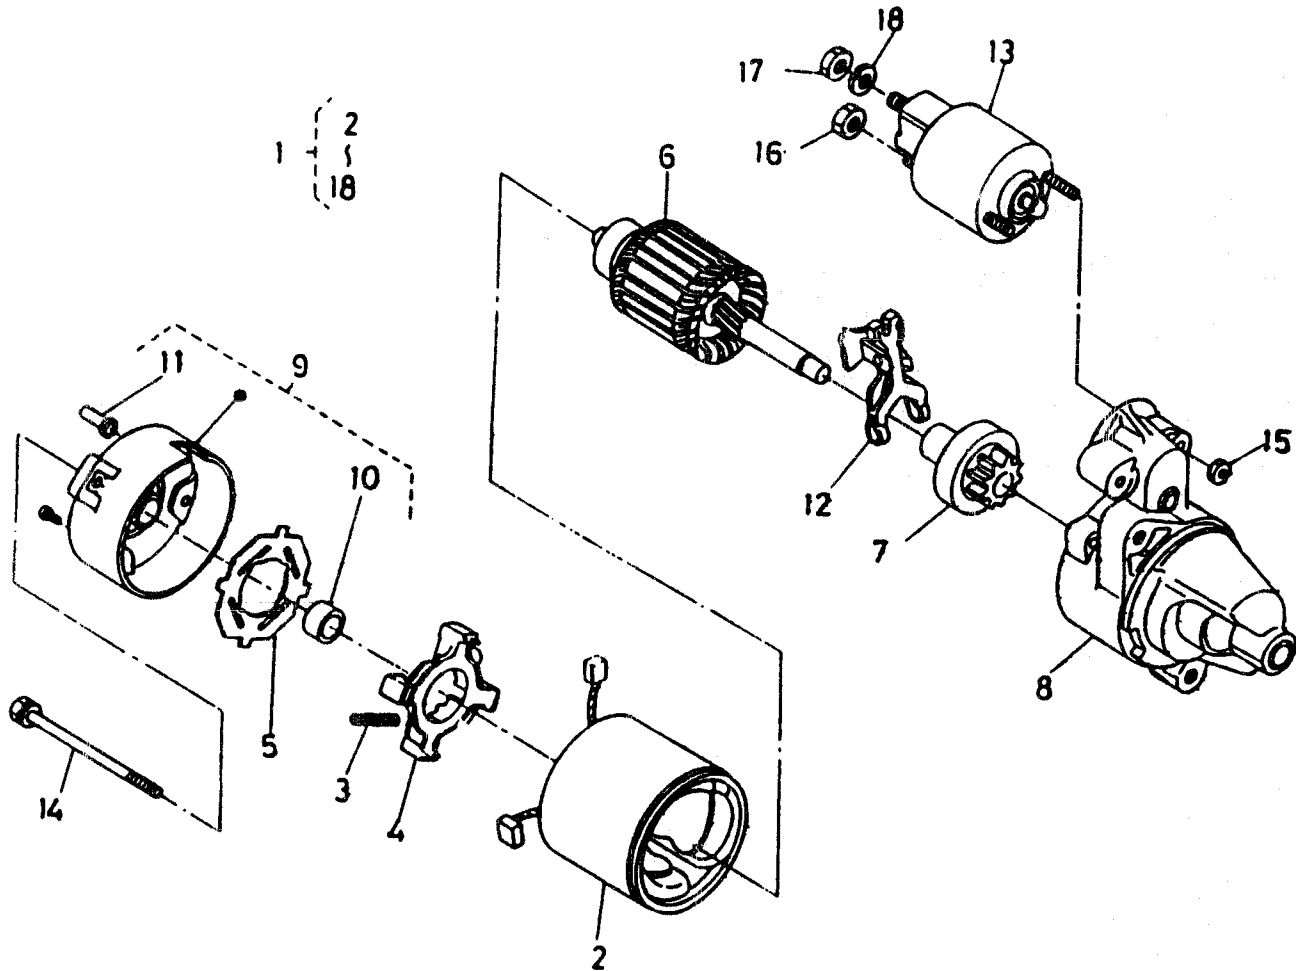

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-2493	1	Starter, Complete
2	185-2659	1	Frame
3	185-2662	4	Spring, Brush
4	185-2661	1	Holder, Brush
5	185-2664	1	Insulator
6	185-2657	1	Armature
7	185-2713	1	Clutch
8	185-2706	1	Housing
9	185-2707	1	Frame, Commutator


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
10	185-2663	1	Bearing
11	185-2965	1	Cover
12	185-2656	1	Lever, Drive
13	185-2658	1	Solenoid
14	185-2660	2	Bolt, Through
15	185-2334	2	Nut
16	185-2669	1	Nut
17	185-2367	1	Nut
18	185-2381	1	Washer, Spring

 185-2937

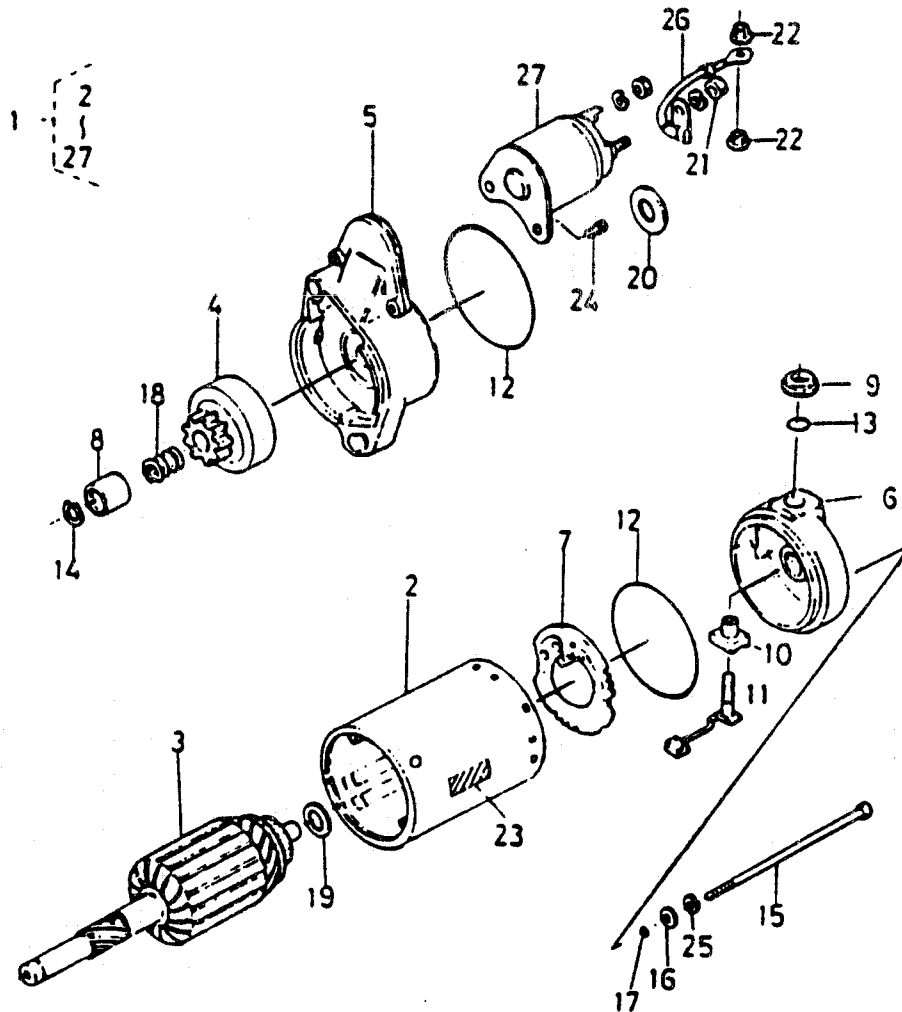


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-2937	1	Starter, Complete	15	185-2740	2	Bolt, Through
2	185-2736	1	Yoke	16	185-2743	2	Washer
3	185-2734	1	Armature	17	185-2750	2	O-Ring
4	185-2733	1	Clutch	18	185-2747	1	Spring
5	185-5253	1	Housing	19	185-2936	2	Washer
6	185-2745	1	Frame	20	185-2744	1	Washer
7	185-2742	1	Holder	21	185-2961	1	Nut
8	185-2746	1	Nut, Stop - Pinion	22	185-2751	2	Nut
9	185-2738	1	Bushing	23	185-2938	1	Nameplate
10	185-2739	1	Bushing	24	185-2735	2	Screw
11	185-2741	1	Bruch	25	185-2752	2	Washer, Spring
12	185-2748	2	O-Ring	26	185-2960	1	Lead
13	185-2749	1	O-Ring	27	185-2753	1	Solenoid
14	185-2737	1	Ring, Snap				

 185-4324

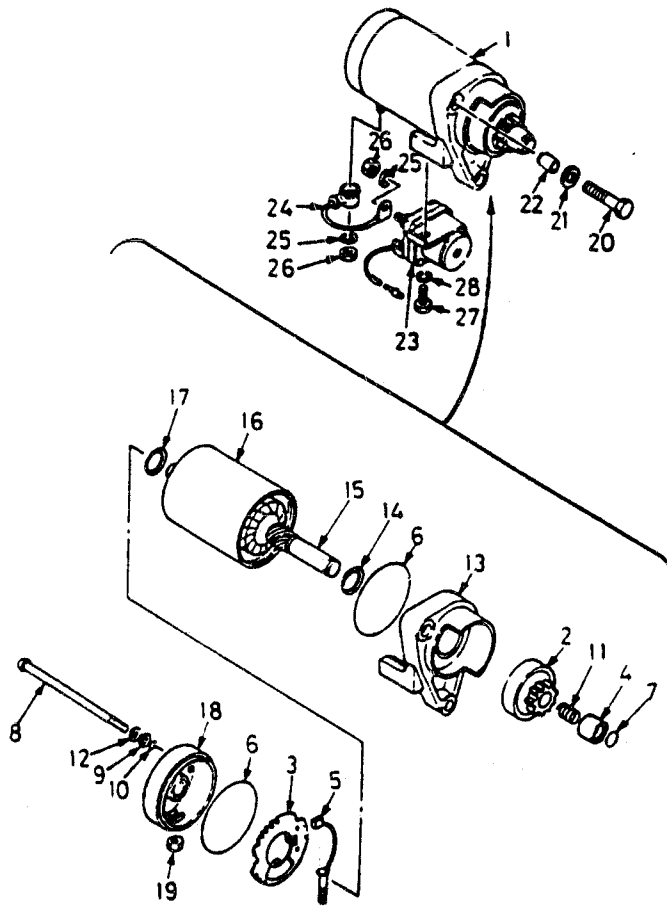

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-4324	1	Starter, Complete	15	185-4937	1	Armature
2	185-4325	1	Clutch	16	185-4938	1	Yoke
3	185-4326	1	Holder, Brush	17	185-4939	1	Washer, Plate
4	185-4327	1	Ring, Stop	18	185-4940	1	Frame
5	185-4328	1	Brush	19	185-4941	1	Nut
6	185-4329	2	Gasket	20	185-4156	2	Bolt
7	185-4330	1	Ring	21	185-3065	2	Washer, Plain
8	185-4331	2	Bolt	22	185-4336	2	Pin, Dowel
9	185-4332	2	Washer	23	185-4337	1	Solenoid
10	185-4333	2	O-Ring	24	185-4338	1	Lead
11	185-4334	1	Spring	25	185-2380	3	Washer, Spring
12	185-4335	2	Washer	26	185-3026	3	Nut
13	185-4935	1	Housing	27	185-4339	1	Bolt
14	185-4936	1	Washer, Plate	28	185-2380	3	Washer, Spring

 
185-5429

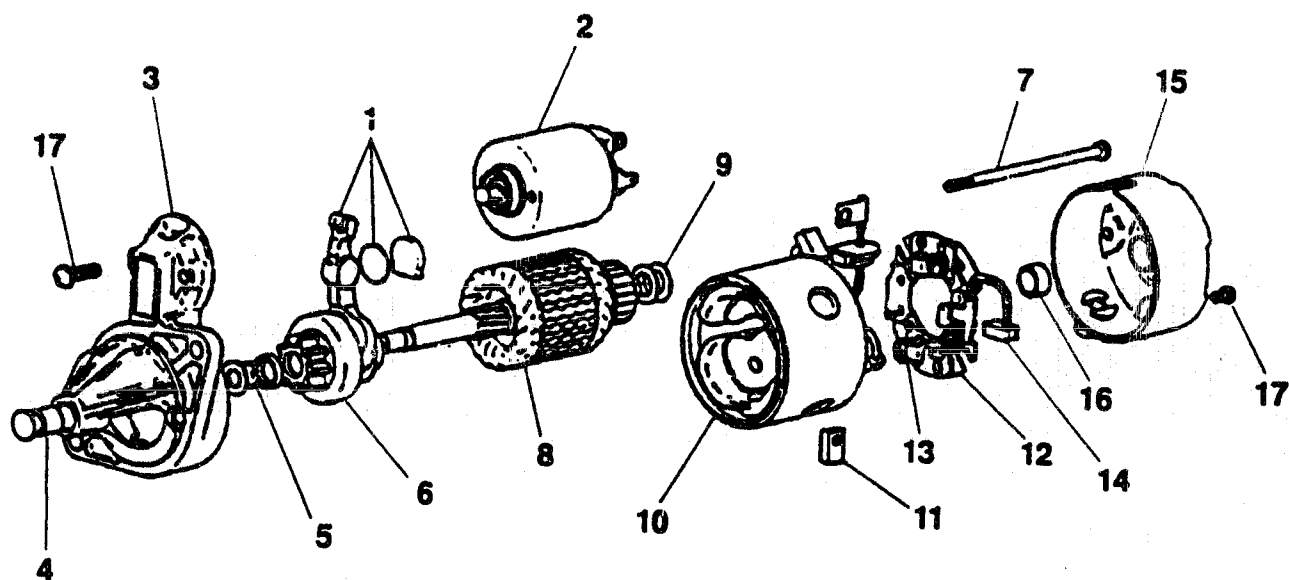

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-5589	1	Lever, Drive
2	185-5590	1	Solenoid
3	185-5591	1	Frame, End - Drive
4	185-5592	1	Bushing
5	185-5593	1	Stopper
6	185-5594	1	Clutch
7	185-5595	2	Bolt, Through
8	185-5596	1	Armature
9	185-5597	1	Washer, Adjusting


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
10	185-5598	1	Coil, Field
11	185-5599	2	Brush
12	185-5600	1	Holder, Brush
13	185-5601	3	Spring, Brush
14	185-5602	1	Brush
15	185-5603	1	Bracket
16	185-5604	1	Bushing
17	185-5605	1	Screw, Machine - Pan Head

 185-5430

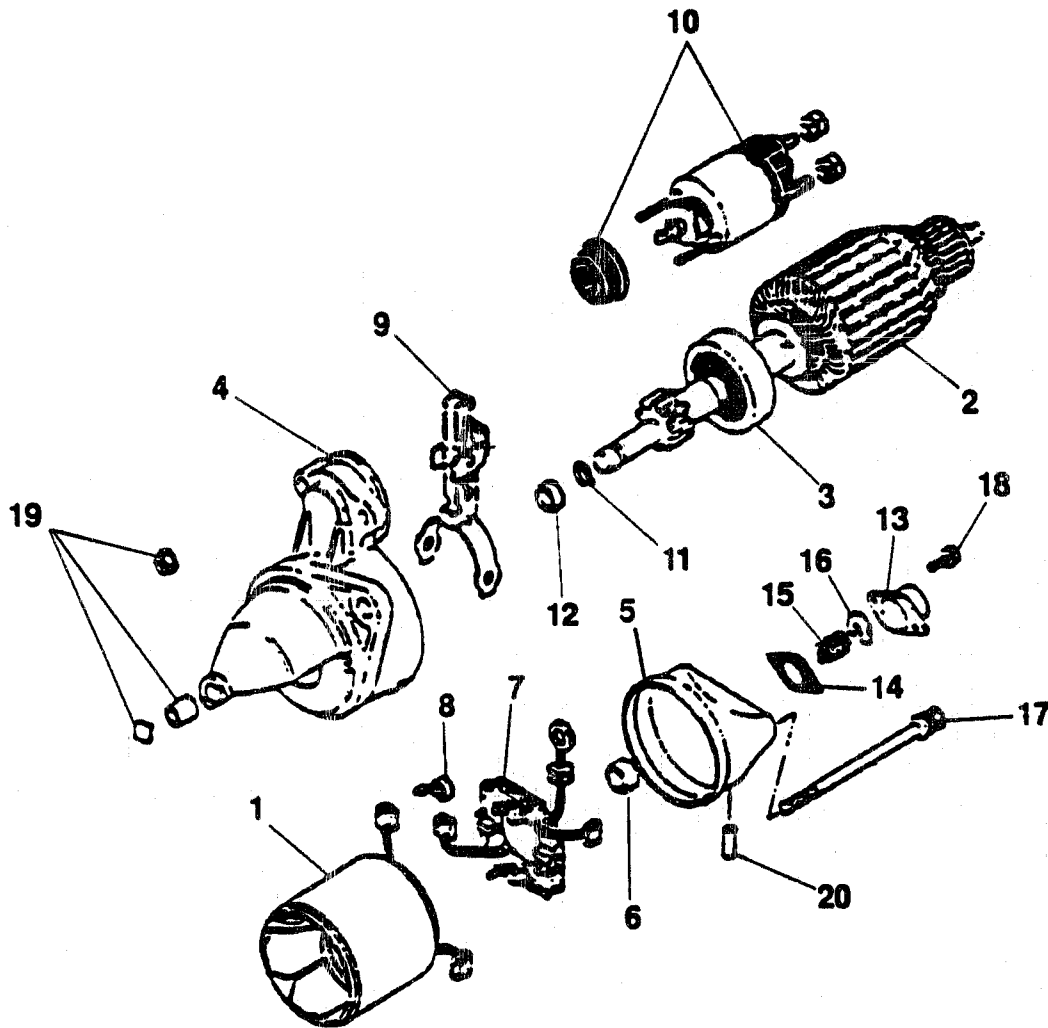

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-2322	1	Coil, Field	11	185-2111	1	Ring, Retaining
2	185-2321	1	Armature	12	185-2195	1	Bushing
3	185-2319	1	Clutch	13	185-2332	1	Cap, Frame
4	185-2118	1	Housing	14	185-2333	1	Gasket
5	185-2326	1	Frame, End	15	185-2325	1	Spring, Brake
6	185-2327	1	Bushing	16	185-2324	1	Shoe, Brake
7	185-2329	1	Holder, Brush	17	185-2328	2	Bolt, Through
8	185-2330	4	Spring, Brush	18	185-2383	2	Screw, Machine - Pan Head
9	185-2320	1	Lever, Drive	19	185-2334	2	Nut, Hex
10	185-2117	1	Solenoid	20	185-5825	1	Tube, Breather

 186-0437

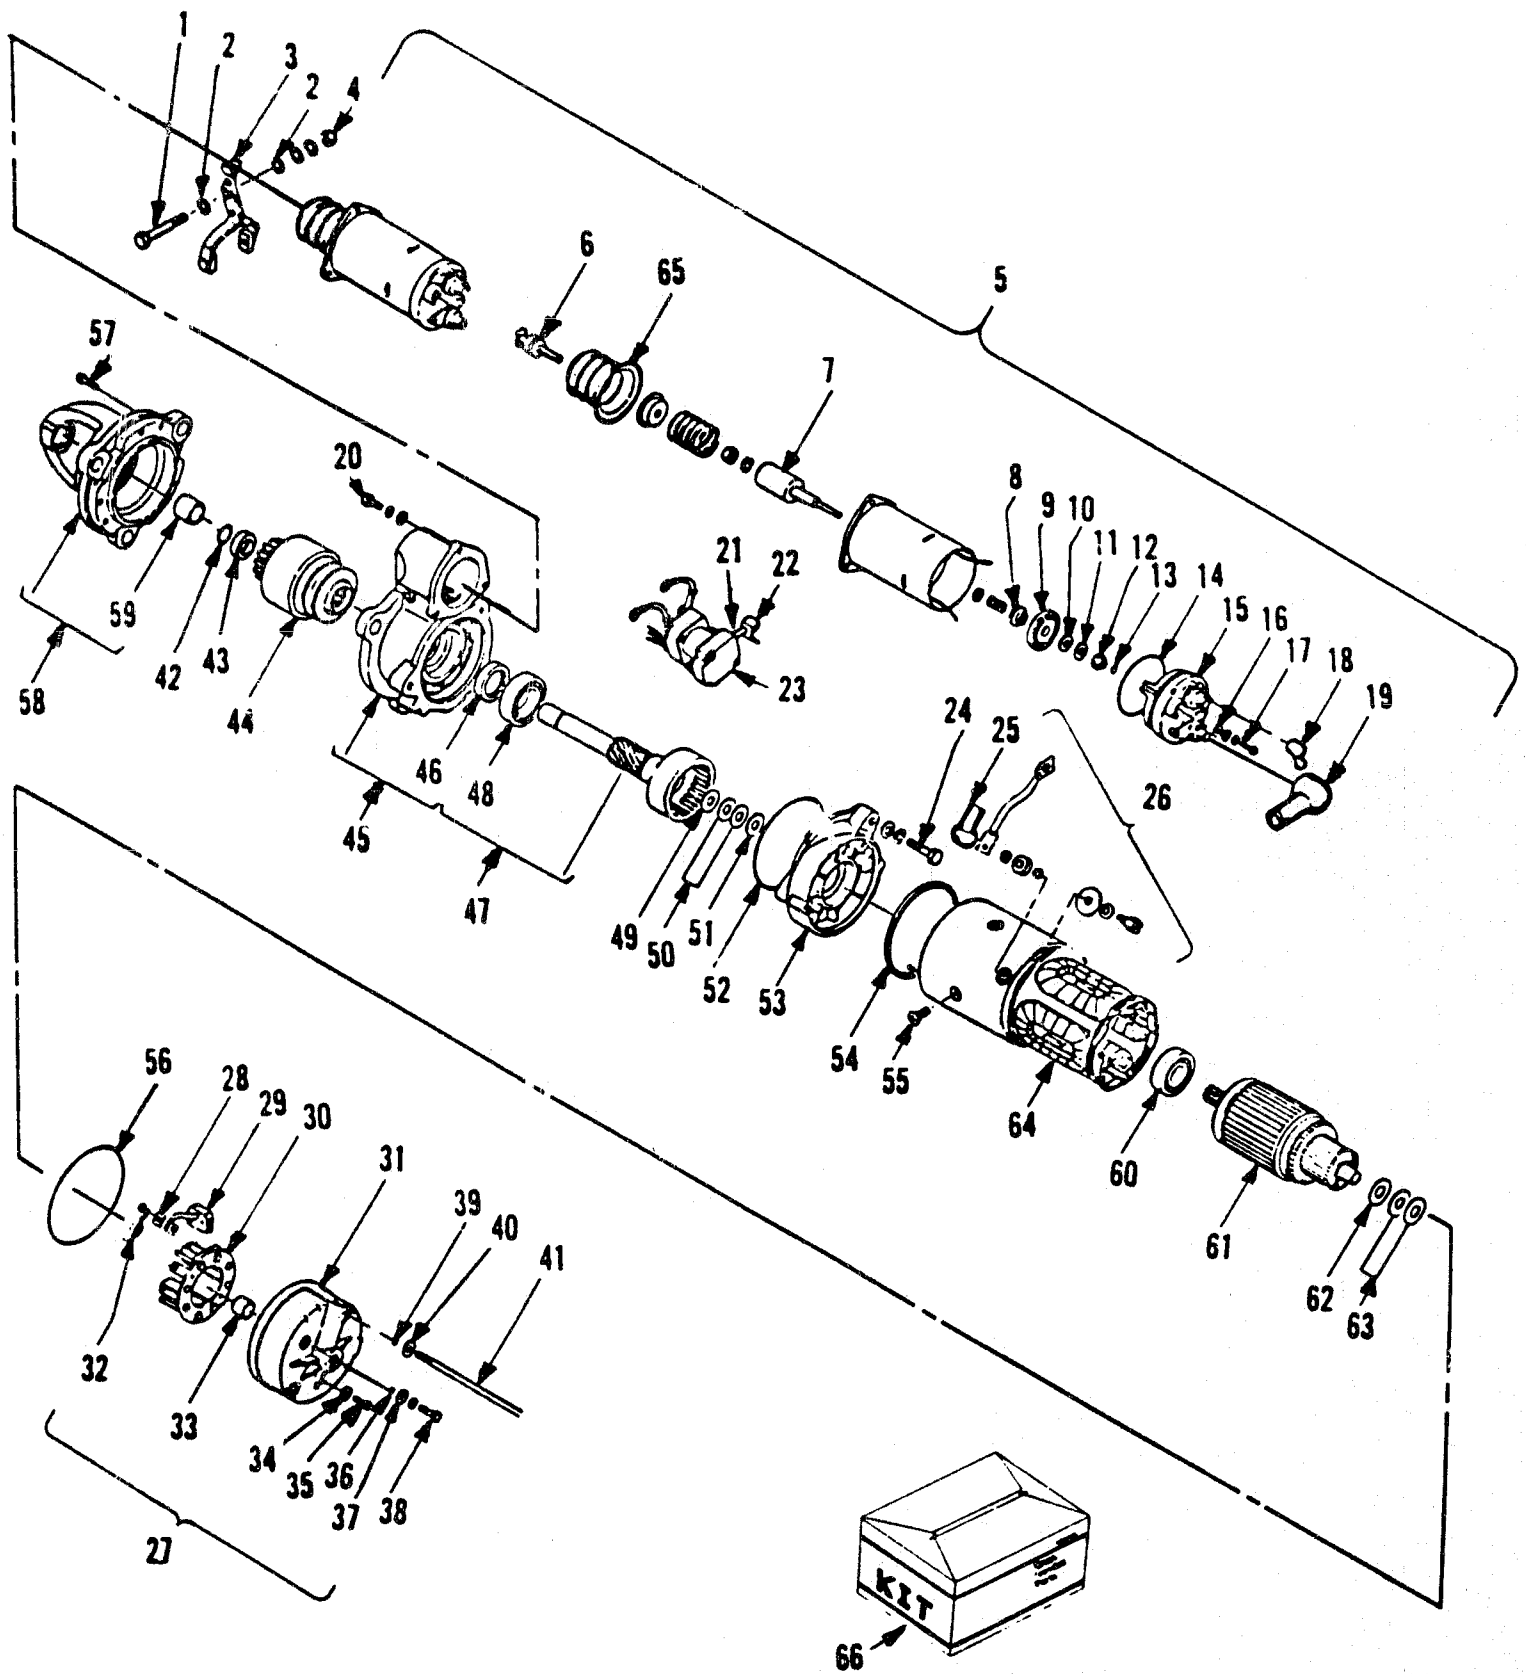


186-0437

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	186-0047	1	Pin, Lever - Threaded	35	186-0623	1	Bolt, Hex Head
2	186-0030	2	Seal	36	186-0624	2	*Seal, O-Ring
3	186-0598	1	Lever, Shift	37	186-0625	2	Washer, Flat
4	186-0599	1	Nut, Hex	38	186-0626	2	Bolt, Hex Head
5	186-0476	1	Solenoid	39	186-0627	2	*Seal, O-Ring
6	186-0600	1	Screw, Plunger	40	186-0628	2	Washer, Flat
7	186-0601	1	Plunger	41	186-0629	2	Bolt, Hex Head
8	186-0602	1	Bushing	42	186-0630	1	Ring, Retaining
9	186-0603	1	Contact	43	186-0631	1	Stop, Pinion
10	186-0604	1	Washer, Insulator	44	186-0479	1	Clutch
11	186-0605	2	Washer, Flat	45	186-0632	1	Bracket, Center
12	186-0606	1	Holder	46	186-0633	1	Seal, Oil
13	186-0607	2	Ring, Retaining	47	186-0634	1	Shaft
14	186-0608	1	*Seal, O-Ring	48	186-0477	1	Bearing, Ball
15	186-0609	1	Terminal	49	186-0635	1	Washer, Thrust
16	186-0610	2	Seal	50	186-0636	2	Washer, Thrust
17	186-0611	2	Bolt, Hex Head	51	186-0637	1	Washer, Insulator
18	186-0042	1	*Cap, Rubber (Terminal Cover)	52	186-0638	1	*Seal, O-Ring
19	186-0612	1	*Cap, Rubber (Terminal Cover)	53	186-0639	1	Bracket, Center
20	186-0613	3	Bolt, Hex Head	54	186-0640	1	*Seal
21	186-0018	1	Bolt, Hex Head	55	186-0641	4	Screw, Flat Head - Cross Recessed
22	186-0614	1	Holder, Switch	56	186-0642	1	*Seal, O-Ring
23	186-0475	1	Switch	57	186-0029	6	Bolt, Hex Head
24	186-0615	3	Bolt, Hex Head	58	186-0643	1	Housing, Front
25	186-0041	1	*Cap, Rubber (Terminal Cover)	59	186-0483	1	Bushing, Sleeve
26	186-0616	1	Terminal	60	186-0478	1	Bearing, Ball
27	186-0617	1	Housing, Rear	61	186-0644	1	Armature
28	186-0618	4	Plate	62	186-0645	1	Washer, Flat
29	186-0480	4	Brush	63	186-0646	2	Washer, Thrust
30	186-0619	4	Holder, Brush	64	186-0647	1	Coil, Field
31	186-0620	1	Housing	65	186-0648	1	Boot, Rubber
32	186-0621	4	Spring, Brush	66	186-0481	1	Package, Seal (Includes Parts Marked *)
33	186-0482	1	Bushing, Sleeve				
34	186-0622	1	Seal				

* Parts included in 186-0481 Seal Package Assembly.

 186-1502

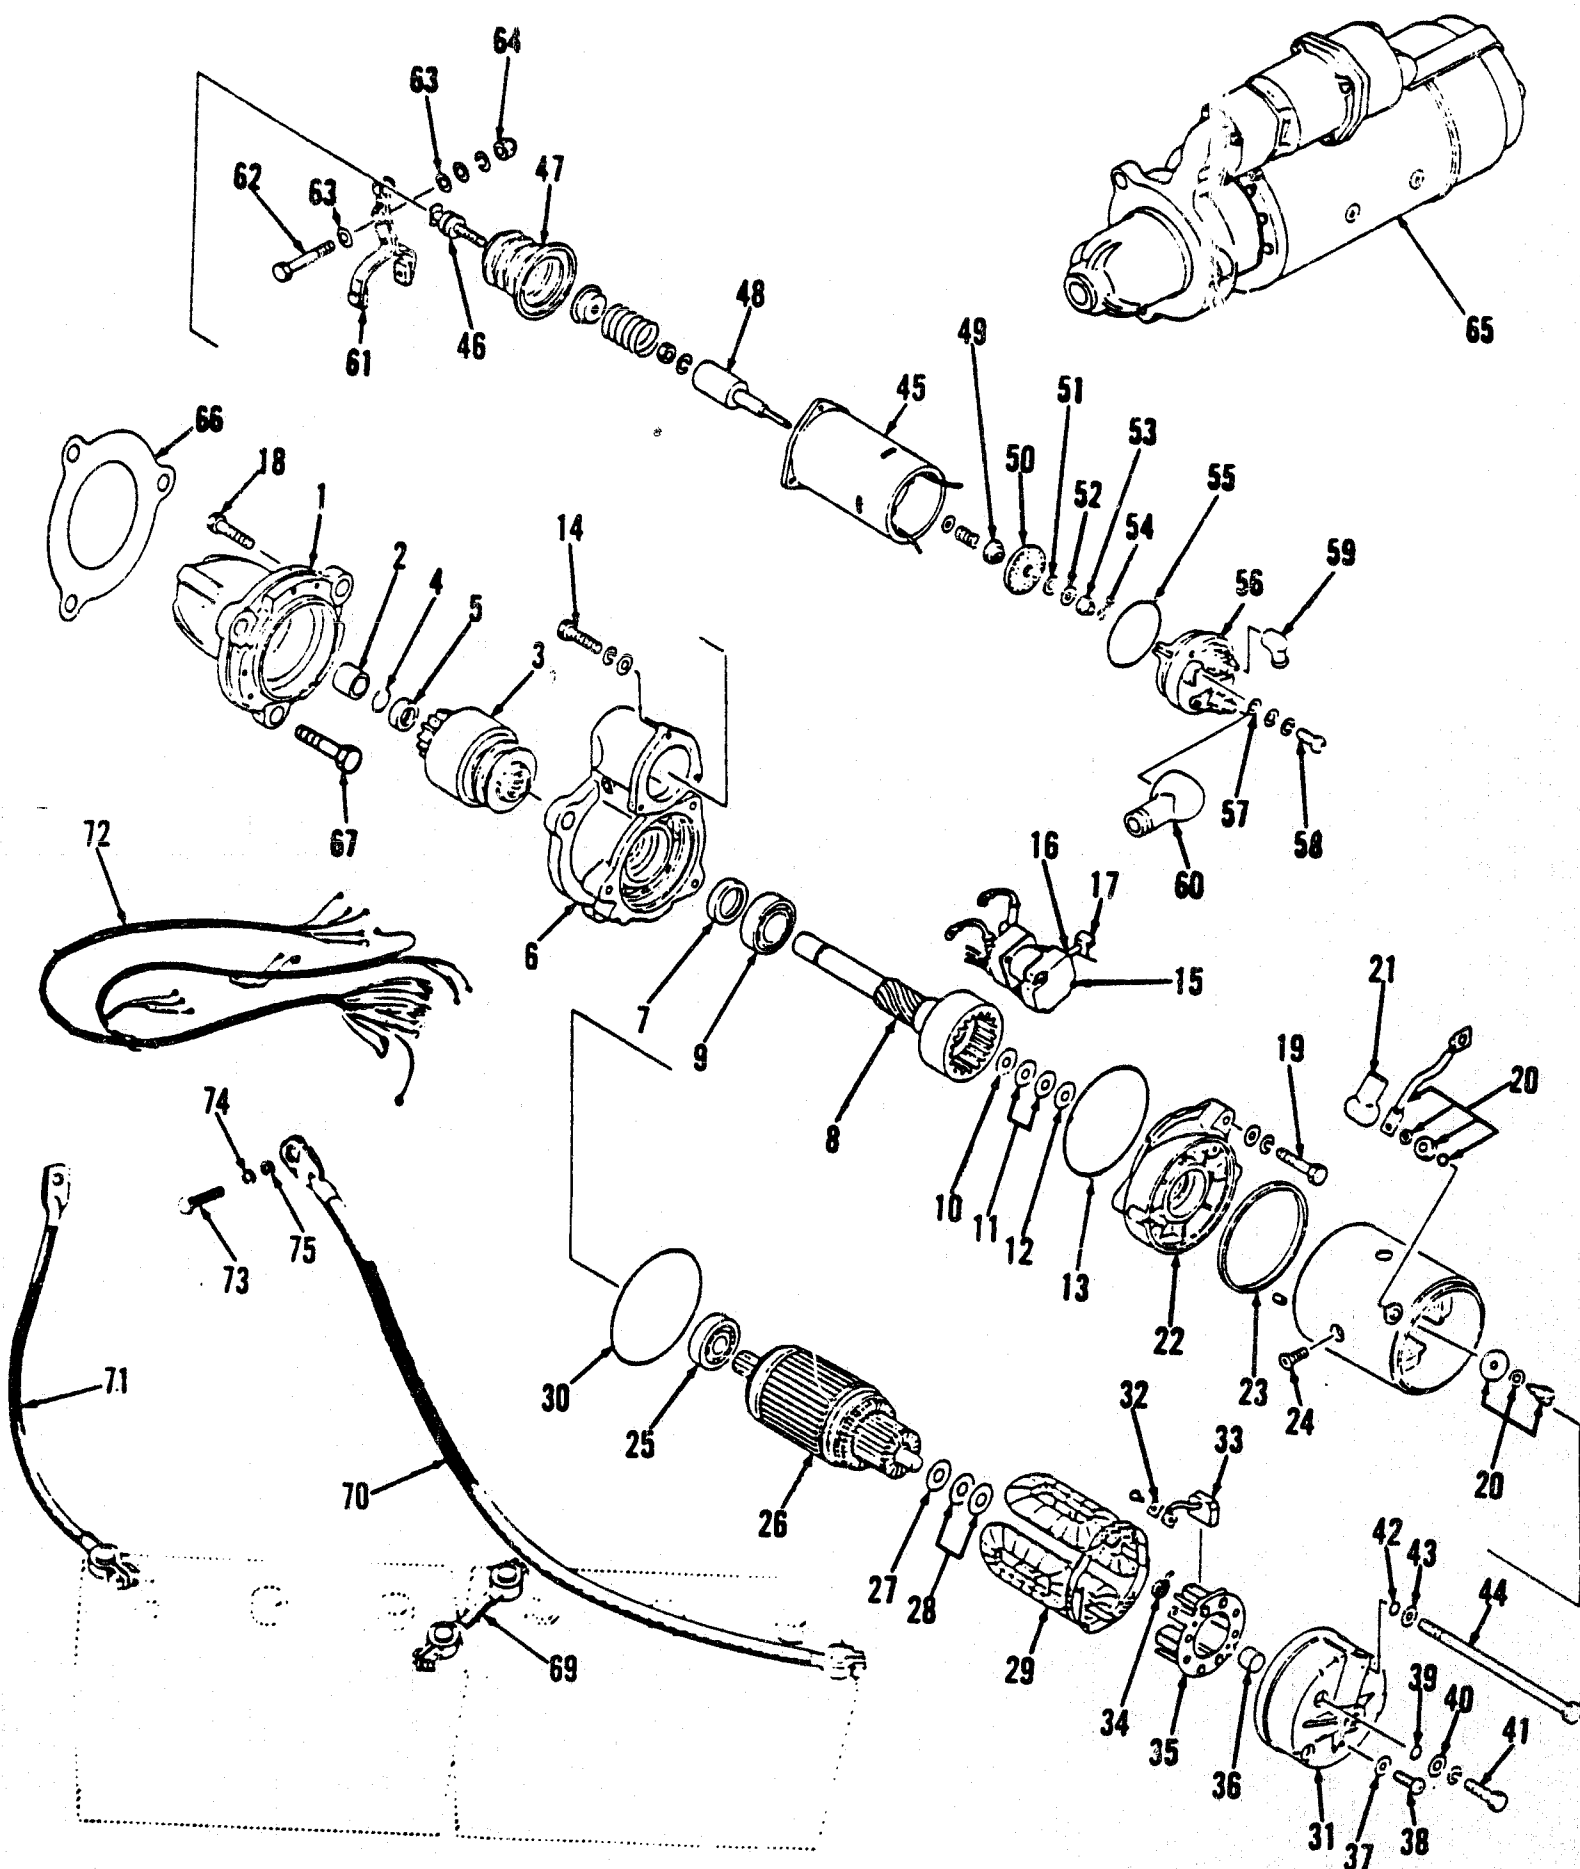


186-1502

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	186-0643	1	*Bracket Assembly, Front (Includes Front Bearing)	39	186-0624	2	**Seal, O-Ring
2	186-0483	1	*Bearing, Front	40	186-0625	2	**Washer
3	186-0479	1	*Clutch Assembly, Over Running	41	186-0626	2	**Bolt
4	186-0630	1	*Ring, Clip	42	186-0627	2	**Seal, O-Ring
5	186-0631	1	*Stopper, Pinion	43	186-0628	2	*Washer
6	186-0632	1	*Bracket Assembly, Center (Includes Oil Seal)	44	186-1509	2	*Bolt, Through
7	186-0633	1	*Seal, Oil	45	186-0476	1	*Switch Assembly, Magnetic (Includes Parts Marked +)
8	186-0634	1	*Shaft Assembly (Includes Bearing)	46	186-0600	1	++Screw
9	186-0477	1	*Bearing, Ball	47	186-0648	1	++Cap, Gum
10	186-0054	1	*Washer	48	186-0601	1	++Plunger
11	186-0055	2	*Washer, Adjust	49	186-0602	1	++Bushing, Insulate
12	186-0637	1	*Washer, Insulate	50	186-0603	1	++Contactor, Moving
13	186-0036	1	*Seal, O-Ring	51	186-0604	1	++Washer, Insulate
14	186-0613	3	*Bolt	52	186-0605	2	++Washer, Adjust
15	186-1508	1	*Switch, Relay - Safety (Includes Bolt, And Holder)	53	186-0606	1	++Holder
16	186-0018	1	*Bolt	54	186-0607	2	++Ring, Clip
17	186-0614	1	*Holder	55	186-0608	1	++Seal, O-Ring
18	186-0029	6	*Bolt	56	186-0609	1	++Terminal
19	186-0615	3	*Bolt	57	186-0610	2	++Washer, Seal
20	186-0616	1	*Terminal	58	186-1510	2	++Screw
21	186-0041	1	*Cap, Gum	59	186-0042	1	*Cap, Gum
22	186-0639	1	*Bracket, Center	60	186-0612	1	*Cap, Gum
23	186-0640	1	*Packing	61	186-1557	1	*Lever, Shift
24	186-0641	4	*Screw, Dish	62	186-0047	1	*Pin, Lever
25	186-0478	1	*Bearing, Ball	63	186-0030	2	*Washer, Seal
26	186-0644	1	*Armature	64	186-0599	1	*Nut
27	186-0645	1	*Washer	65	186-1502	1	Motor Assembly, Starting (Includes Parts Marked *)
28	186-0646	2	*Washer, Adjust	66	186-1503	1	Gasket
29	186-0647	1	*Coil, Field	67	186-1501	3	Bolt
30	186-0642	1	*Seal, O-Ring	68	186-0617	1	Bracket Assembly, Rear (Includes Parts Marked #)
31	186-0620	1	**Bracket, Rear	69	416-0619	1	Cable, Battery - 18"
32	186-0618	4	**Plate	70	416-0618	1	Cable, Battery - 42"
33	186-0480	4	**Brush	71	416-0473	1	Cable, Battery - 27"
34	186-0621	4	**Spring, Brush	72	338-1883	1	Harness, Wiring - Control To Engine
35	186-0619	1	**Holder, Brush	73	800-2085	1	Screw, Cap - Hex Head (M10 x 1.5 x 20mm)
36	186-0482	1	**Bearing, Rear	74	850-2010	1	Washer, Lock (M10)
37	186-0610	1	**Washer, Seal	75	856-0010	1	Washer, EIT (3/8)
38	186-0623	1	**Screw				

* Parts included in 186-1502 Starting Motor Assembly.
Parts included in 186-0617 Rear Bracket Assembly.
+ Parts included in 186-0476 Magnetic Switch Assembly.

 186-1764

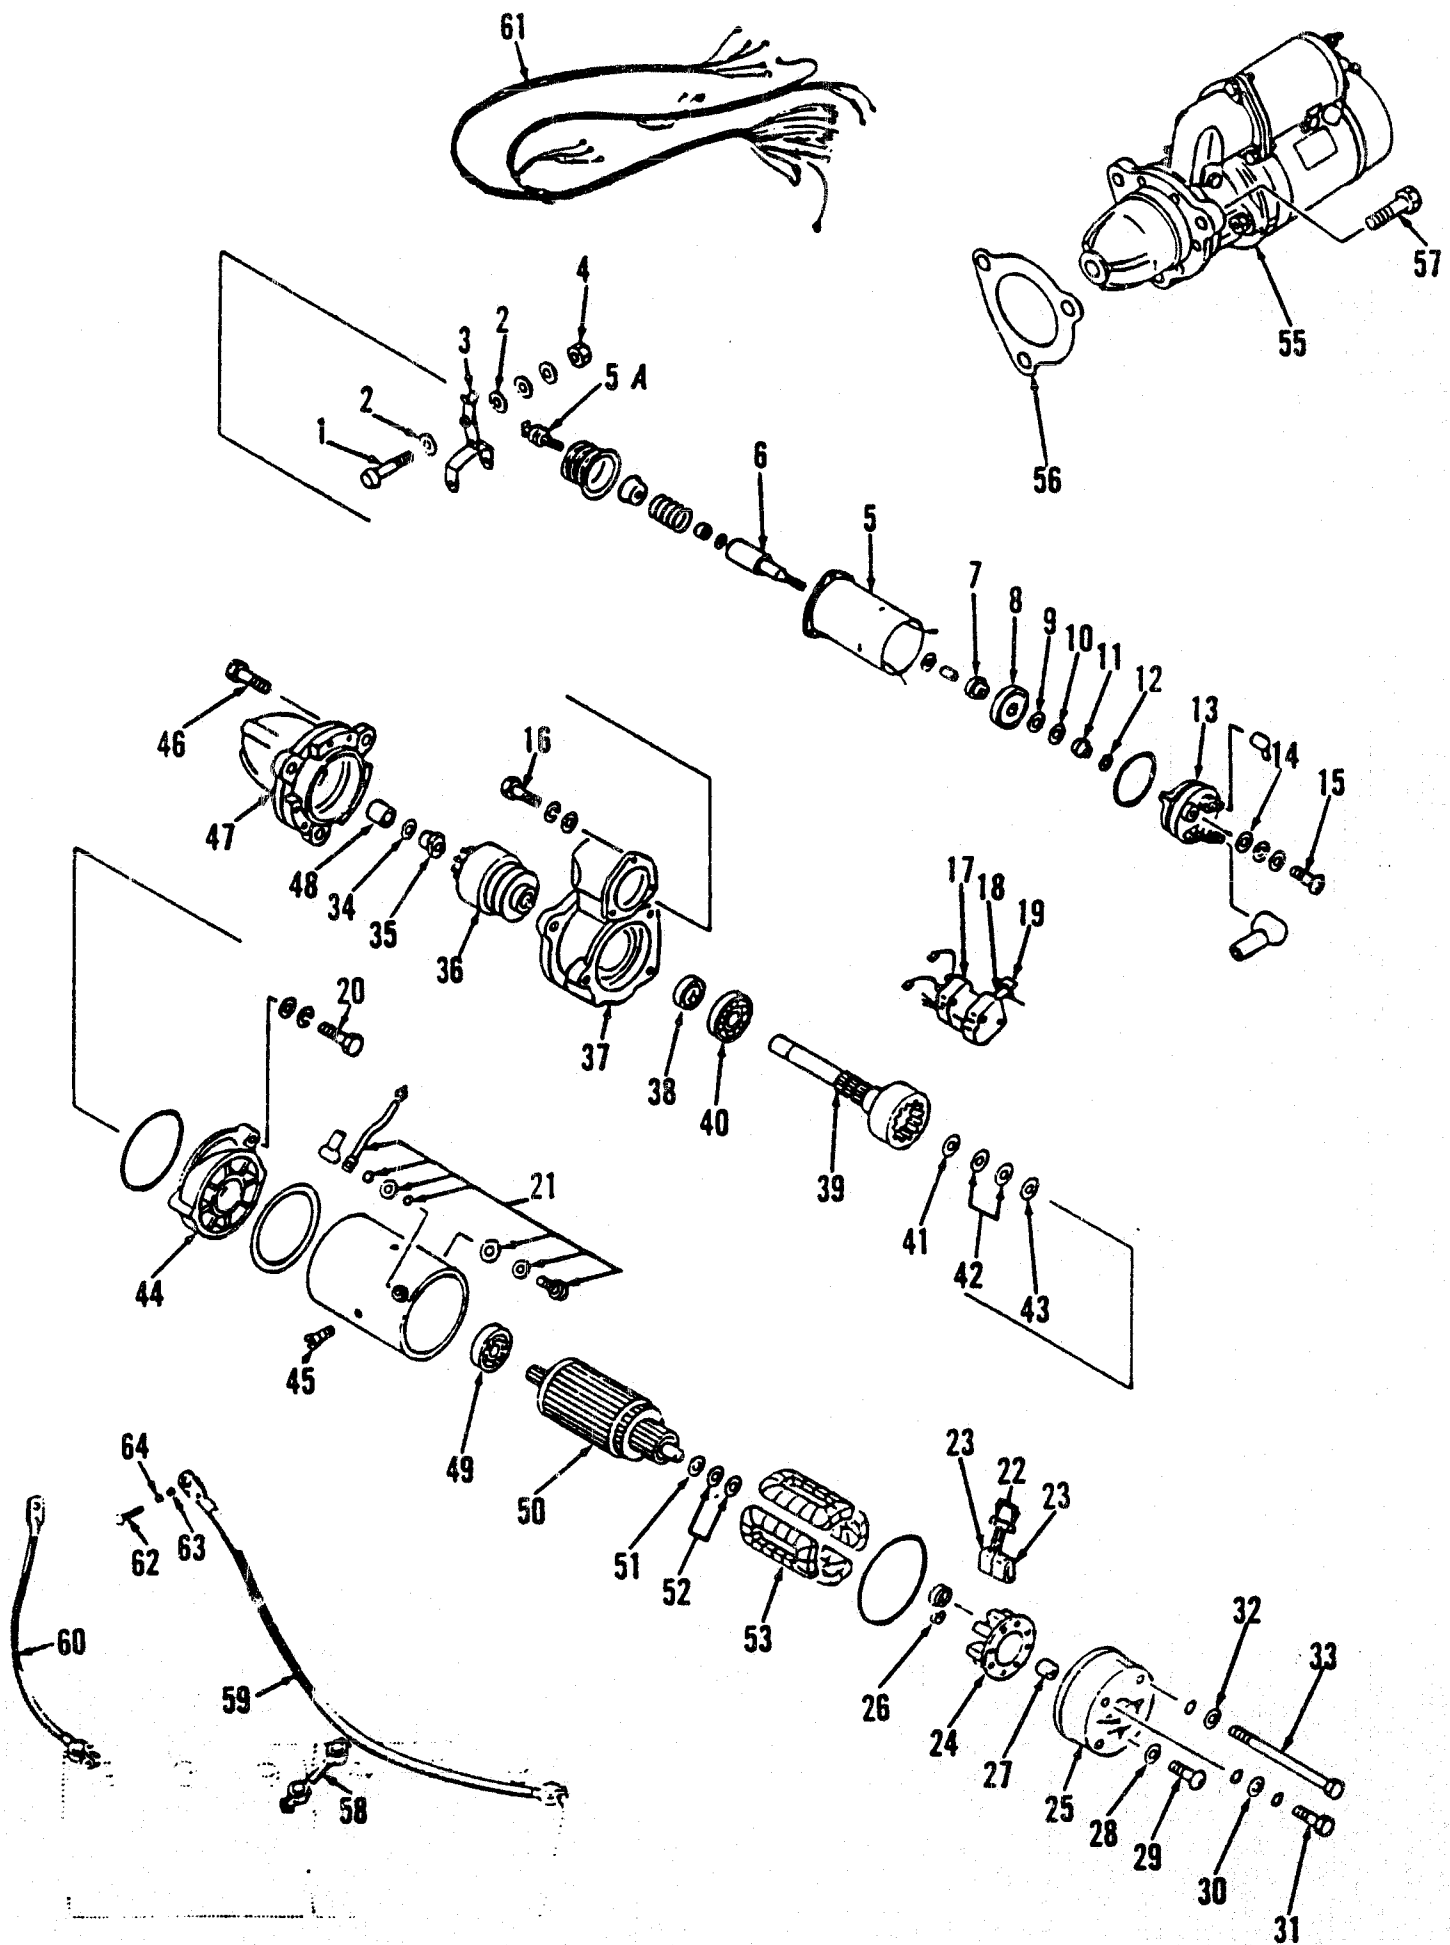


186-1764

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	186-1634	1	*Pin, Lever
2	186-0030	2	*Washer, Seal
3	186-1649	1	*Lever, Shift
4	186-0599	1	*Nut
5	186-0476	1	*Switch Assembly, Magnetic (Includes Parts Marked +)
6	186-0601	1	++Plunger
7	186-0602	1	++Bushing, Insulate
8	186-0603	1	++Contactor, Moving
9	186-0604	1	++Washer, Insulate
10	186-0605	2	++Washer
11	186-0606	1	++Holder
12	186-0607	2	++Ring, Clip
13	186-0609	1	++Terminal Assembly
14	186-1632	2	++Washer, Seal
15	186-1510	2	++Screw
16	186-0613	3	*Bolt
17	186-1635	1	*Switch, Relay - Safety (Includes Bolt, and Holder)
18	186-1629	1	*Bolt
19	186-0614	1	*Holder
20	186-0615	3	*Bolt
21	186-1663	1	*Terminal Assembly
22	186-0618	4	*Plate
23	186-0480	4	*Brush
24	186-0619	1	*Holder, Brush
25	186-0620	1	*Bracket
26	186-0621	4	*Spring, Brush
27	186-0482	1	*Bearing
28	186-0610	1	*Washer, Seal
29	186-1633	1	*Screw
30	186-0625	2	*Washer
31	186-0626	2	*Bolt
32	186-0628	2	*Washer
33	186-1509	2	*Bolt
34	186-0630	1	*Ring, Clip
35	186-0631	1	*Stopper, Pinion

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
36	186-0479	1	*Clutch Assembly, Running - Over
37	186-0632	1	*Bracket, Center (Includes Oil Seal)
38	186-0633	1	*Seal, Oil
39	186-0634	1	*Shaft Assembly (Includes Ball Bearing)
40	186-0477	1	*Bearing, Ball
41	186-0054	1	*Washer
42	186-0055	2	*Washer
43	186-0637	1	*Washer, Insulate
44	186-0639	1	*Bracket, Center
45	186-0641	4	*Screw, Dish
46	186-0029	6	*Bolt
47	186-0643	1	*Bracket, Front (Includes Bearing)
48	186-0483	1	*Bearing
49	186-0478	1	*Bearing, Ball
50	186-0644	1	*Armature
51	186-0645	1	*Washer
52	186-0646	2	*Washer
53	186-0647	1	*Coil, Field
54	186-0481	1	*Seal Assembly (Not Illustrated)
55	186-1764	1	Motor Assembly, Starting (Includes Parts Marked *)
56	186-1503	1	Gasket
57	186-1501	3	Bolt
58	416-0871	1	Cable, Battery (33")
59	416-0619	1	Cable, Battery (18")
60	416-0672	1	Cable, Battery (29")
61	338-1951	1	Harness, Wiring - Engine
62	718-1053	1	Screw, Cap - Hex Head (M10 x 1.5 x 20mm)
63	850-2010	1	Washer, Lock (M10)
64	856-0010	1	Washer, Lock - EIT (M10)
65	186-0600	1	++Screw

* Parts included in 186-1764 Starting Motor Assembly.
+ Parts included in 186-0476 Magnetic Switch Assembly.

 186-2095

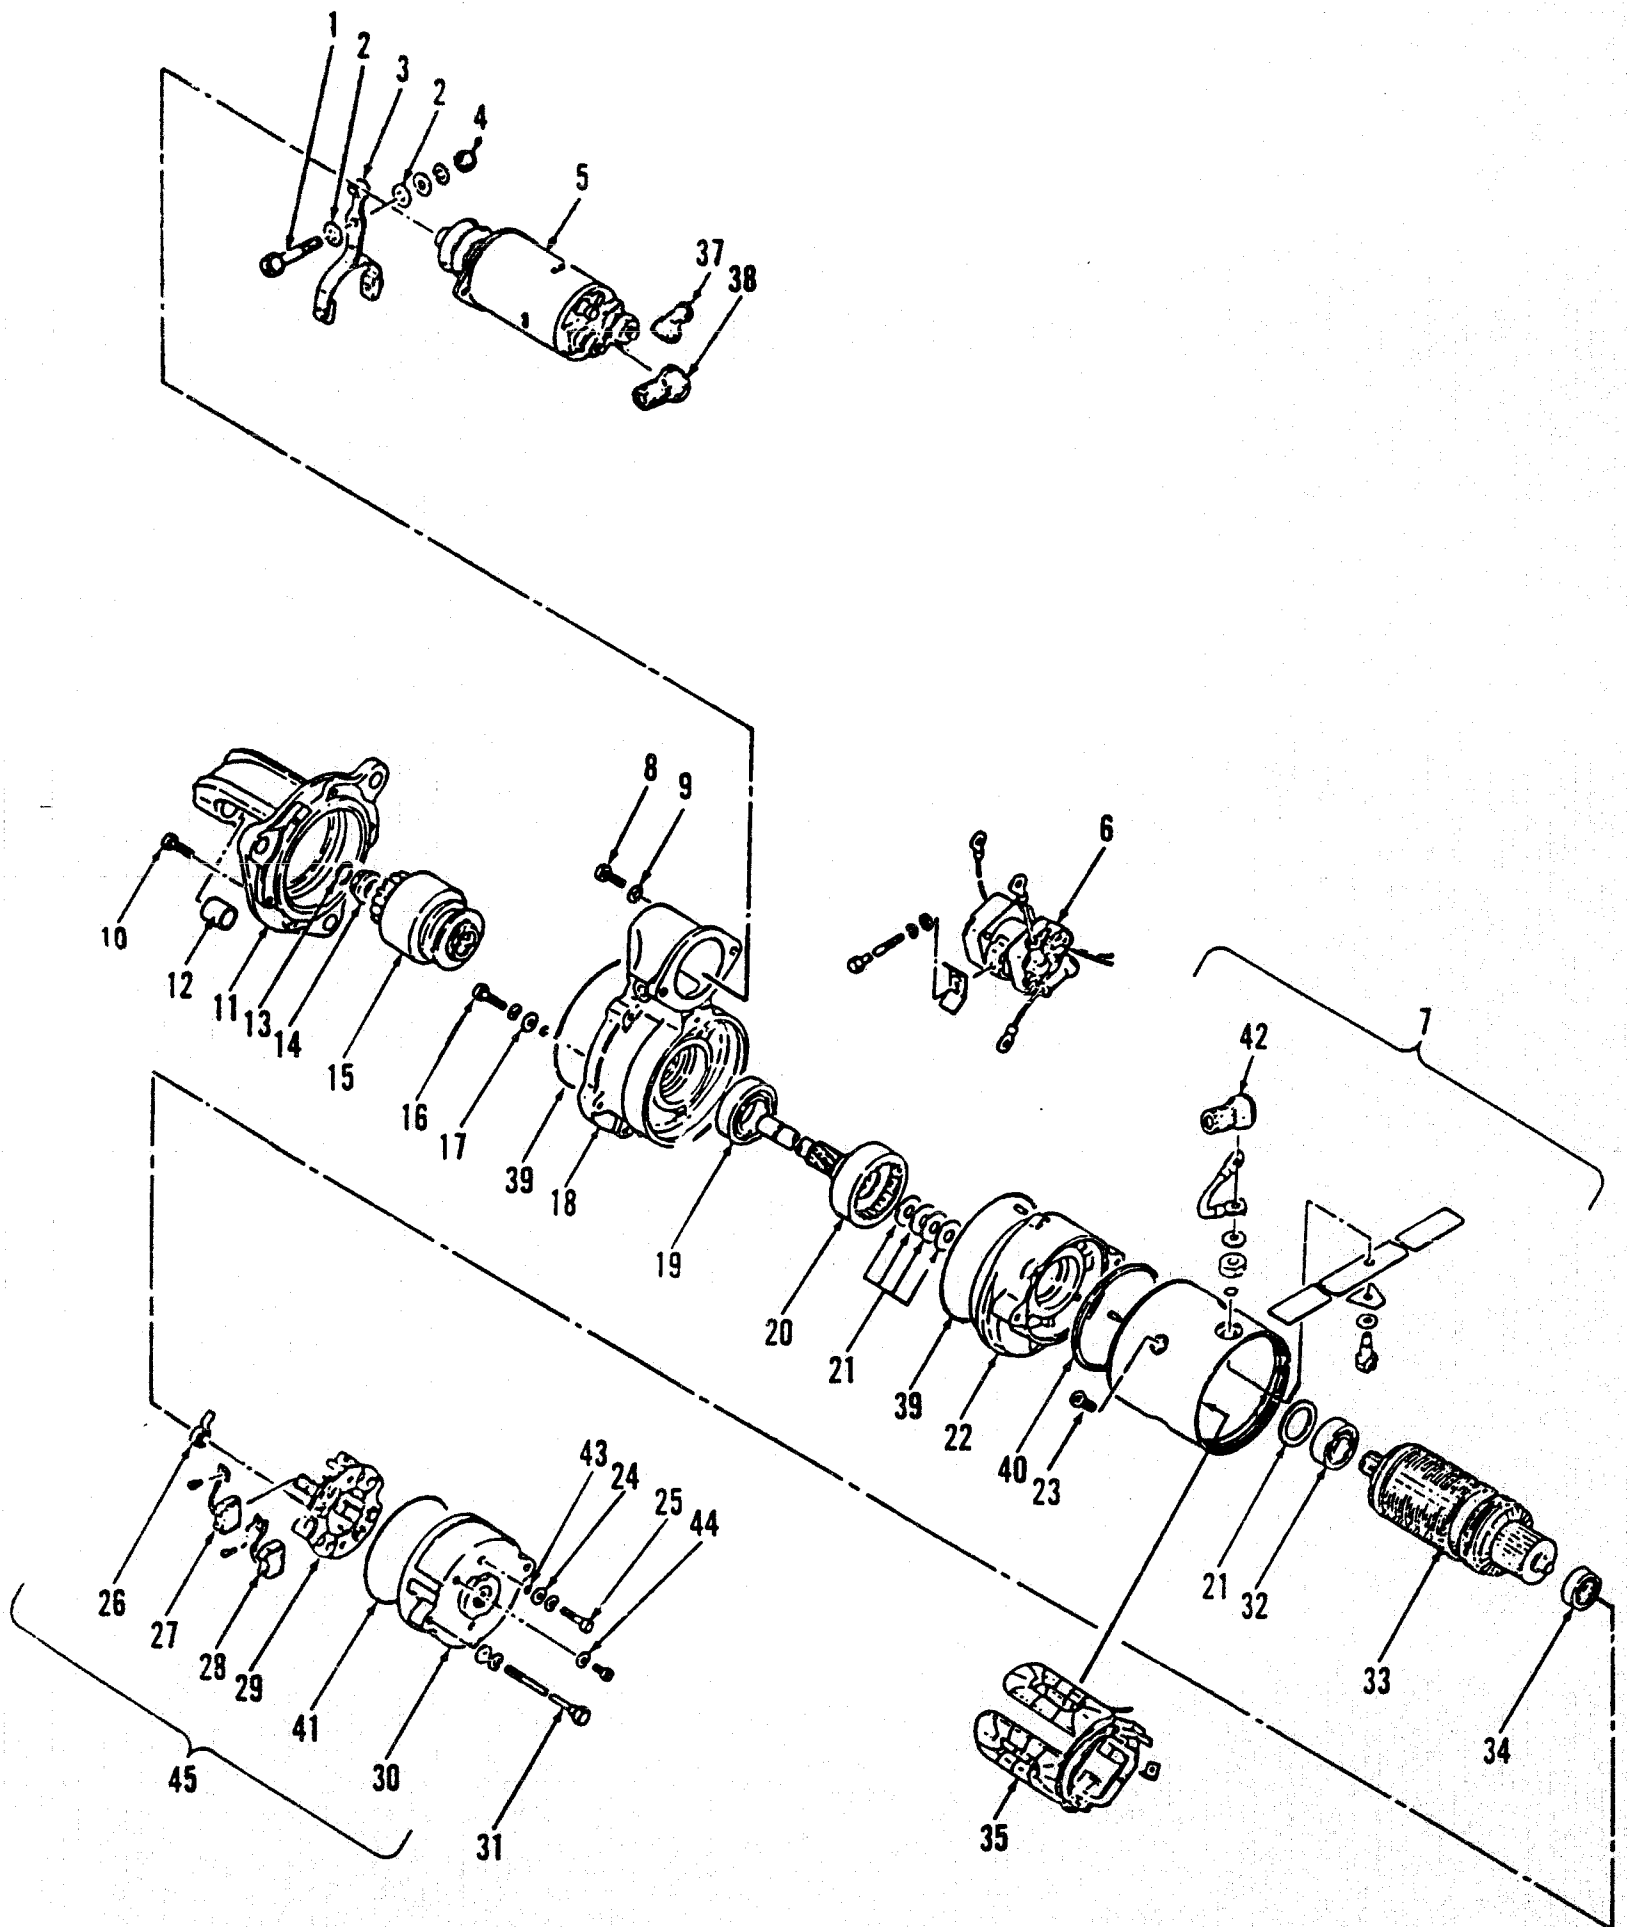


186-2095

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	186-0047	1	Pin, Lever - Threaded
2	186-0030	2	Seal
3	186-2128	1	Lever, Shift
4	186-0599	1	Nut, Hex
5	186-0476	1	Solenoid
6	186-0475	1	Switch
7	186-2129	1	Terminal Assembly (Does Not Include Rubber Cap)
8	186-0027	2	Bolt, Hex Head
9	186-0665	1	Washer, Lock - Spring
10	186-0941	6	Bolt, Hex Head
11	186-2130	1	Housing, Front
12	186-0075	1	Bushing, Sleeve
13	186-0666	1	Ring, Retaining
14	186-0667	1	Stop, Pinon
15	186-0944	1	Clutch
16	186-0668	3	Bolt, Hex Head
17	186-0628	3	Washer, Flat
18	186-2131	1	Bracket, Center
19	186-2135	1	Bearing, Ball
20	186-2133	1	Shaft
21	186-2141	1	Washer Set, Thrust
22	186-0672	1	Bracket, Center
23	186-0028	4	Screw, Flat Head

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
24	186-0625	2	Washer, Flat
25	186-0626	2	Bolt, Hex Head
26	186-0053	4	Spring
27	186-0051	2	Brush
28	186-0675	2	Brush
29	186-0020	1	Holder, Brush
30	186-0077	1	Housing, Rear
31	186-0021	2	Bolt, Hex Head
32	186-2138	1	Bearing, Ball
33	186-2137	1	Armature
34	186-2139	1	Bearing, Ball
35	186-0045	1	Coil, Field
36	186-2140	1	Seal Set, O-Ring (Includes Parts Marked *)
37	186-0042	1	*Cap, Rubber
38	186-0612	2	*Cap, Rubber
39	186-0036	2	*Seal, O-Ring
40	186-0682	1	*Gasket
41	186-0683	1	*Seal, O-Ring
42	186-0041	1	*Cap, Rubber
43	186-0680	2	*Seal, O-Ring
44	186-0610	1	*Seal, Washer
45	186-2136	1	Bracket Assembly, Rear (Includes Rear Housing)

* Parts included in 186-2140 O-Ring Seal Set.

 186-2096

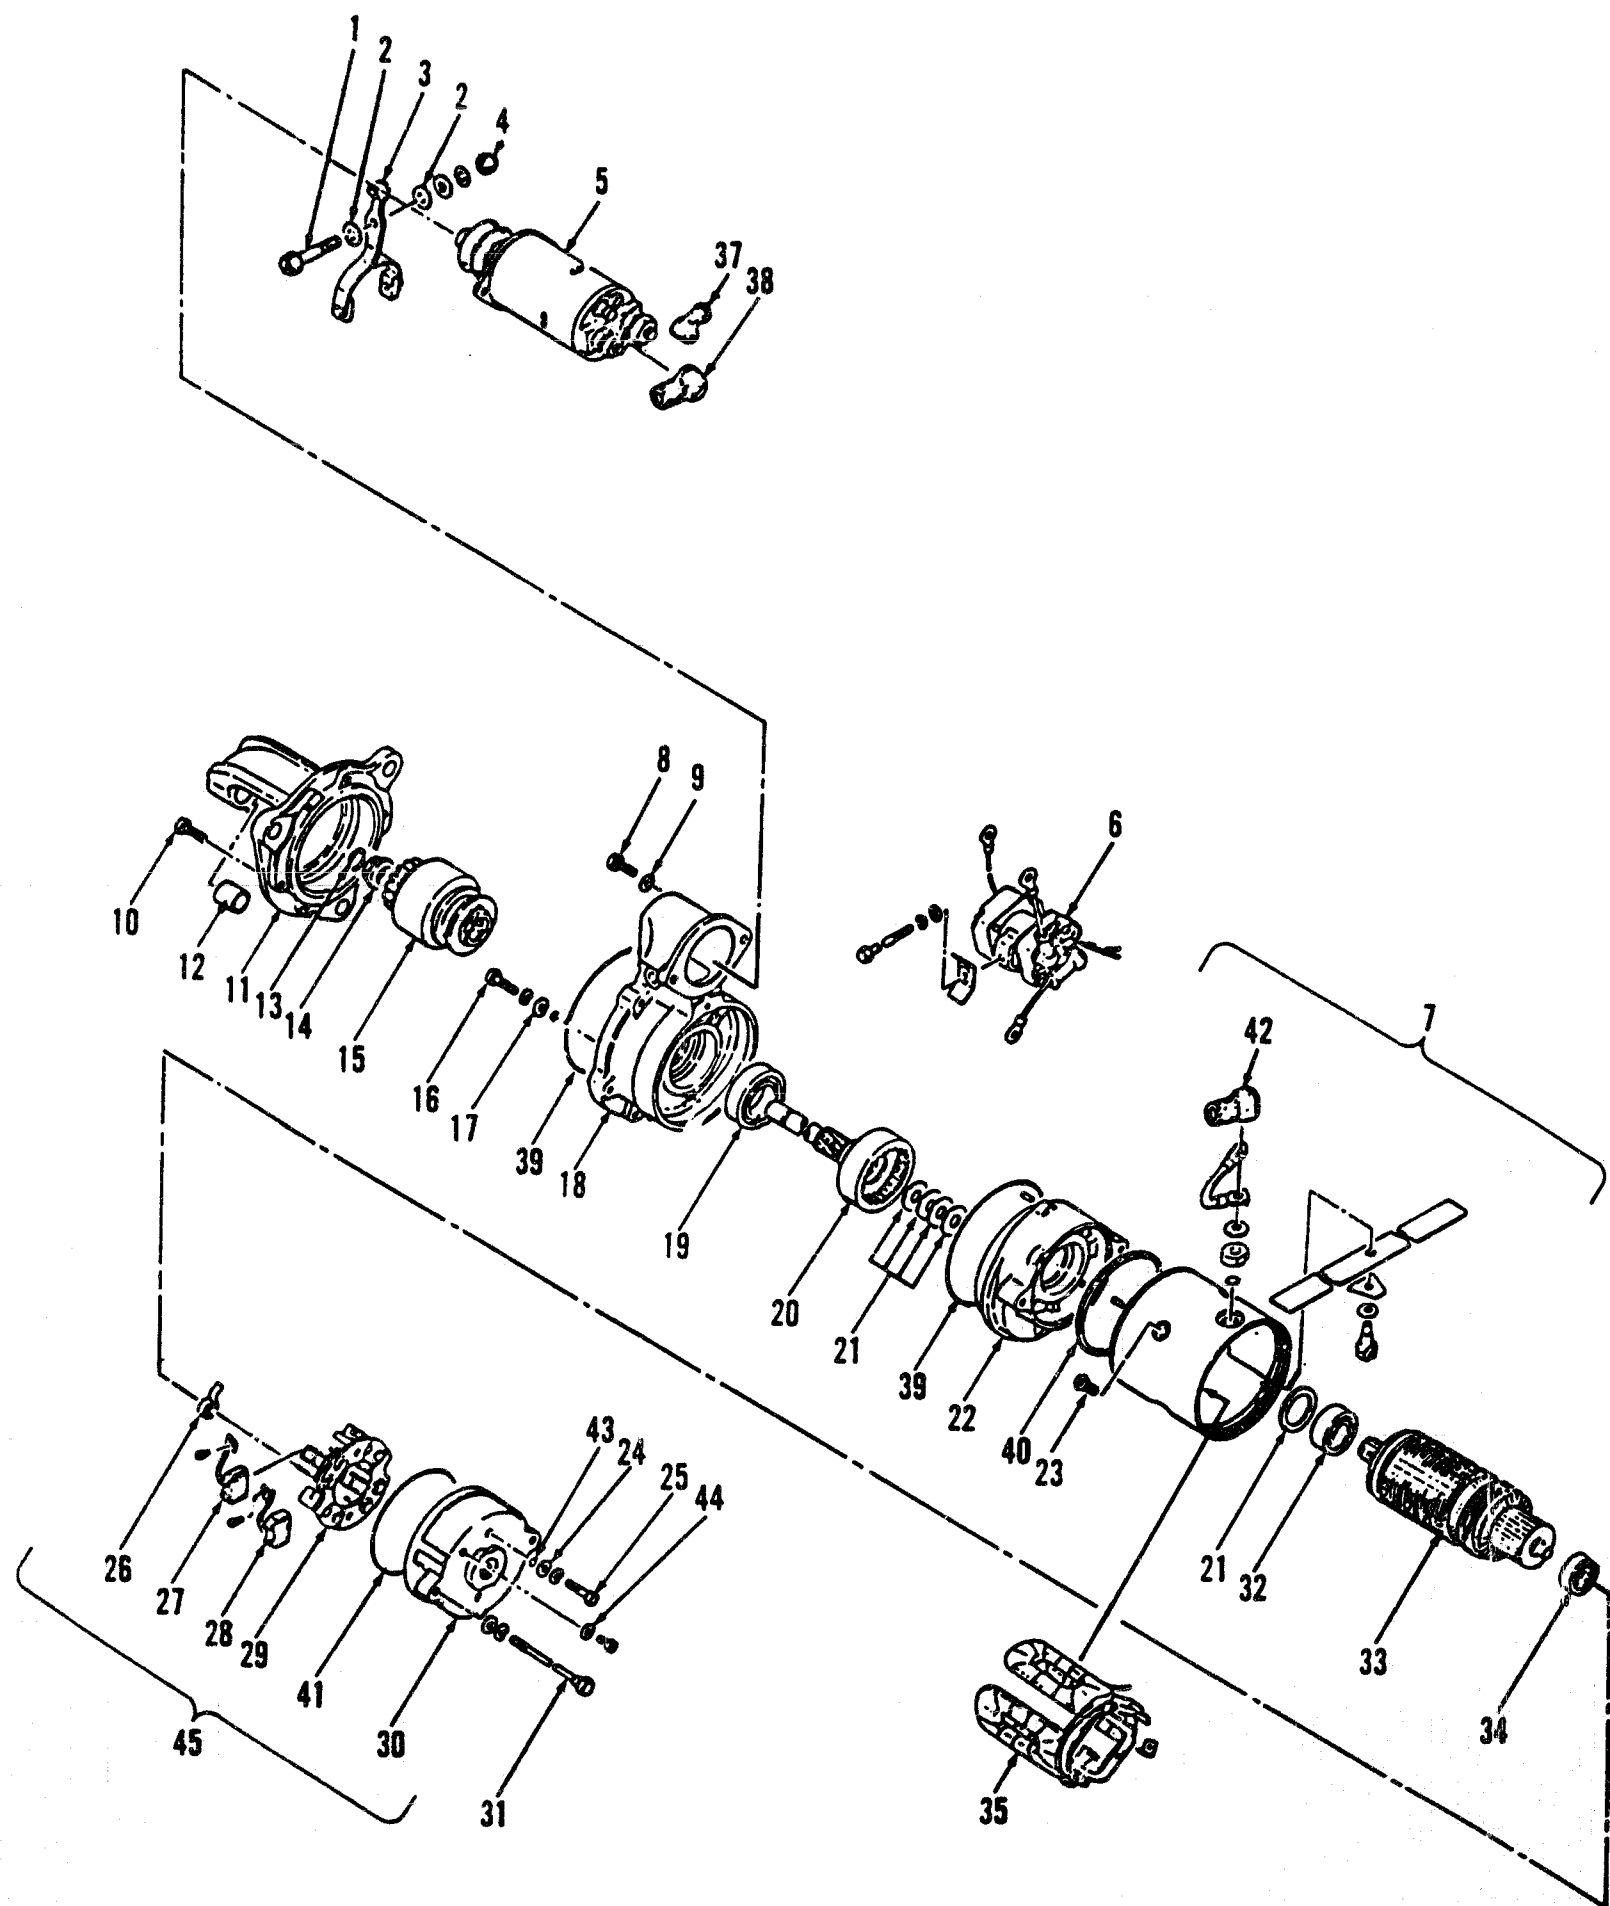

186-2096

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	186-0047	1	Pin, Lever - Threaded
2	186-0030	2	Seal
3	186-2128	1	Lever, Shift
4	186-0599	1	Nut, Hex
5	186-0476	1	Solenoid
6	186-0475	1	Switch
7	186-2129	1	Terminal Assembly (Does Not Include Rubber Cap)
8	186-0027	2	Bolt, Hex Head
9	186-0665	1	Washer, Lock - Spring
10	186-0941	6	Bolt, Hex Head
11	186-0046	1	Housing, Front
12	186-0075	1	Bushing, Sleeve
13	186-0666	1	Ring, Retaining
14	186-0667	1	Stop, Pinon
15	186-2132	1	Clutch
16	186-0668	3	Bolt, Hex Head
17	186-0628	3	Washer, Flat
18	186-2131	1	Bracket, Center
19	186-2135	1	Bearing, Ball
20	186-2134	1	Shaft
21	186-2141	1	Washer Set, Thrust
22	186-0672	1	Bracket, Center
23	186-0028	4	Screw, Flat Head

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
24	186-0625	2	Washer, Flat
25	186-0626	2	Bolt, Hex Head
26	186-0053	4	Spring
27	186-0051	2	Brush
28	186-0675	2	Brush
29	186-0020	1	Holder, Brush
30	186-0077	1	Housing, Rear
31	186-0021	2	Bolt, Hex Head
32	186-2138	1	Bearing, Ball
33	186-2137	1	Armature
34	186-2139	1	Bearing, Ball
35	186-0045	1	Coil, Field
36	186-2140	1	Seal Set, O-Ring (Includes Parts Marked *)
37	186-0042	1	*Cap, Rubber
38	186-0612	2	*Cap, Rubber
39	186-0036	2	*Seal, O-Ring
40	186-0682	1	*Gasket
41	186-0683	1	*Seal, O-Ring
42	186-0041	1	*Cap, Rubber
43	186-0680	2	*Seal, O-Ring
44	186-0610	1	*Seal, Washer
45	186-2136	1	Bracket Assembly, Rear (Includes Rear Housing)


* Parts included in 186-2140 O-Ring Seal Set.

191-0024

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0017	1	Brush Set, Service
2	191-0121	1	Clutch, Starter
3	860-0017	4	Nut, Hex - Switch Terminal Stud (3/8-16)
4	862-0002	1	Nut, Hex - Yoke Pivot (5/16-18)
5	813-0097	4	Screw, Round Head - Dust Cover (#10-32 x 3/8")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	191-0019	4	Spring, Brush - Commutator End Head
7	307-0098	1	Switch, Solenoid
8	854-0010	4	Washer, Cover - Dust
9	526-0060	1	Washer, Stud - Terminal (3/8")

 
191-0135

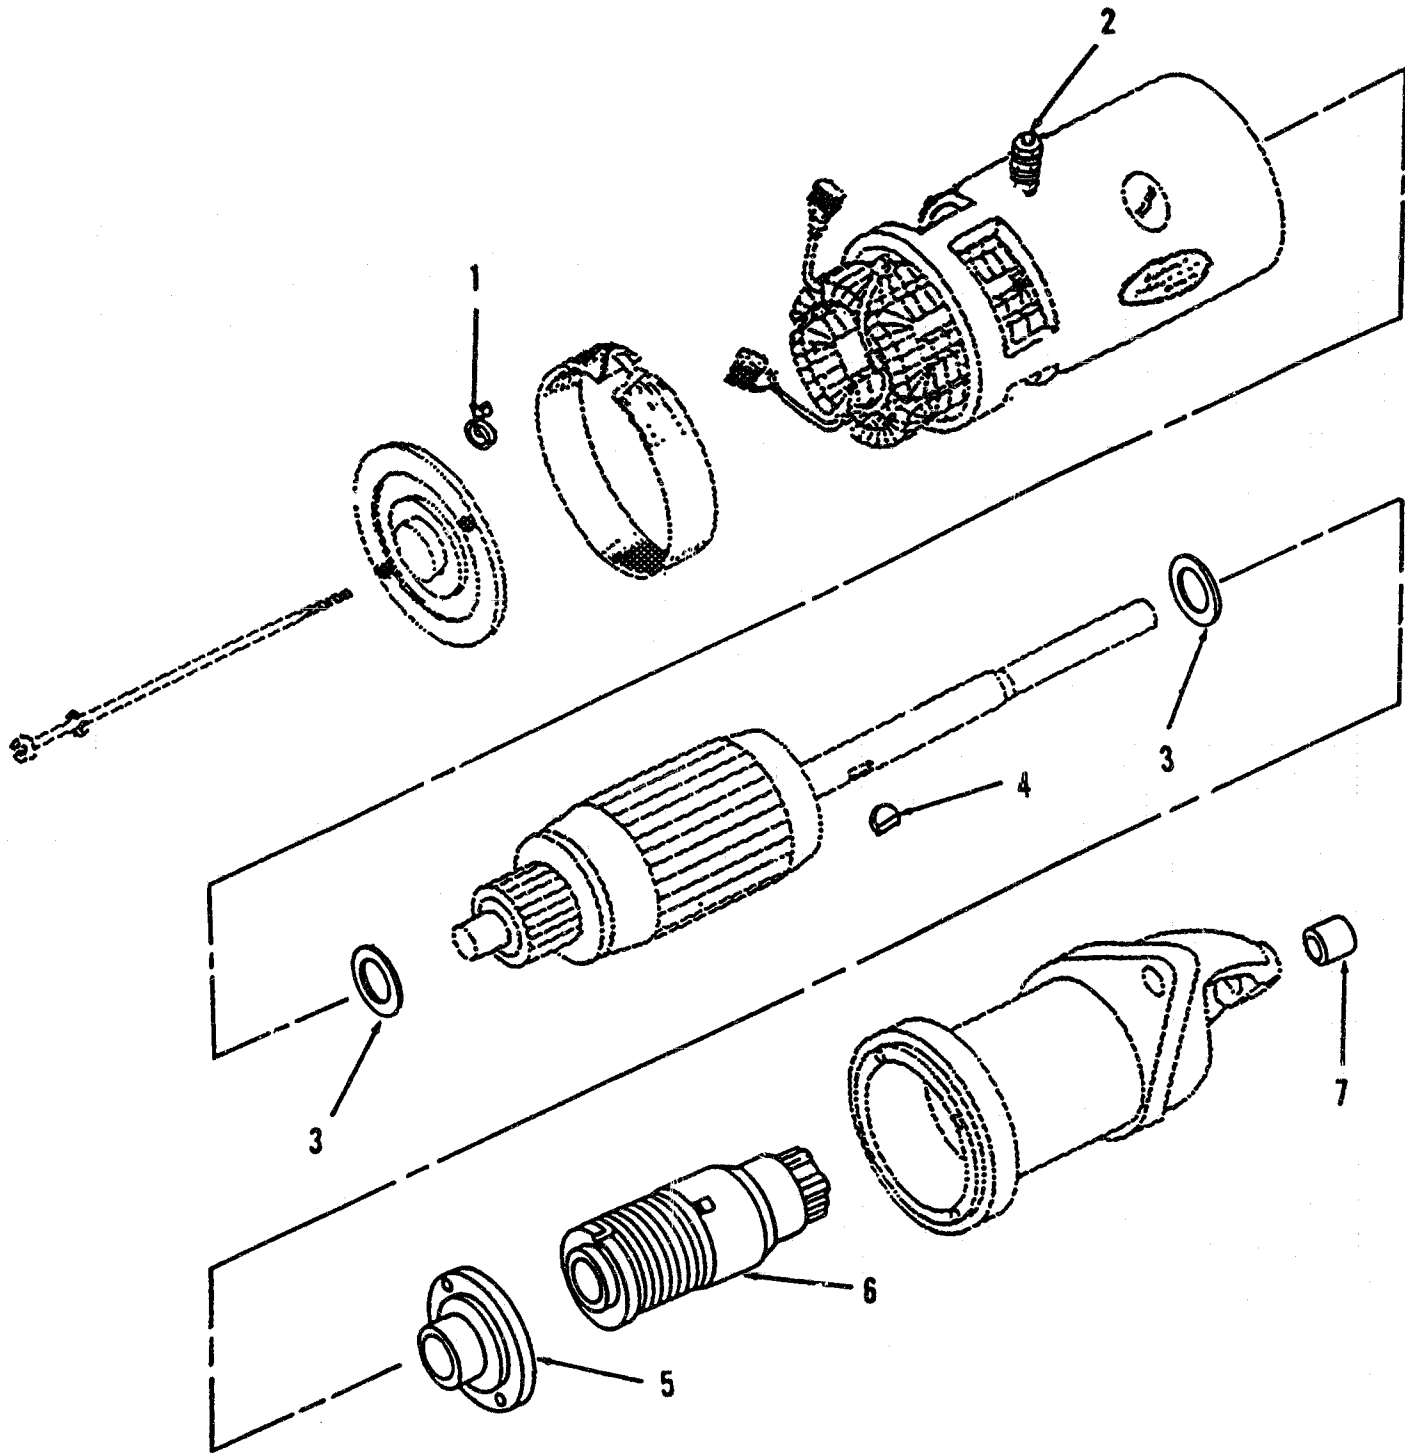

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1020	1	Spring Set, Brush
2	191-1022	1	Stud Assembly, Terminal
3	191-1021	1	Washer Set, Thrust
4	515-0094	1	Key, Woodruff (#6)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-1019	1	Bearing, Intermediate
6	191-0271	1	Drive Assembly, Inertia
7	191-0735	1	Bearing, Sleeve

 
191-0150

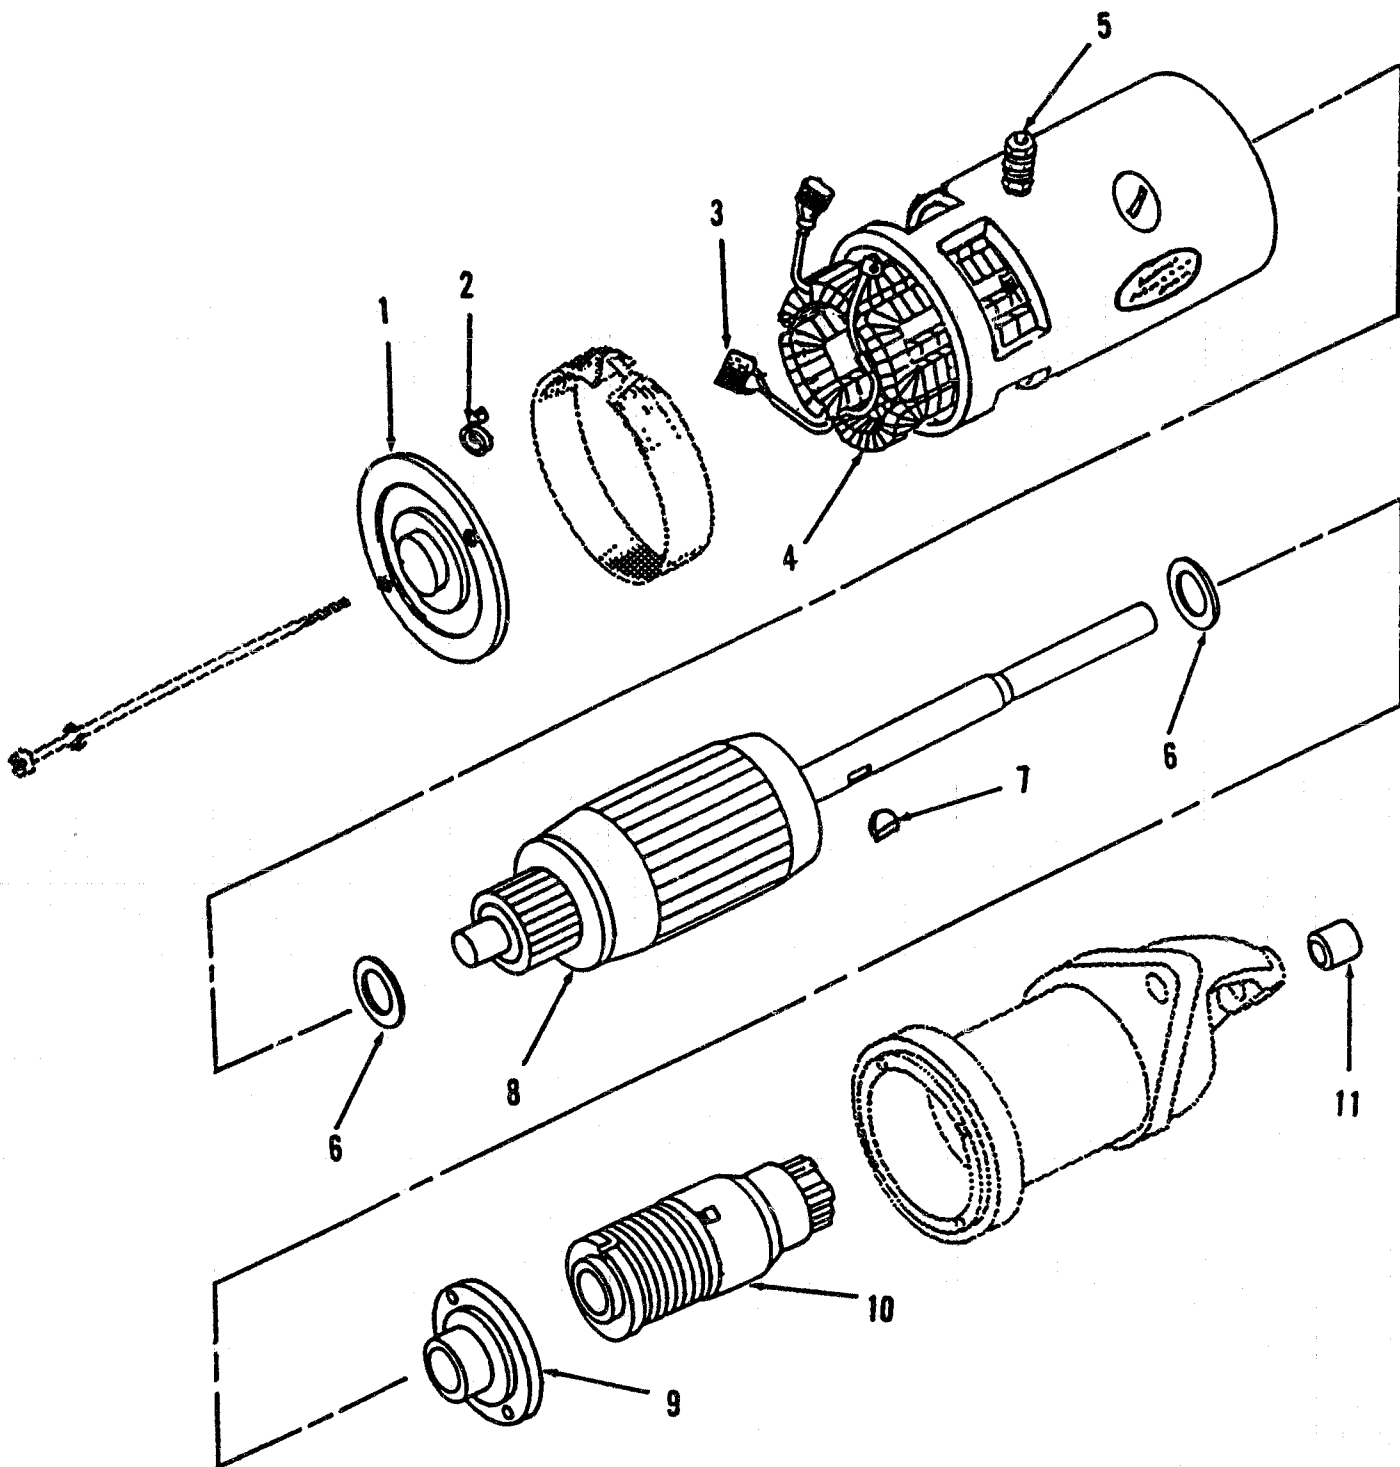

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1018	1	Cap Assembly, End (Includes Cap and Brush Holder)
2	191-1020	1	Spring Set, Brush
3	191-0513	1	Brush Set
4	191-1017	1	Coil Assembly, Field
5	191-1022	1	Stud Assembly, Terminal

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	191-1021	1	Washer Set, Thrust
7	515-0094	1	Key, Woodruff (#6)
8	191-0517	1	Armature
9	191-1019	1	Bearing, Intermediate
10	191-0271	1	Drive Assembly, Inertia
11	191-0735	1	Bearing, Sleeve

 191-0198

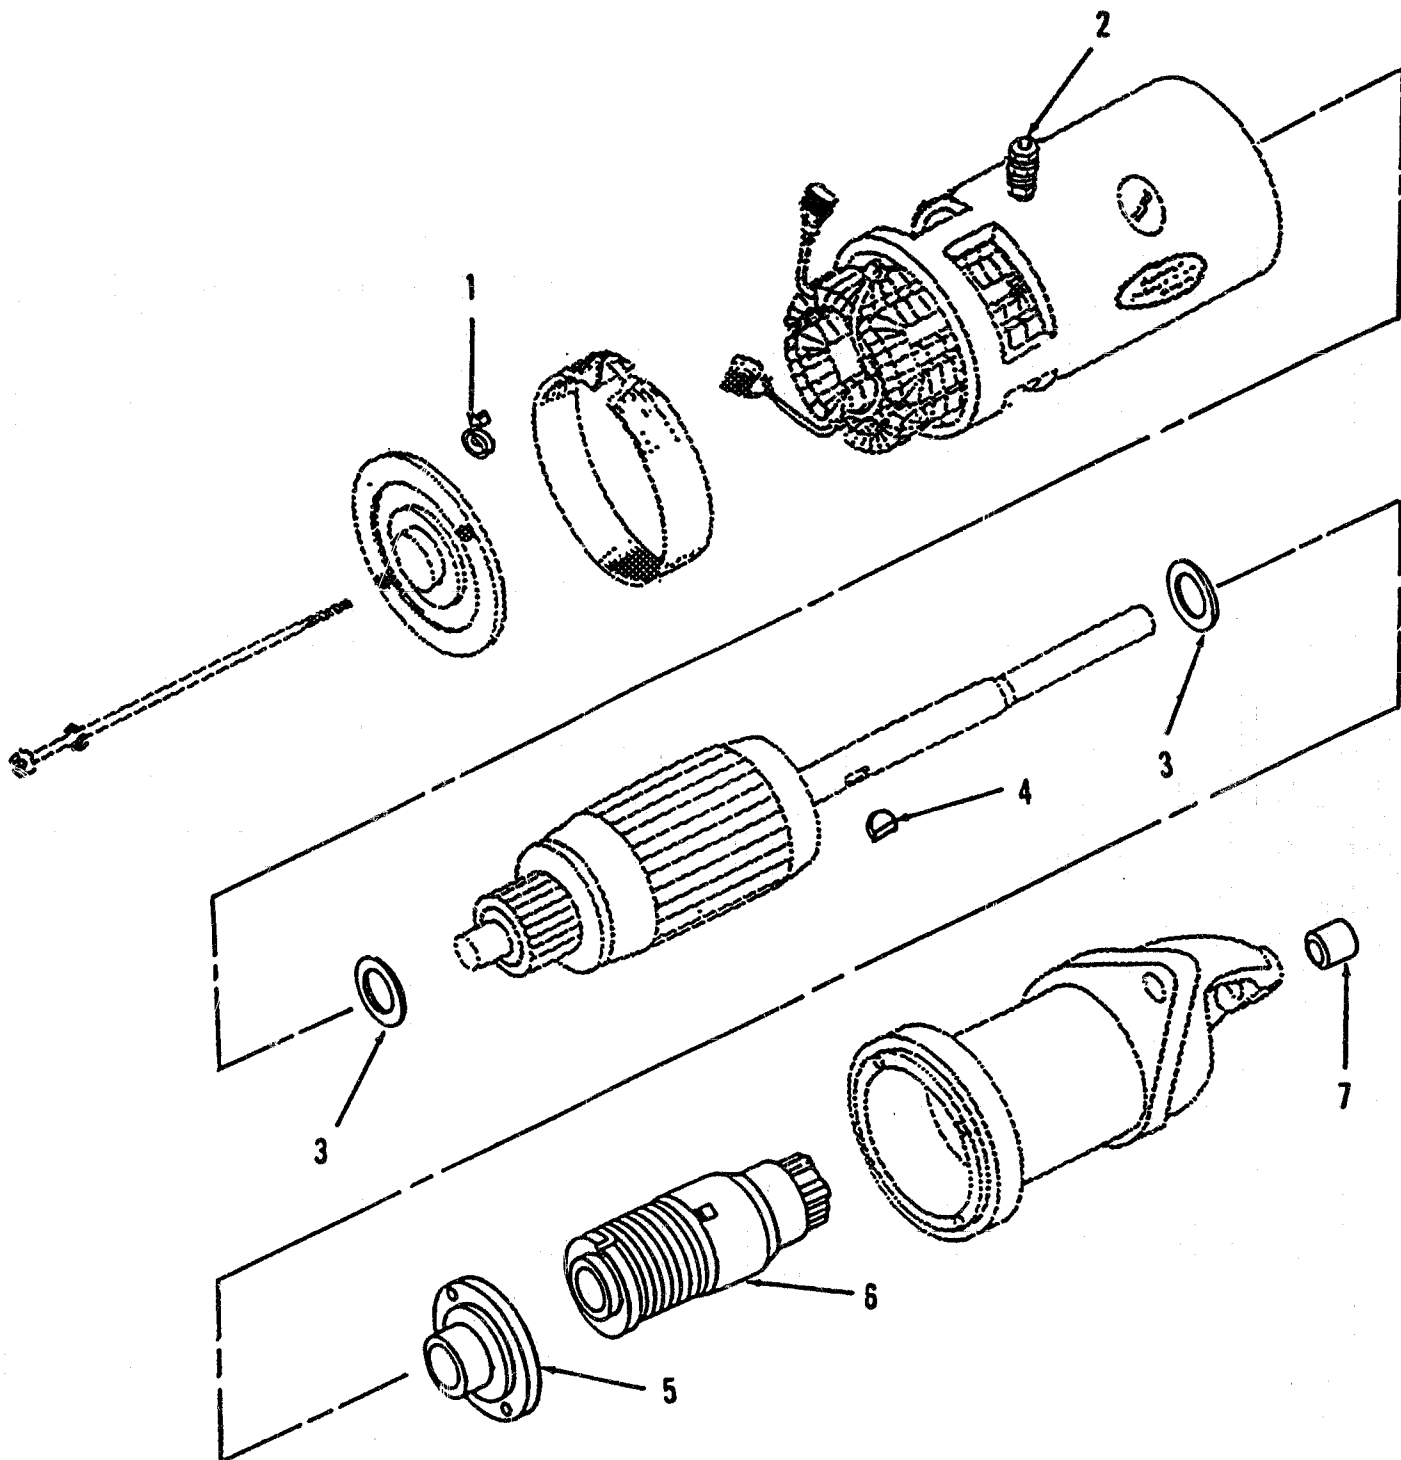

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1020	1	Spring Set, Brush
2	191-1022	1	Stud Assembly, Terminal
3	191-1021	1	Washer Set, Thrust
4	515-0094	1	Key, Woodruff (#6)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-1019	1	Bearing, Intermediate
6	191-0271	1	Drive Assembly, Inertia
7	191-0735	1	Bearing, Sleeve

191-0217

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	P16-279	1	*Armature	7	P58-59	1	*Frame & Field Assembly
2	MZ-240	1	*Band, Cover	8	P19-115	1	*Head Assembly, End - Brush
3	P36-415	1	*Bearing Assembly,	9	P21-187	1	*Housing, Pinion
4	191-0735	1	Bearing, End - Drive	10	P50-101	4	*Spring, Brush
5	P17-64	1	*Brush Set	11	191-1021	1	Washer Pkg, Thrust - Armature
6	P59-145	1	*Drive Assembly				

* Part Numbers Listed are Prestolite

191-0232

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1931788	1	*Coil, Field	5	1931773	4	*Holder, Brush
2	1933879	1	*Stud, Terminal	6	1935316	4	*Spring, Brush
3	1932890	1	*Drive Assembly	7	1119778	1	*Switch, Solenoid
4	1906987	4	*Brush	8	809763	2	*Bolt, Thru

* Part Numbers Listed are Delco-Remy

191-0237

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1917587	1	*Coil, Field - Upper	6	810226	4	*Holder, Brush
2	1917590	1	*Coil, Field - Lower	7	1935316	4	*Spring, Brush
3	1848837	1	*Stud, Terminal	8	1119797	1	*Switch, Solenoid
4	1940134	1	*Drive Assembly	9	1887034	2	*Bolt, Thru
5	1886643	4	*Brush				

* Part Numbers Listed are Delco-Remy

191-0256

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1937612	2	*Coil, Field - Left/Right	4	1906909	8	*Brush
2	1119805	1	*Switch, Solenoid	5	1861785	8	*Spring, Brush
3	1907171	1	*Pinion	6	1909521	4	*Holder, Brush

* Part Numbers Listed are Delco-Remy

191-0257

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1934499	1	*Coil, Field	5	1931773	4	*Holder, Brush
2	1933879	1	*Stud, Terminal	6	1935316	4	*Spring, Brush
3	1932605	1	*Drive Assembly	7	1118055	1	*Switch, Solenoid
4	1906958	4	*Brush	8	1911196	2	*Bolt, Thru

* Part Numbers Listed are Delco-Remy

191-0258

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1931788	1	*Coil, Field	5	1931773	4	*Holder, Brush
2	1933879	1	*Stud, Terminal	6	1855685	4	*Spring, Brush
3	1935992	1	*Drive Assembly	7	1119935	1	*Switch, Solenoid
4	1906958	4	*Brush	8	1931812	2	*Bolt, Thru

* Part Numbers Listed are Delco-Remy

191-0272

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1911610	1	*Stud, Terminal	5	810226	4	*Holder, Brush
2	1936790	1	*Coil, Field	6	1947743	1	*Drive Assembly
3	828448	4	*Brush	7	1118112	1	*Switch, Solenoid
4	813521	4	*Spring, Brush	8	809053	2	*Bolt, Thru

* Part Numbers Listed are Delco-Remy

191-0283

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1945350	1	*Coil, Field	6	1119935	1	*Switch, Solenoid
2	1945626	1	*Stud, Terminal	7	1946220	1	*Drive Assembly
3	1906987	4	*Brush	8	1931812	2	*Bolt, Thru
4	1945620	4	*Spring, Brush				
5			*Holder, Brush				
	1926617	2	Ground				
	1926618	2	Insulated				

* Part Numbers Listed are Delco-Remy

191-0292

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1906945	4	*Brush	5	1928696	1	*Coil, Field
2	1926617	2	*Holder, Brush - Ground	6	1948307	1	*Drive Assembly
3	1926618	2	*Holder, Brush - Insulator	7	1119780	1	*Switch, Solenoid
4	1926622	2	*Spring, Brush				

* Part Numbers Listed are Delco-Remy

191-0294

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1945496	1	*Coil, Field	4	1906986	8	*Brush
2	1119853	1	*Switch, Solenoid	5	1945521	8	*Spring, Brush
3	1949450	1	*Drive Assembly	6	1909521	4	*Holder, Brush

* Part Numbers Listed are Delco-Remy

191-0295

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1945350	1	*Coil, Field
2	1945626	1	*Stud, Terminal
3	1951180	1	*Drive Assembly
4	1906987	4	*Brush
5	1926617	2	*Holder, Brush - Ground

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	1926618	2	*Holder, Brush - Insulated
7	1945620	2	*Spring, Brush
8	1119833	1	*Switch, Solenoid
9	1931812	2	*Bolt, Thru

* Part Numbers Listed are Delco-Remy

191-0313

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0525	1	Drive Assembly
2	MDY-1005BS	1	*Coil, Field
3	MZ-19	4	*Spring, Brush
4	191-0433	1	Switch, Solenoid

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-0434	1	Brush Set, Service
6	MEC-20	2	*Bolt, Thru
7	191-0469	1	Armature

* Part Numbers Listed are Prestolite

191-0314

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0458	1	Drive Assembly
2	MDY-1005BS	1	*Coil, Field
3	MZ-19	4	*Spring, Brush
4	191-0433	1	Switch, Solenoid

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-0434	1	Brush Set, Service
6	MEC-20	2	*Bolt, Thru
7	191-0469	1	Armature

* Part Numbers Listed are Prestolite


191-0322

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0517	1	Armature
2	MZ-24A	1	*Band, Cover
3	MAW-2129	1	*Bearing Assembly, Intermediate
4	191-0735	1	Bearing, End - Drive
5	191-0513	1	Brush Set
6	MBG-3005S	1	*Coil Assembly, Field

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	191-0271	1	Drive Assembly
8	MZ-2002Q	1	*Head Assembly, End - Brush
9	P21-156	1	*Housing, Pinion
10	MZ-19S	1	*Spring Set, Brush
11	191-1021	1	Washer Set, Thrust - Armature

* Part Numbers Listed are Prestolite

 191-0324

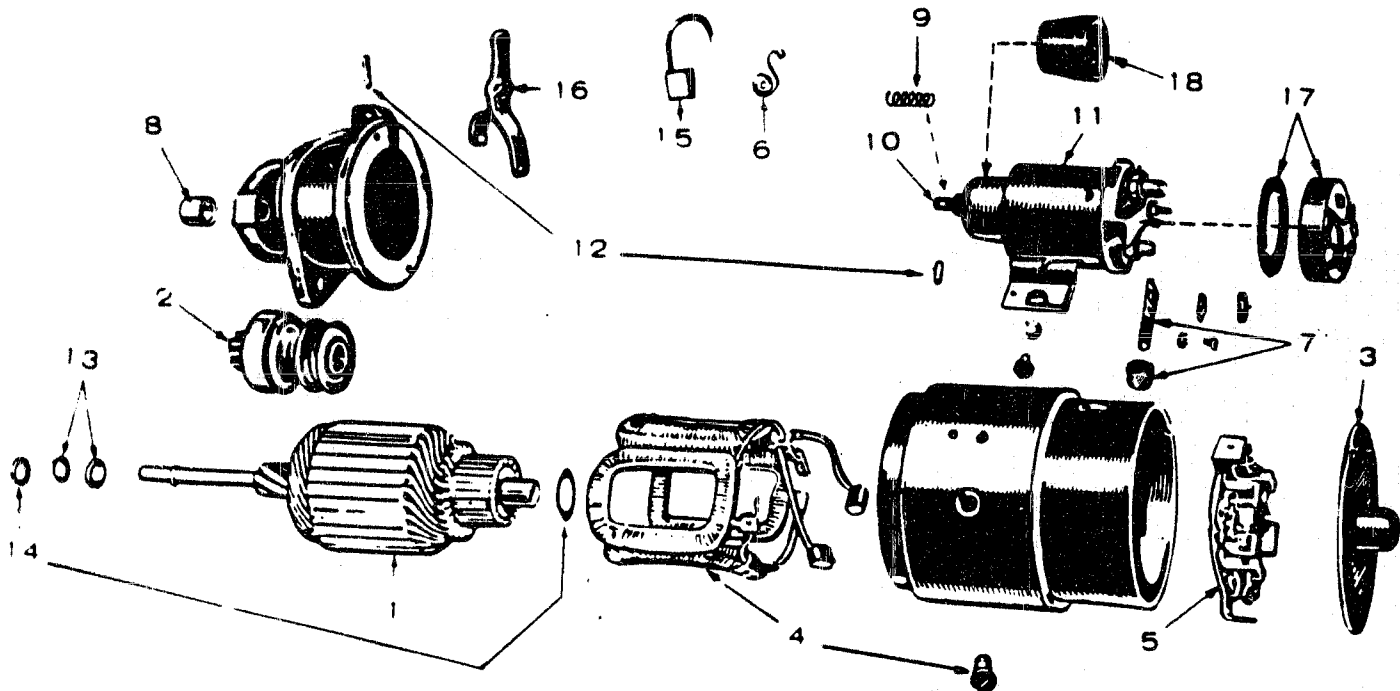

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0712	1	Armature	11	191-0433	1	Switch, Solenoid
2	191-0432	1	Clutch	12	191-1029	1	Yoke Package
3	191-1023	1	Head Assembly, Commutator End	13	191-1030	1	Stop and Lock Ring Package
4	191-1024	1	Coil Package, Field	14	191-1031	1	Thrust Washer Package
5	191-1025	1	Plate Assembly, Brush	15	191-0434	1	Brush Set, Service
6	191-1020	1	Spring Set, Brush	16	191-1032	1	Yoke
7	191-1263	1	Connector Package	17	191-1569	1	Switch Cover and Stud Package
8	191-0497	1	Bearing, Drive End - Bronze	18	191-1134	1	Boot, Rubber
9	191-1027	1	Spring, Plunger				
10	191-1028	1	Core Assembly, Moving (Includes Rubber Boot)				


191-0339

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	MDL-3130A	1	*Drive Assembly
2	MEC-20A	2	*Bolt, Thru
3	MEX-2001	1	*Coil, Field
4	MZ-19C	4	*Spring, Brush

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	MEX-2133	1	*Armature
6	SAL-4001T	1	*Switch, Solenoid
7	MDZ-2012BS	1	*Brush Set, Service

* Part Numbers Listed are Prestolite

 
191-0416

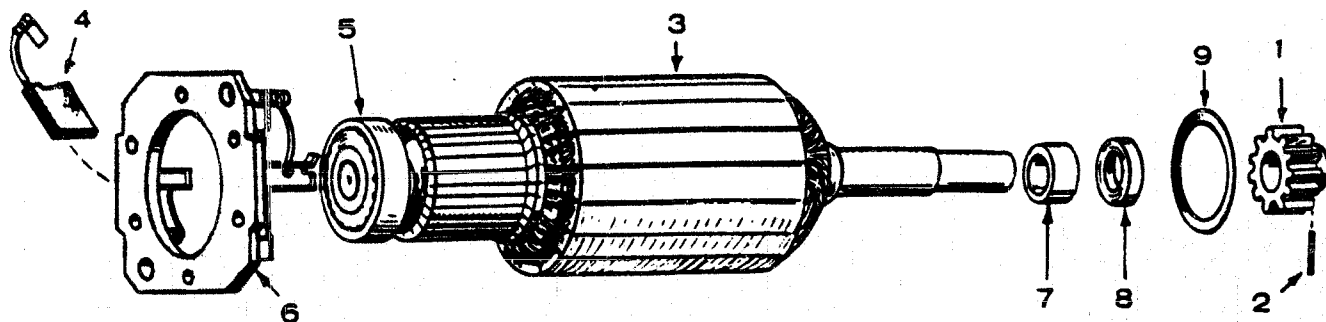

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0336	1	Gear, Pinion
2	516-0150	1	Pin, Gear - Pinion
3	191-0418	1	Armature
4	191-0419	2	Brush
5	191-0420	1	Bearing, Ball - Armature

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	191-0421	1	Holder, Brush
7	191-0329	1	Bushing, Shaft - Armature
8	509-0092	1	Seal, Oil - Armature Shaft
9	509-0093	1	Seal, "O" Ring

 191-0427

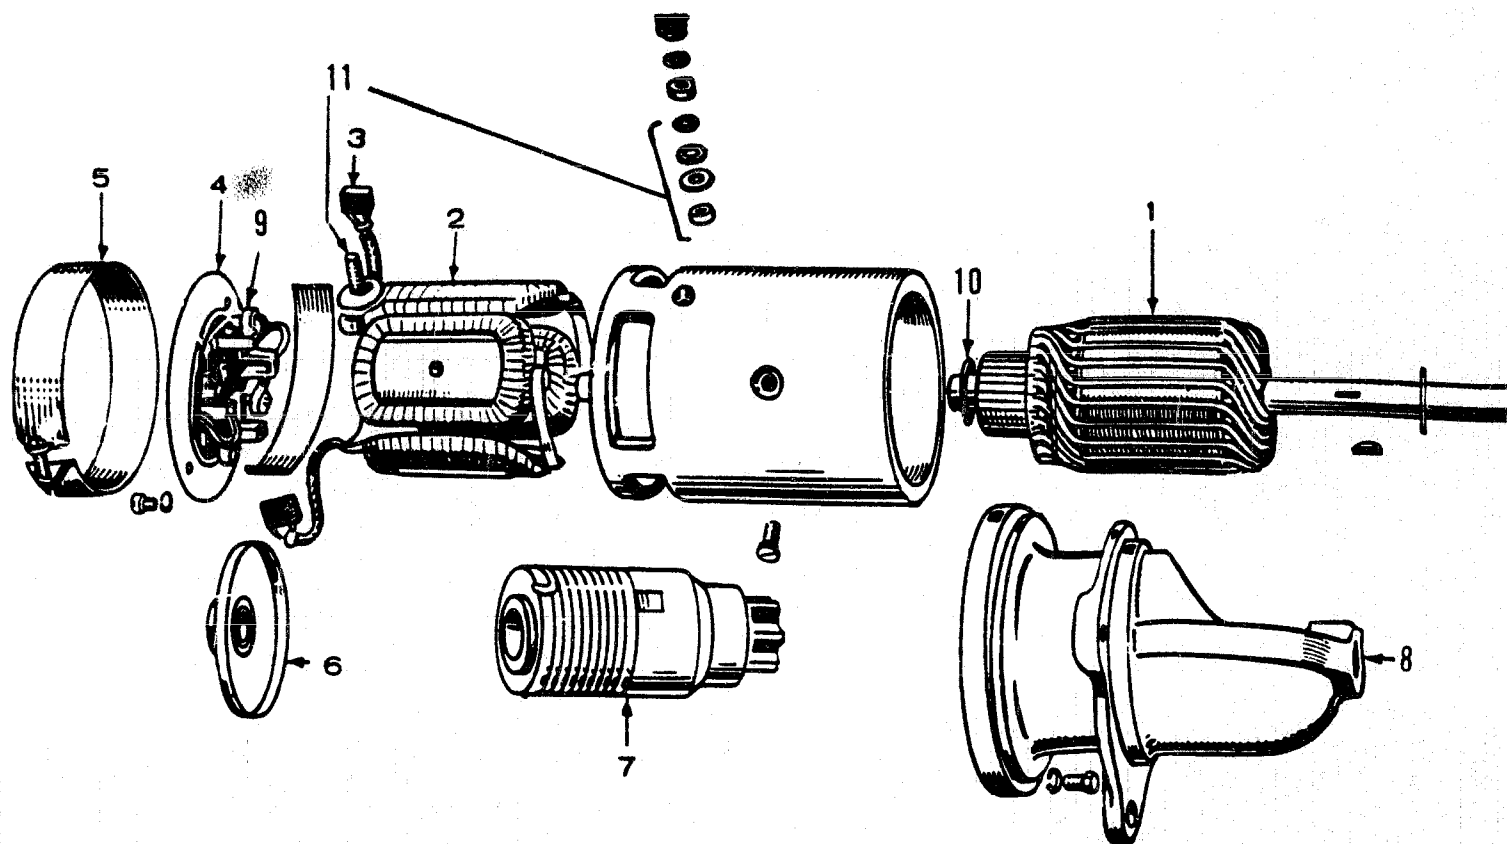

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0517	1	Armature
2	191-1017	1	Coil Assembly, Field
3	191-0513	1	Brush Set
4	191-1018	1	Head Assembly, Commutator
5	NFS	1	Band, Cover
6	191-1019	1	Bearing Assembly, Intermediate

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	191-0271	1	Drive Assembly, Bendix
8	191-0735	1	Bearing, End - Drive
9	191-1020	1	Spring Set, Brush
10	191-1021	1	Washer Set, Thrust - Armature
11	191-1022	1	Stud Package, Terminal

191-0428

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1955951	1	*Coil Assembly, Field
2	1946434	4	*Brush
3	1926622	4	*Spring, Brush
4	1926617	2	*Holder, Brush - Ground

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	1926618	2	*Holder, Brush - Insulated
6	1940134	1	*Drive Assembly
7	1955957	2	*Bolt, Thru
8	1118806	1	*Switch, Solenoid

* Part Numbers Listed are Delco-Remy

191-0429

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	P16-190	1	*Armature
2	P24-28P	1	*Bearing, End - Drive
3	P36-97P	2	*Bolt, Thru
4	P17-52	1	*Brush Set
5	P18-28	1	*Drive Assembly
6	P36-93	1	*Core Assembly, Moving
7	P58-37	1	*Frame & Field Assembly
8	P19-93	1	*Head Assembly, End - Brush
9	P21-178	1	*Housing, Pinion
10	P36-45P	1	*Pin, Link
11	P36-25P	1	*Pin, Yoke
12	P36-96	1	*Plate Assembly, Brush

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
13	P37-12P	1	*Plug, Spring
14	P36-27P	1	*Ring, Snap
15	P50-101P	4	*Spring, Brush
16	P50-102P	1	*Spring, Plunger
17	P15-80	1	*Switch, Solenoid
18			*Washer, Thrust - Comm End
	P36-35P	1	(1/32")
	P36-36P	1	(3/64")
	P36-37P	1	(1/16")
19	P36-48P	1	*Washer, Thrust - Drive End
20	P23-8	1	*Yoke

* Part Numbers Listed are Prestolite


191-0442

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1961685	1	*Coil Assembly, Field
2	1946434	4	*Brush
3	1940475	4	*Spring, Brush
4	1940477	2	*Holder, Brush - Ground

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	1926618	2	*Holder, Brush - Insulated
6	1937086	1	*Drive Assembly
7	1960025	2	*Bolt, Thru
8	1114329	1	*Switch, Solenoid


* Part Numbers Listed are Delco-Remy

 191-0443

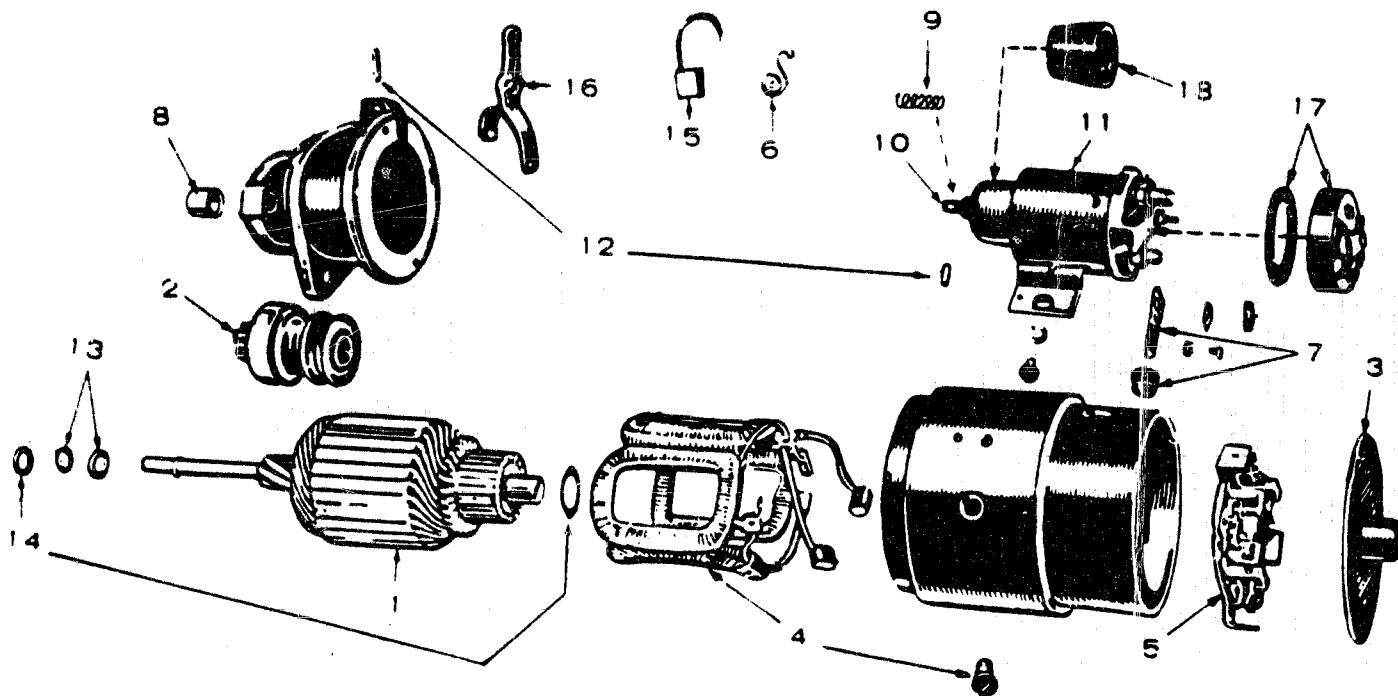

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0713	1	Armature	11	191-0715	1	Switch, Solenoid
2	191-0432	1	Clutch	12	191-1029	1	Yoke Parts Package
3	191-1023	1	Heat Assembly, Commutator End	13	191-1030	1	Stop and Lock Ring Package
4	191-1043	1	Coil Package, Field				Pinion
5	191-1042	1	Plate Assembly, Brush	14	191-1031	1	Thrust Washer Package, Armature
6	191-1020	1	Spring Set, Brush	15	191-0714	1	Brush Set, Service
7	191-1263	1	Connector Package	16	191-1032	1	Yoke
8	191-0497	1	Bearing, Bronze - Drive End	17	191-1569	1	Switch Cover and Stud Package
9	191-1027	1	Spring, Plunger	18	191-1134	1	Boot, Rubber
10	191-1028	1	Core Assembly, Moving				

 191-0453

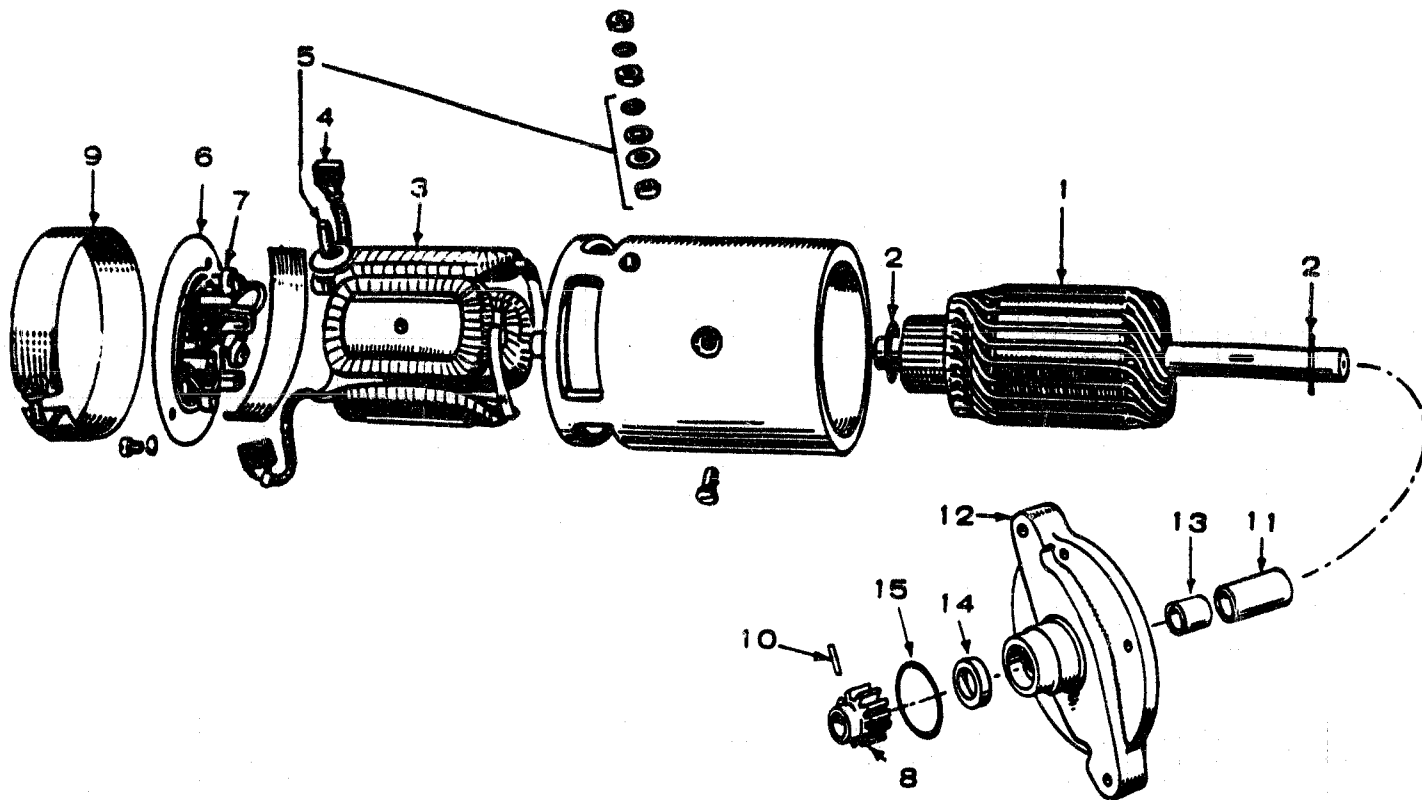

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0452	1	Armature	9	NFS	1	Band, Cover
2	191-1021	1	Washer Package, Thrust	10	516-0154	1	Pin, Dowel - Pinion Gear
3	191-1017	1	Coil Assembly, Field	11	191-0451	1	Spacer, Armature to Adapter
4	191-0513	1	Brush Set, Service	12	191-0448	1	Adapter
5	191-1022	1	Stud, Terminal	13	191-0329	1	Bushing, Adapter
6	191-1018	1	Head Assembly, Commutator End	14	509-0092	1	Seal, Oil - Armature Shaft Front
7	191-1020	1	Spring Set, Brush	15	509-0093	1	Seal, "O" Ring - Mounting
8	191-0450	1	Gear, Pinion - Starter				

191-0460

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	EBB-40A	1	*Drive Assembly	5	MZ-2023T	1	*Armature
2	MAW-2129B	1	*Bearing Assembly, Intermediate	6	MG-77A	1	*Bearing, Bronze - Pinion Hsg
3	MAW-13D	1	*Bearing, Bronze	7	MBG-2012BS	1	*Brush Set, Service
4	MA-19C	4	*Spring, Brush				


* Part Numbers Listed are Prestolite

191-0486

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1967042	1	*Coil Assembly, Field	6	1950546	2	*Holder, Brush - Insulated
2	1933879	1	*Stud, Terminal	7	1945620	2	*Spring, Brush
3	1952410	1	*Drive Assembly	8	1119896	1	*Switch, Solenoid
4	1906987	4	*Brush	9	809763	1	*Bolt, Thru
5	1940477	2	*Holder, Brush - Ground				

* Part Numbers Listed are Delco-Remy

 191-0511

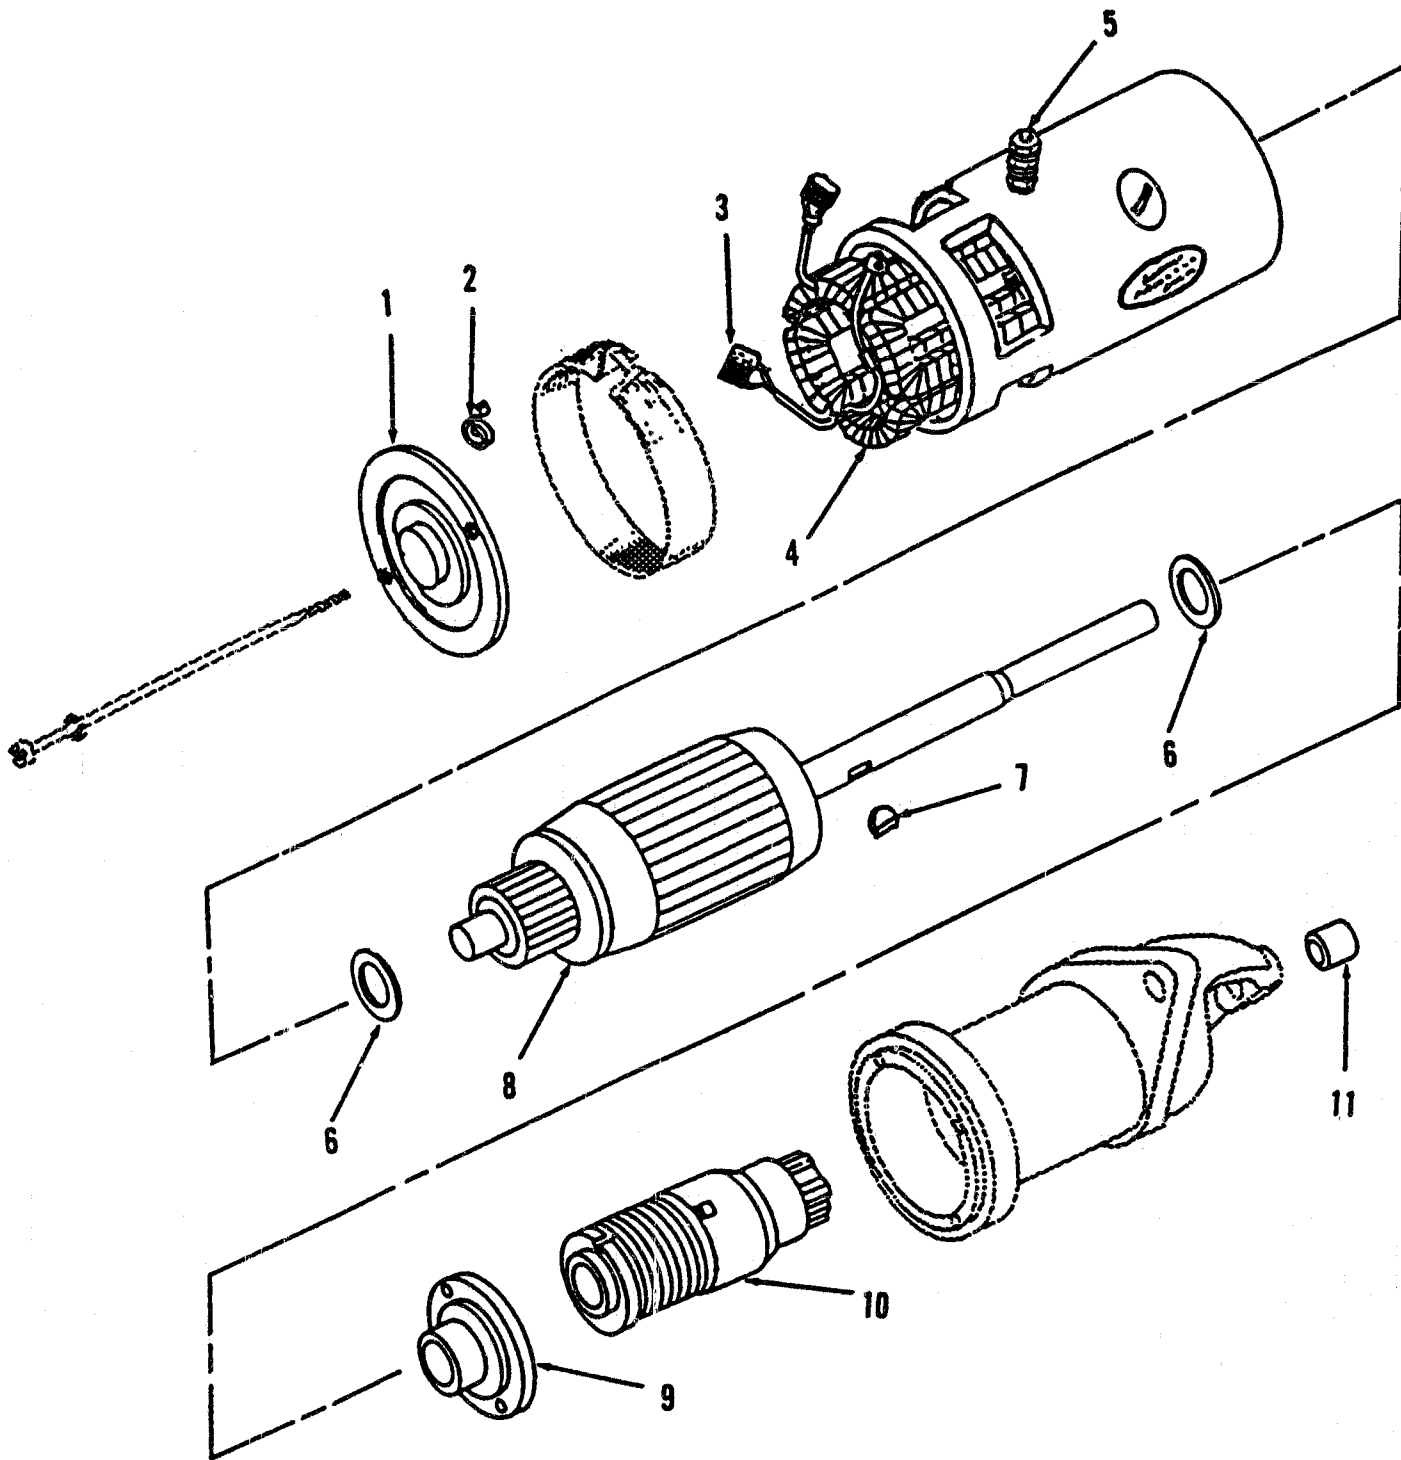


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1018	1	Cap Assembly, End (Includes Cap and Brush Holder)	6	191-1021	1	Washer Set, Thrust
2	191-1020	1	Spring Set, Brush	7	515-0094	1	Key, Woodruff (#6)
3	191-0513	1	Brush Set	8	191-0517	1	Armature
4	191-1017	1	Coil Assembly, Field	9	191-1019	1	Bearing, Intermediate
5	191-1022	1	Stud Assembly, Terminal	10	191-0271	1	Drive Assembly
				11	191-0735	1	Bearing, Sleeve

191-0515

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	P16-294	1	*Armature	7	P59-145	1	*Drive Assembly
2	MZ-24A	1	*Band, Cover	8	MZ-2002Q	1	*Head Assembly, End - Brush
3	MAW-2129	1	*Bearing Assembly, Intermediate	9	PS-1428	1	*Housing, Pinion
4	191-0735	1	Bearing, End - Drive	10	MZ-19S	1	*Spring Set, Brush
5	191-0513	1	Brush Set	11	P90-742	1	*Stud Pkg, Terminal
6	MBG-3005S	1	*Coil Assembly, Field	12	191-1021	1	Washer Set, Thrust - Armature

* Part Numbers Listed are Prestolite

 
191-0526

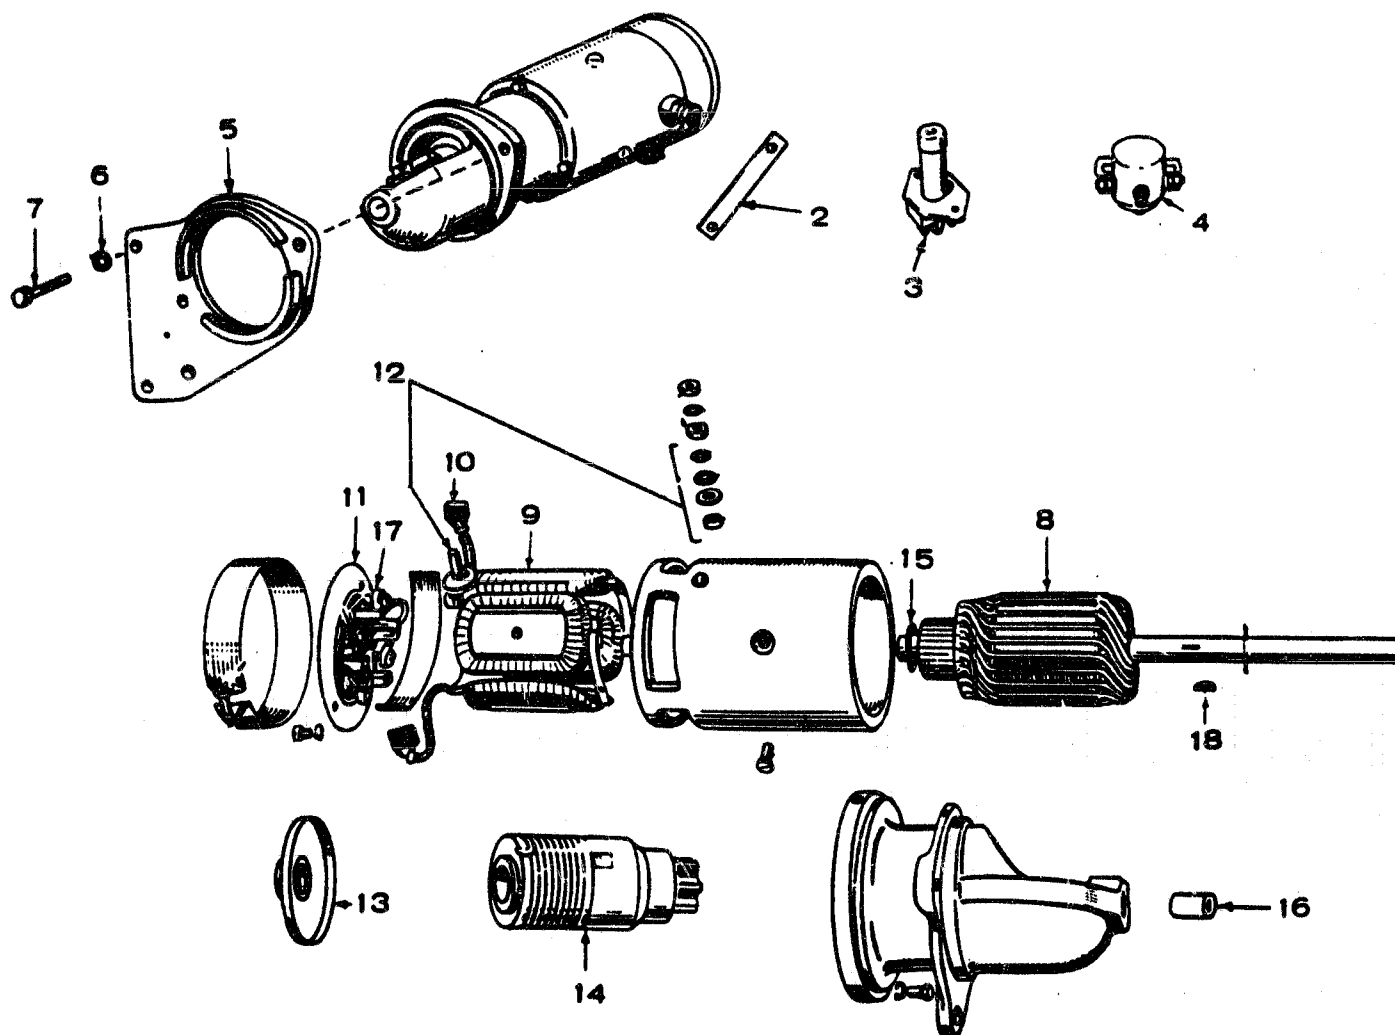

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	332-0570	1	Jumper, Starter to Switch	11	19-28	1	*Head Assembly, Commutator End
3	308-0028	1	Switch, Start	12	191-1022	1	Stud, Terminal
4	307-1046	1	Solenoid, Start	13	191-1019	1	Bearing Assembly, Intermediate
5	191-0508	1	Flange, Mounting	14	191-0271	1	Drive Assembly
6	850-0050	3	Washer, Lock - Spring (3/8")	15	191-1021	1	Washer, Thrust - Armature
7	102-0455	3	Screw, Cap - Hex Head	16	191-0735	1	Bearing, Drive End
8	16-47	1	*Armature	17	191-1020	1	Spring Set, Brush
9	20-42	1	*Coil Assembly, Field	18	515-0094	1	Key, Woodruff (#6)
10	17-33	1	*Brush Set				

* Part Numbers Listed are Prestolite

 191-0528

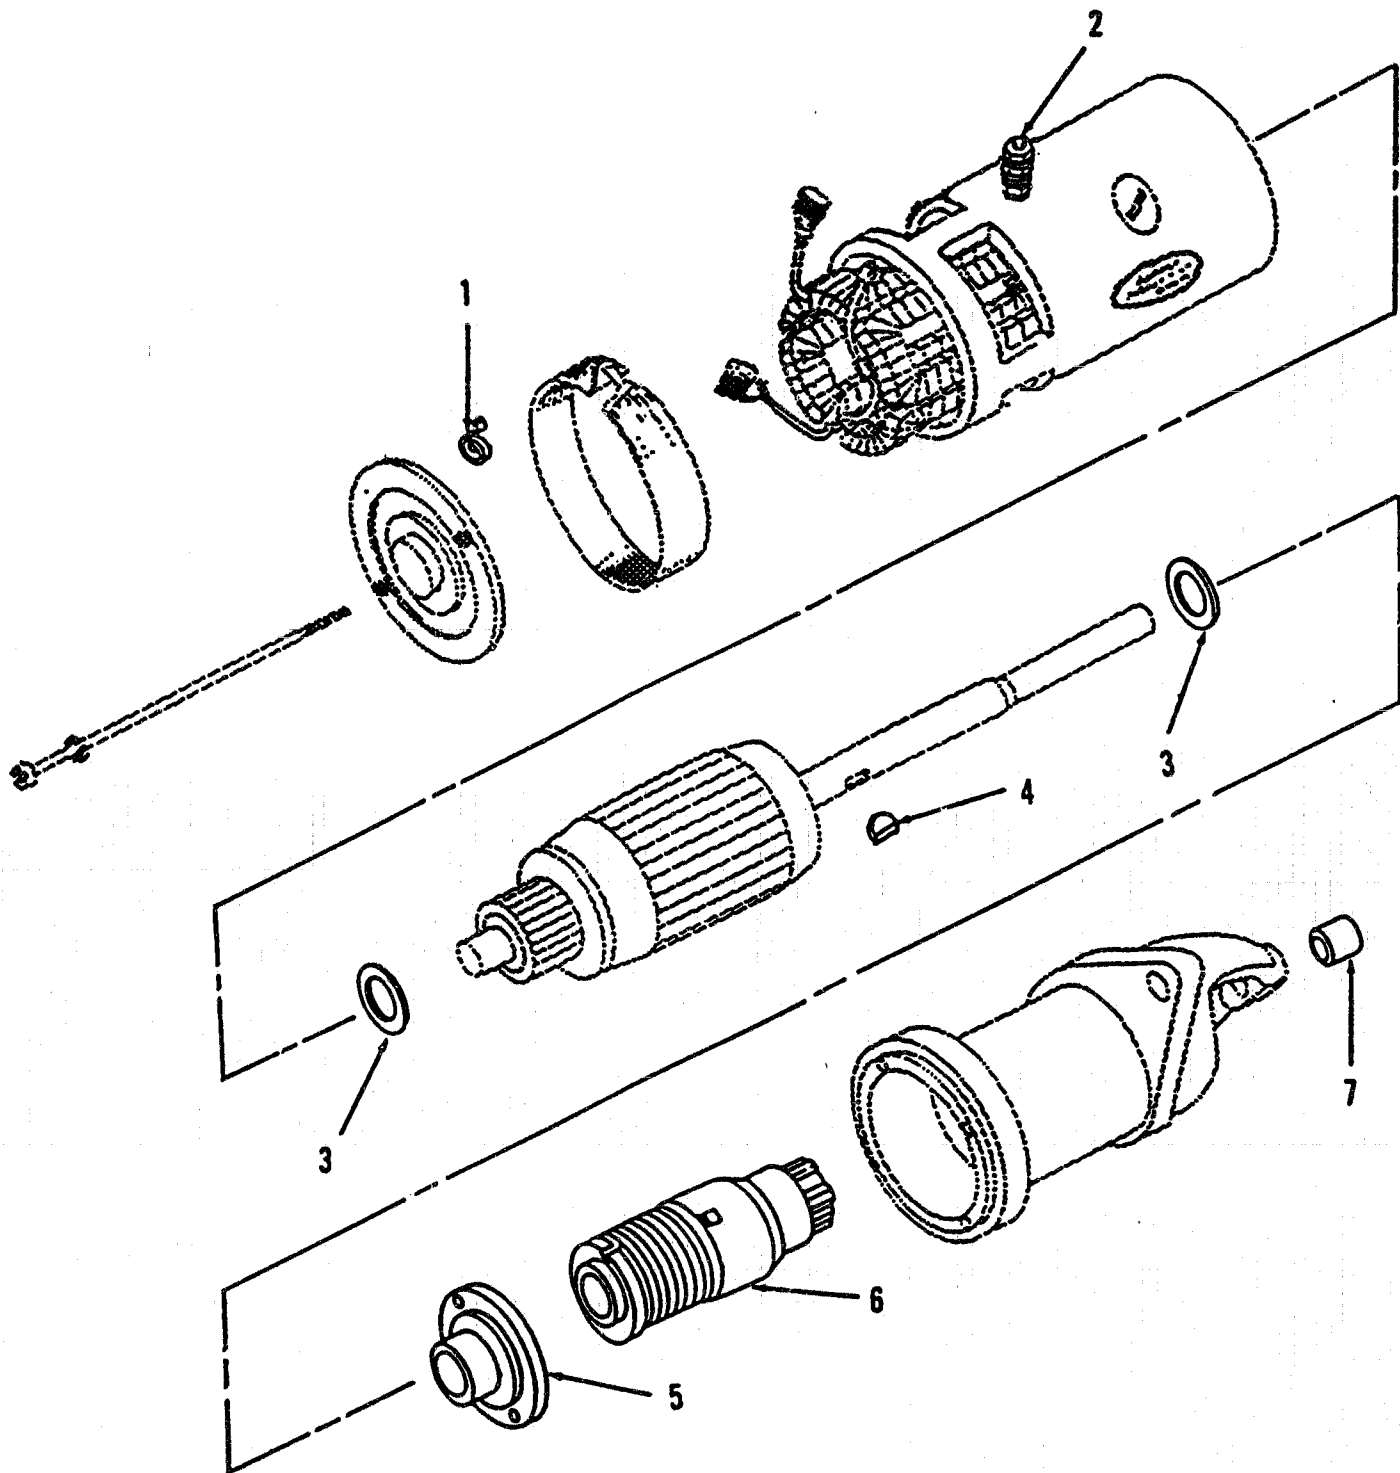

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1020	1	Spring Set, Brush
2	191-1022	1	Stud Assembly, Terminal
3	191-1021	1	Washer Set, Thrust
4	515-0094	1	Key, Woodruff (#6)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-1019	1	Bearing, Intermediate
6	191-0271	1	Drive Assembly
7	191-0735	1	Bearing, Sleeve

191-0530

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0517	1	Armature	7	191-0271	1	Drive Assembly
2	MZ-24A	1	*Band, Cover	8	MZ-2002Q	1	*Head Assembly, End - Brush
3	MAW-2129	1	*Bearing Assembly, Intermediate	9	PS-1428	1	*Housing, Pinion
4	MG-77A	1	*Bearing, End - Drive	10	MZ-19S	1	*Spring Set, Brush
5	191-0513	1	Brush Set	11	P90-742	1	*Stud Pkg, Terminal
6	MBG-3005S	1	*Coil Assembly, Field	12	P90-263	1	*Washer Pkg, Thrust - Armature

* Part Numbers Listed are Prestolite

 191-0532

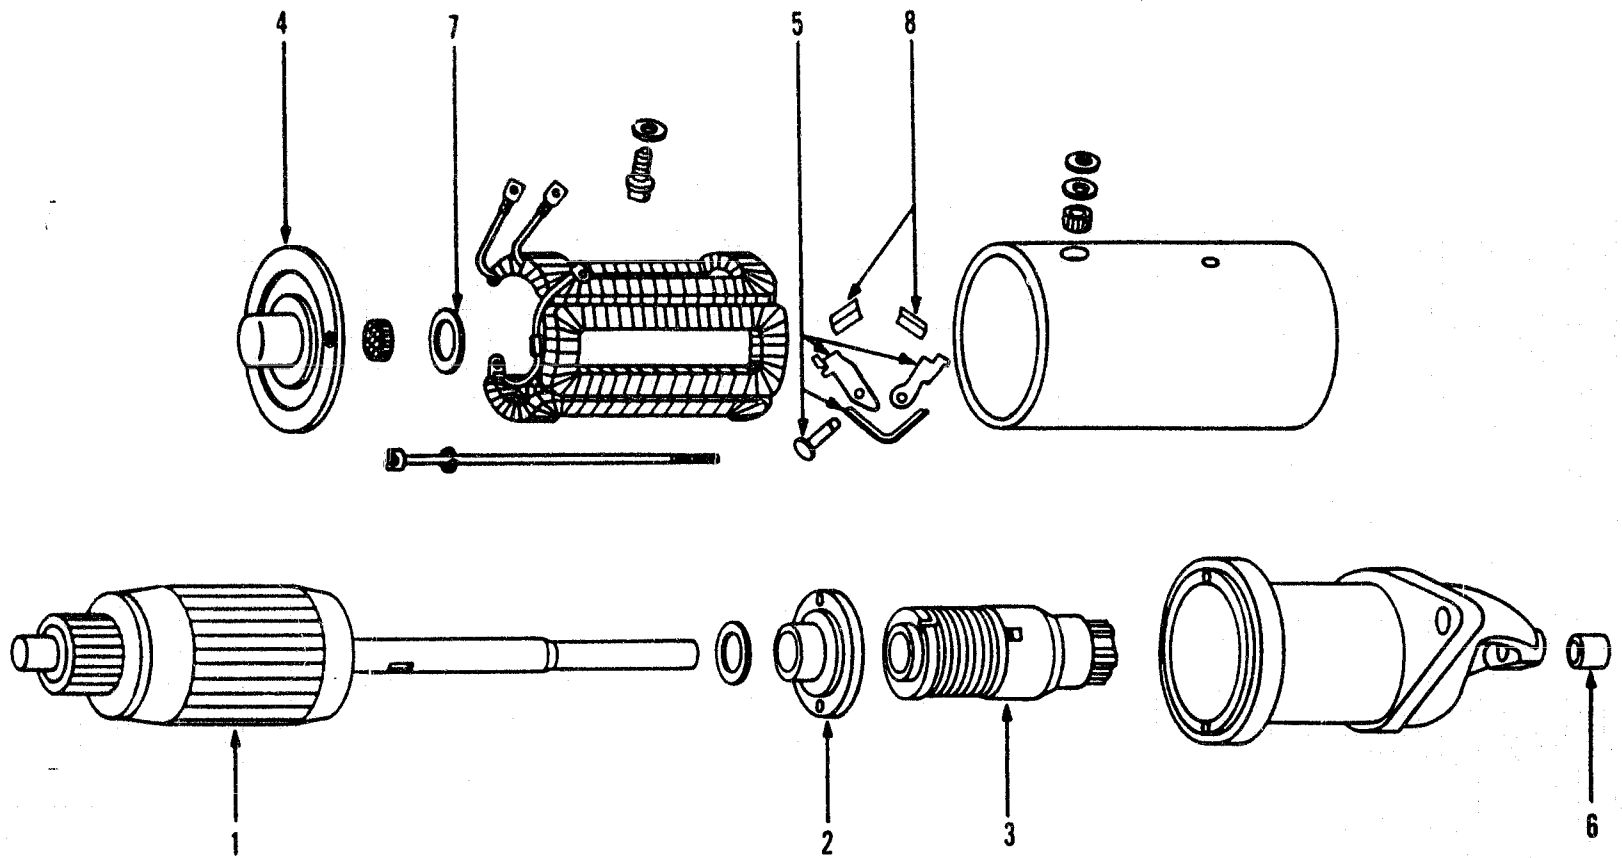

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0517	1	Armature
2	191-1019	1	Bearing Assembly, Intermediate
3	EBB-40A	1	*Drive Assembly
4	191-1018	1	Head Assembly, Commutator End

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-1020	1	Spring Set, Brush
6	191-0735	1	Bearing, Bronze - Pinion
7	191-1021	1	Washer Package, Thrust
8	191-0513	1	Brush Set, Service

* Part Numbers Listed are Prestolite

191-0560

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	MPB-3023-FT	1	*Armature	7	MPB-2001BS	1	*Frame & Field Assembly
2	MZ-24U	1	*Band, Cover	8	MPB-2002B	1	*Head Assembly, End - Brush
3	191-1019	1	Bearing Assembly, Intermediate	9	PS-1428A	1	*Housing, Pinion
4	191-0735	1	Bearing, End - Drive	10	191-1020	1	Spring Set, Brush
5	MBW-2012CS	1	*Brush Set	11	191-1021	1	Washer Set, Thrust - Armature
6	EBB-40A	1	*Drive Assembly				

* Part Numbers Listed are Prestolite

191-0568

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1961754	1	*Armature	6	1950546	2	*Holder, Brush - Insulated
2	1946386	1	*Coil Assembly, Field	7	1945620	4	*Spring, Brush
3	1877353	1	*Drive Assembly	8	1115510	1	*Switch, Solenoid
4	1946484	4	*Brush	9	1883865	2	*Bolt, Thru
5	1940477	2	*Holder, Brush - Grounded				

* Part Numbers Listed are Delco Remy

191-0605

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	MZ-2402	1	*Armature	7	MBG-1069S	1	*Head Assembly, End - Drive
2	MZ-24A	1	*Band, Cover	8	XA-1002	1	*Seal, Oil
3	MBG-2012-S	1	*Brush Set	9	MZ-19S	1	*Spring Set, Brush
4	MBG-3005S	1	*Coil Assembly, Field	10	P90-743	1	*Stud Pkg, Terminal
5	P90-767	1	*Gear & Parts Pkg	11	P90-542	1	*Washer Set, Thrust - Armature
6	MZ-2002Q	1	*Head Assembly, End - Brush				

* Part Numbers Listed are Prestolite

191-0658

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0712	1	Armature	10	MDT-1052	1	*Head Assembly, End - Brush
2	191-0497	1	Bearing, End - Drive	11	PS-1391	1	*Housing, Pinion
3	MEC-205	1	*Bolt, Thru	12	MEJ-1064	1	*Plate Assembly, Brush
4	191-0434	1	Brush Set	13	MZ-19S	1	*Spring Set, Brush
5	191-0432	1	Drive Assembly	14	SAD-27	1	*Spring, Plunger
6	MDY-2005BS	1	*Coil Assembly, Field	15	P90-83	1	*Stop & Lock Ring Pkg, Pinion
7	P90-535	1	*Connector Pkg	16	191-0433	1	Switch, Solenoid
8	SAD-1021	1	*Core Assembly, Moving	17	P90-503	1	*Washer Pkg, Thrust
9	MEO-28	1	*Cover, Yoke	18	P90-54	1	*Yoke Pkg

* Part Numbers Listed are Prestolite

191-0702

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1951959	1	*Armature
2	1951958	1	*Coil Assembly, Field
3	1952410	1	*Drive Assembly
4	1906990	4	*Brush
5	1940477	2	*Holder, Brush - Grounded

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	1950546	2	*Holder, Brush - Insulated
7	1945620	4	*Spring, Brush
8	1119896	1	*Switch, Solenoid
9	809763	2	*Bolt, Thru

* Part Numbers Listed are Delco Remy

191-0703

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1967045	1	*Armature
2	1946386	1	*Coil Assembly, Field
3	1877355	1	*Drive Assembly
4	1946491	4	*Brush
5	1940477	2	*Holder, Brush - Grounded

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	1950546	2	*Holder, Brush - Insulated
7	1945620	4	*Spring, Brush
8	1115510	1	*Switch, Solenoid
9	1883865	2	*Bolt, Thru

* Part Numbers Listed are Delco Remy


191-0721

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1967045	1	*Armature
2	1946386	1	*Coil Assembly, Field
3	1877355	1	*Drive Assembly
4	1906987	4	*Brush
5	1940477	2	*Holder, Brush - Grounded

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	1950546	2	*Holder, Brush - Insulated
7	1945620	4	*Spring, Brush
8	1115510	1	*Switch, Solenoid
9	1883865	2	*Bolt, Thru

* Part Numbers Listed are Delco Remy

 
191-0734

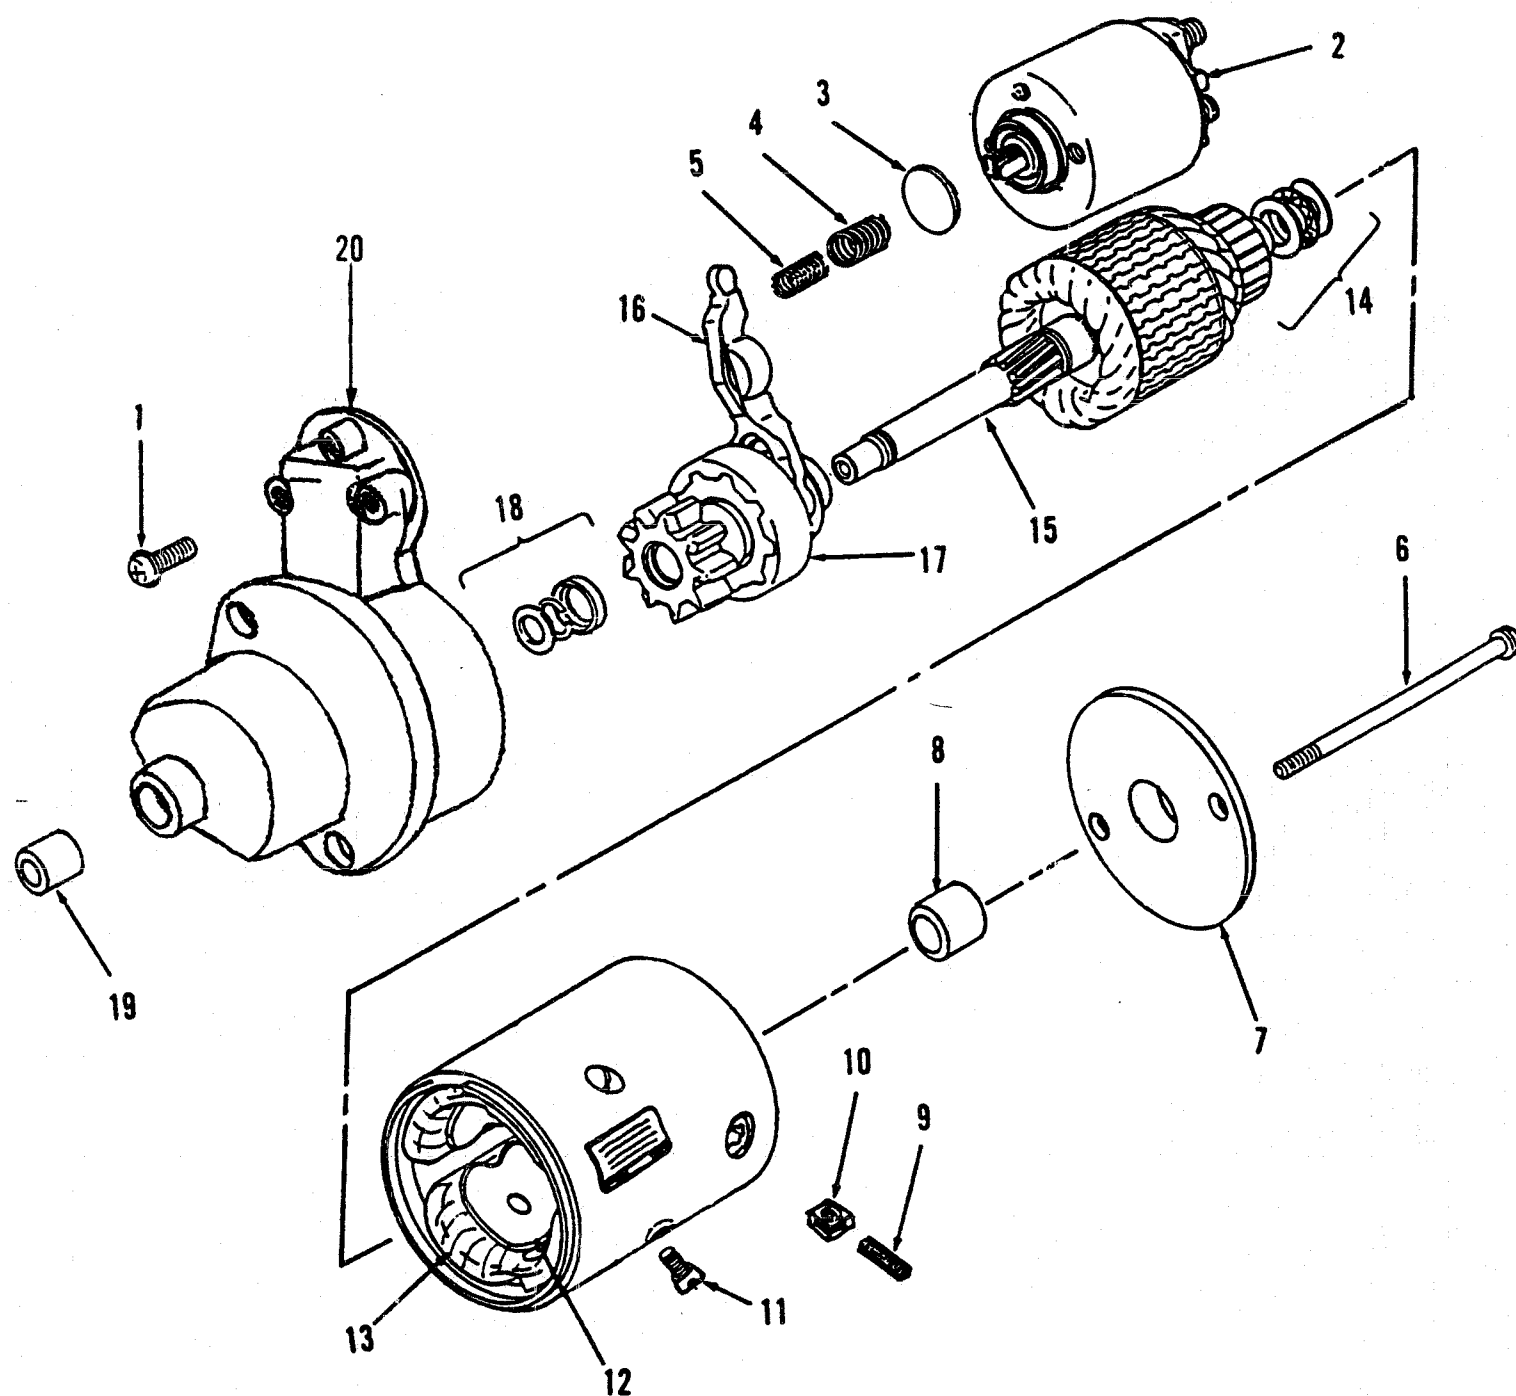

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0760	3	Screw
2	191-0987	1	Solenoid
3	191-0752	1	Holder, Spring
4	191-0751	1	Spring, Lever
5	191-0750	1	Spring, Lever
6	191-0759	2	Bolt
7	191-0753	1	Plate, Rear (Includes Bearing)
8	191-0764	1	Bearing, Sleeve - Rear
9	191-0758	4	Spring, Brush
10	191-0757	4	Brush

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	191-0766	4	Screw
12	191-0765	4	Shoe, Pole
13	191-0762	1	Coil, Field
14	191-0997	1	Washer Set, Thrust
15	191-0743	1	Armature
16	191-0749	1	Lever
17	191-0744	1	Clutch
18	191-0991	1	Stop Set
19	191-0763	1	Sleeve, Bearing - Front
20	191-0748	1	Bracket, End - Drive

 191-0767

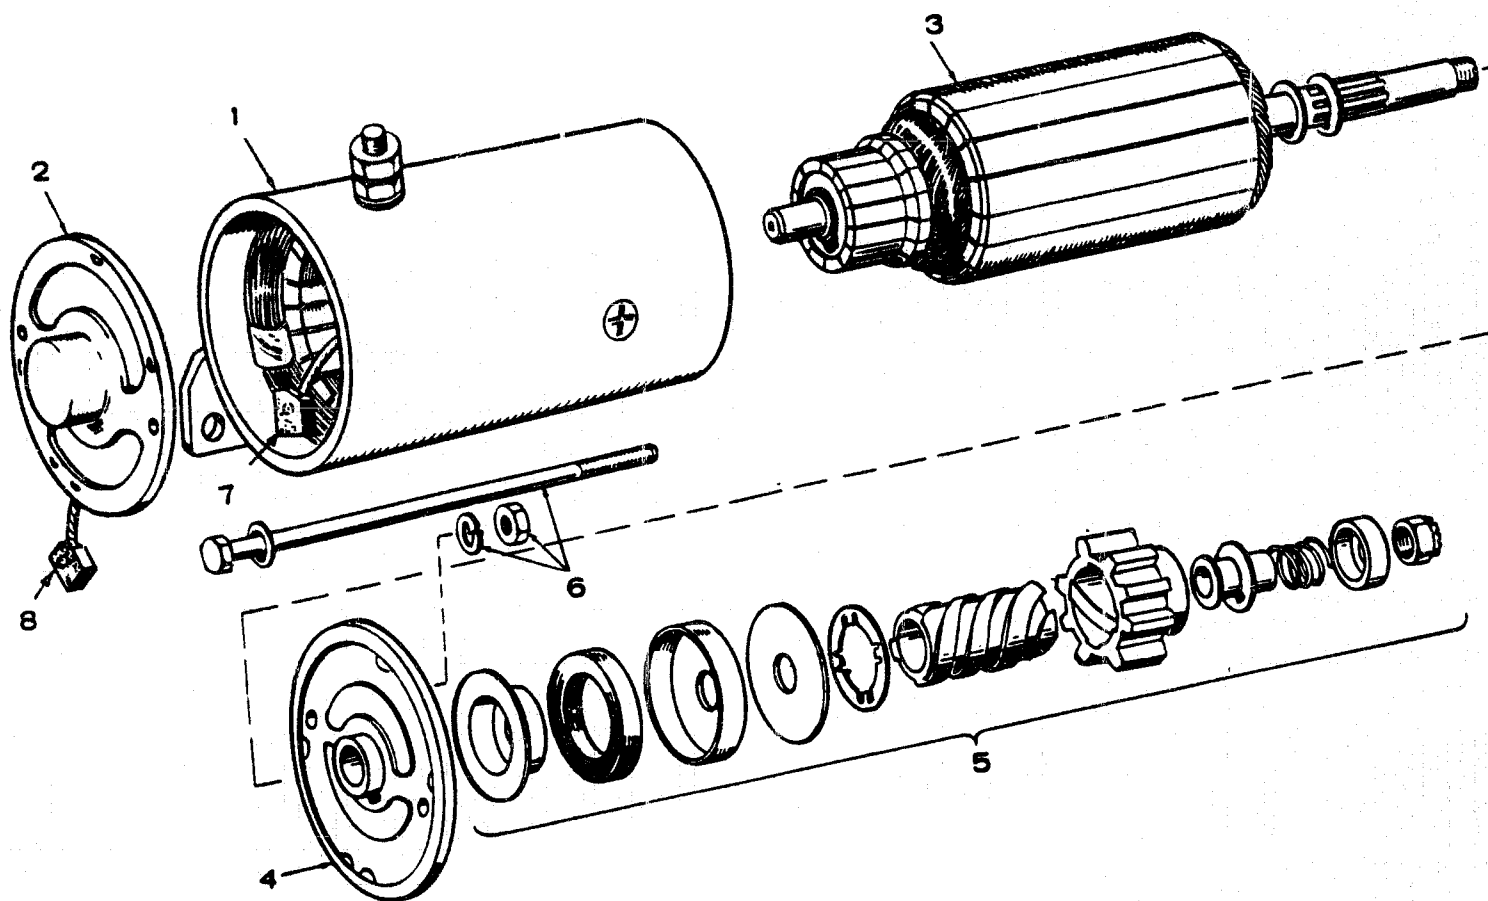


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0804	1	Housing Assembly
2	191-0795	1	Cap Assembly, End
3	191-0796	1	Armature Assembly
4	191-0797	1	Cap Assembly, End - Drive

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-0805	1	Drive Assembly
6	191-0799	2	Bolt, Thru
7	191-0800	1	Brush, Positive
8	191-0801	1	Brush, Negative

191-0780

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0794	1	Housing Assembly	5	191-0798	1	Drive Assembly
2	191-0795	1	Cap Assembly, End	6	191-0799	2	Bolt, Thru
3	191-0796	1	Armature	7	191-0800	1	Brush, Positive
4	191-0797	1	Cap Assembly, End - Drive	8	191-0801	1	Brush, Negative

 191-0790

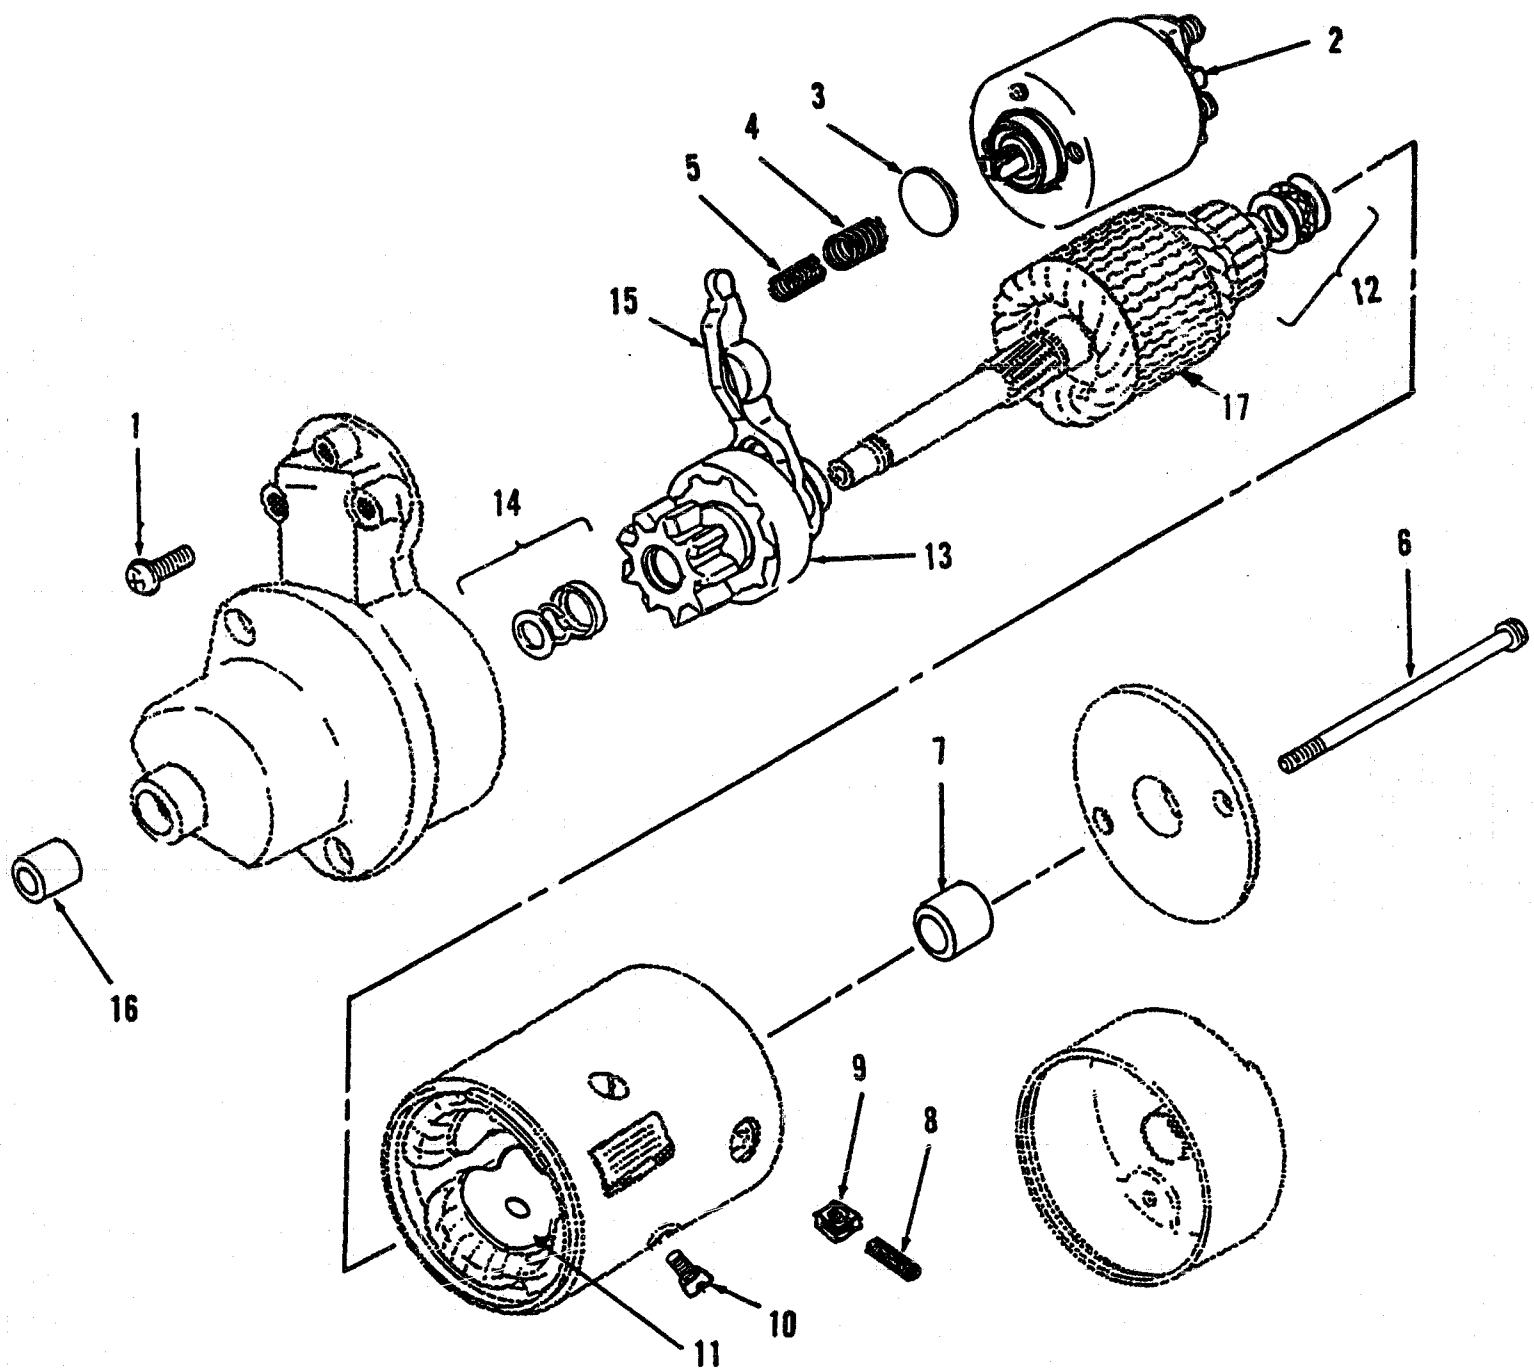

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0760	3	Screw
2	191-0987	1	Solenoid
3	191-0752	1	Holder, Spring
4	191-0751	1	Spring, Lever
5	191-0750	1	Spring, Lever
6	191-0759	2	Bolt
7	191-0764	1	Bearing, Sleeve - Rear
8	191-0758	4	* Brush
	191-1007	4	+ Positive
9	191-0757	4	* Brush
	191-1005	2	+ Positive
	191-1008	2	+ Negative

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
10	191-0766	4	*Screw
11	191-0765	4	*Shoe, Pole
12	191-0997	1	Washer Set, Thrust
13	191-0744	1	* Drive Assembly
	191-0744-01	1	+ *
14	191-0991	1	Stop Set
15	191-0749	1	Lever
16	191-0763	1	Bearing, Sleeve - Front
17	191-0743	1	Armature

* Parts special to Starter Type MX1.0 and M9224
+ Parts special to Starter Type MEA909

191-0826

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1961820	1	*Armature
2	1949109	1	*Coil Assembly, Field
3	1894211	1	*Drive Assembly

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	1119879	1	*Switch, Solenoid
5	1906985	8	*Brush

* Part Numbers Listed are Delco Remy

191-0828

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1121	1	Armature
2	191-1124	1	Brush Set
3	191-1123	1	Frame & Field Assembly
4	191-1128	1	Head Assembly, Comm End
5	191-1125	1	Plate Assembly, Brush
6	191-1126	1	Spring Set, Brush
7	191-1122	1	Drive Assembly
8	191-1129	1	Housing Assembly, Pinion
9	191-1130	1	Bearing, Bronze
10	191-1140	1	Yoke
11	191-1132	1	Yoke Parts Pkg
11A	MS24665-132	1	*Pin, Cotter
11B	MS20392-2015	1	*Pin, Link
11C	191-1195	1	Clamp, Cover - Yoke

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11E	191-1196	1	Cover, Yoke
11F	191-1197	1	Pin, Yoke
12	191-1133	1	Core Assembly, Moving
13	191-1137	1	Spring & Plug Pkg
14	191-1135	1	Pinion Stop & Lock Ring Pkg
15	191-1138	1	Bolt Pkg, Thru
16	191-1139	1	Washer Pkg, Thrust
17	191-1127	1	Switch Conn & Grommet Pkg
18	191-1136	1	Switch, Solenoid
19	191-1131	1	Lead Assembly
20	191-1134	1	Cap, Rubber
21	800-1002	4	Screw, Cap - Hex Head
22	850-1040	4	Washer, Lock
23	191-1194	1	Solenoid Assembly

* Part Numbers Listed are Prestolite


191-0852

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1945500	1	*Armature
2	1945496	1	*Coil Assembly, Field
3	1894211	1	*Drive Assembly

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	1119848	1	*Switch, Solenoid
5	1906986	8	*Brush

* Part Numbers Listed are Delco-Remy

 
191-0863

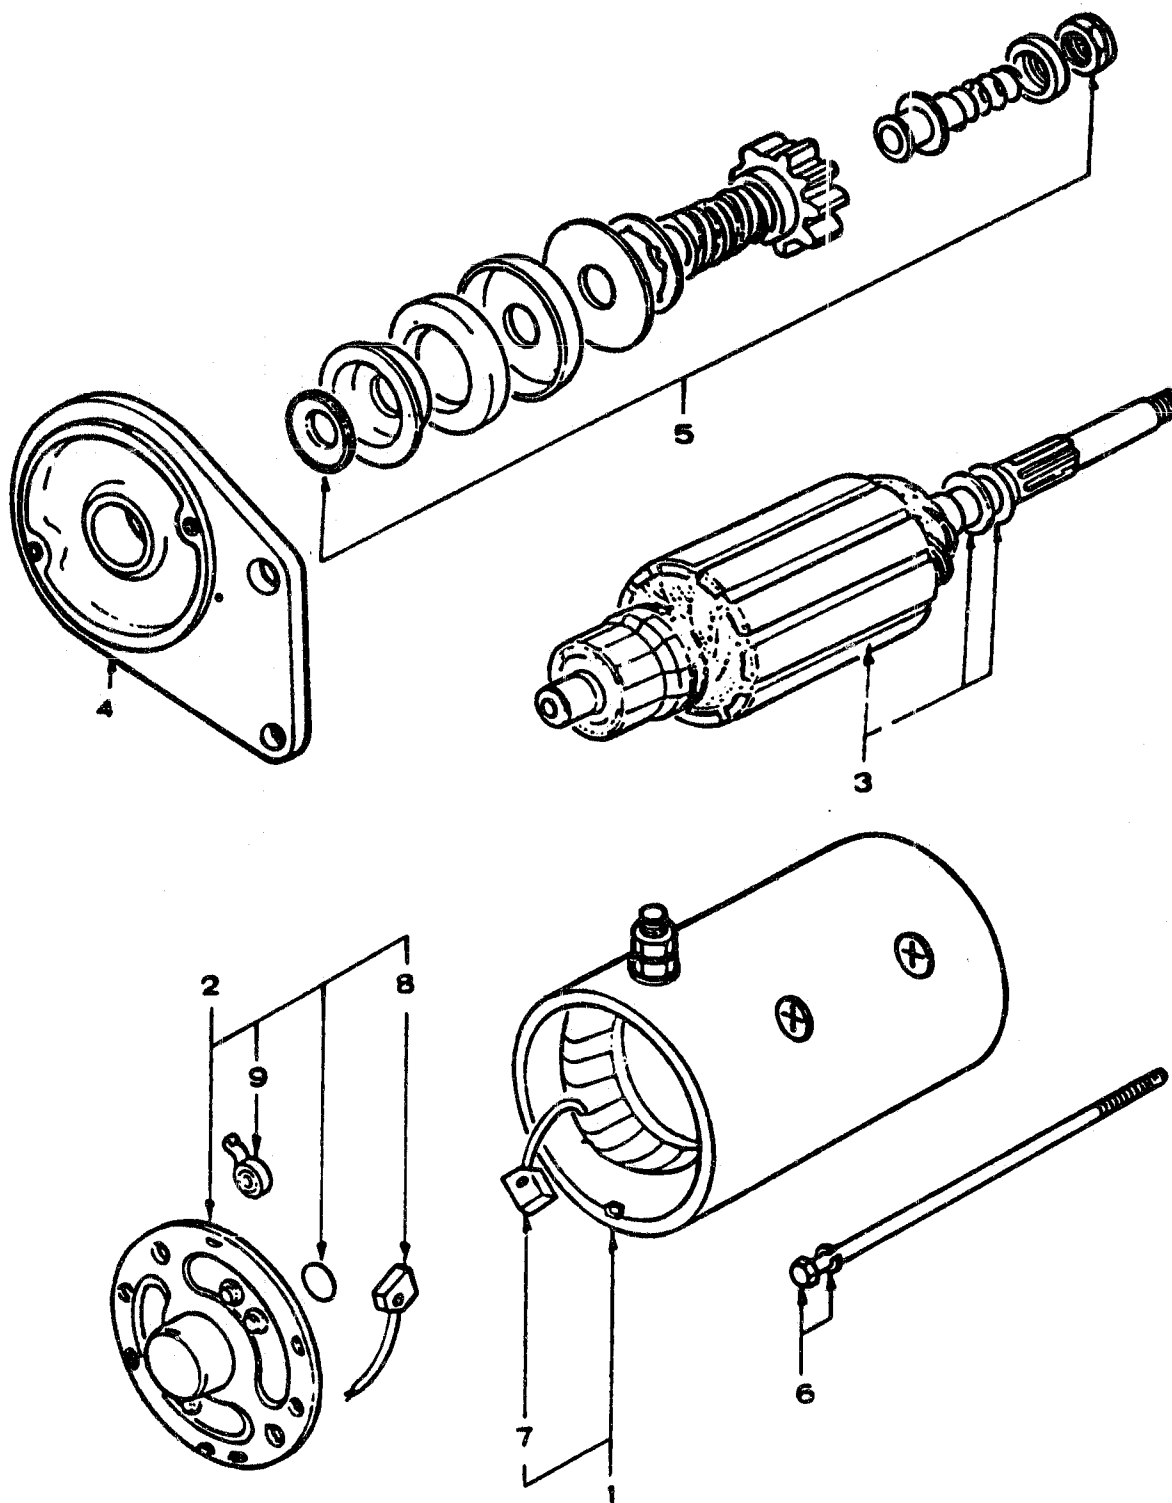

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0906	1	Housing
2	191-0907	1	Cap Assembly, End
3	191-0908	1	Armature
4	191-0909	1	Plate Assembly, Drive
5	191-0910	1	Gear Assembly, Drive

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	191-0911	2	Bolt, Thru
7	191-0912	1	Brush, Field
8	191-0913	1	Brush, Ground
9	191-0917	2	Spring, Brush

 
191-0915

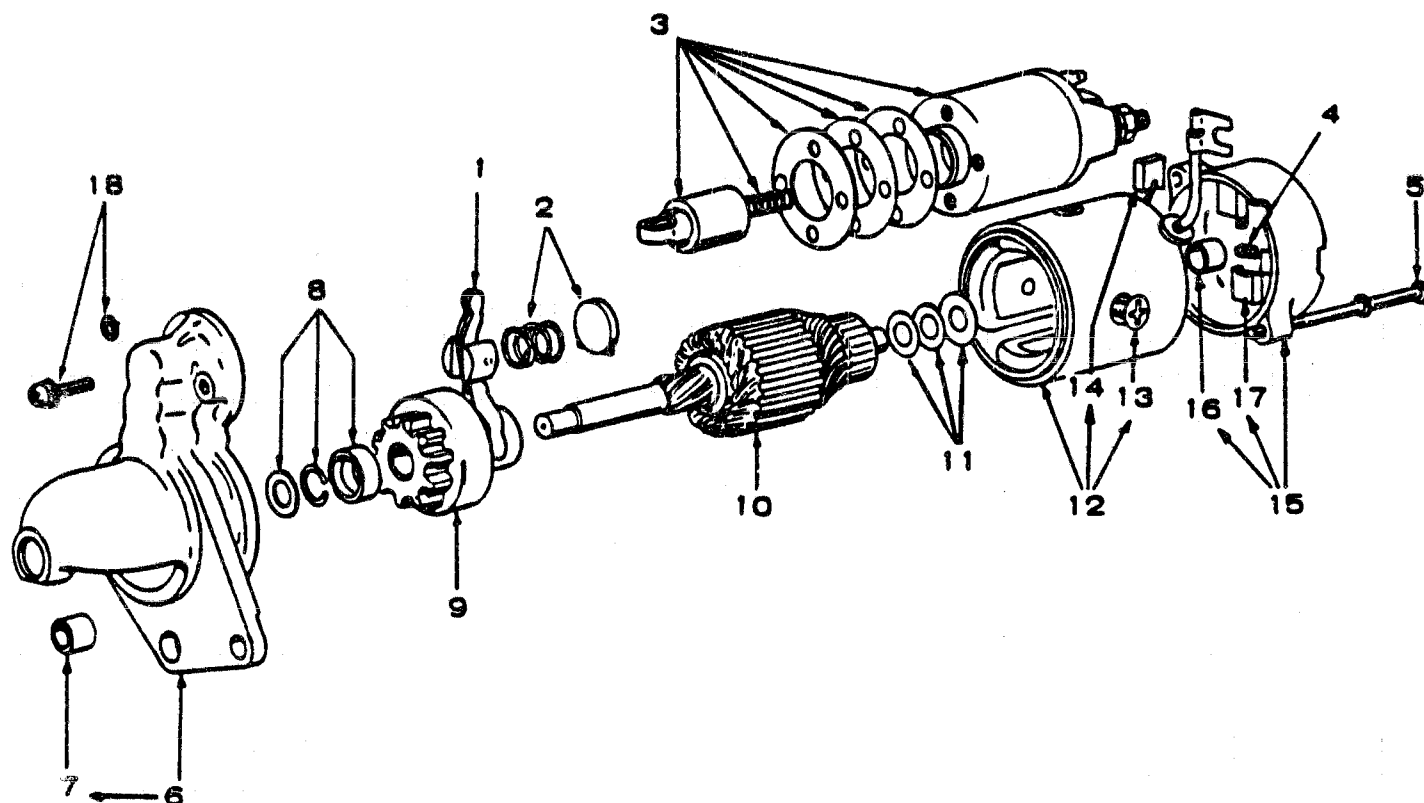

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0965	1	Lever Assembly
2	191-0966	1	Spring Set
3	191-0967	1	Switch, Assembly
4	191-0968	2	Spring, Brush
5	191-0969	2	Bolt, Thru
6	191-0970	1	Bracket Assembly, Front (Includes Bearing)
7	191-0971	1	Bearing, Front
8	191-0972	1	Stopper Set, Pinion
9	191-0973	1	Drive Assembly
10	191-0974	1	Armature

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	191-0975	1	Washer Set
12	191-0976	1	Yoke Assembly (Includes Brush and Screws)
13	191-0977	4	Screw, Machine - Flat Head
14	191-0978	1	Brush, Positive
15	191-0979	1	Bracket Assembly, Rear (Included Bearing and Brush)
16	191-0980	1	Bearing, Rear
17	191-0981	1	Brush, Negative
18	191-0982	1	Screw Set

 191-0922

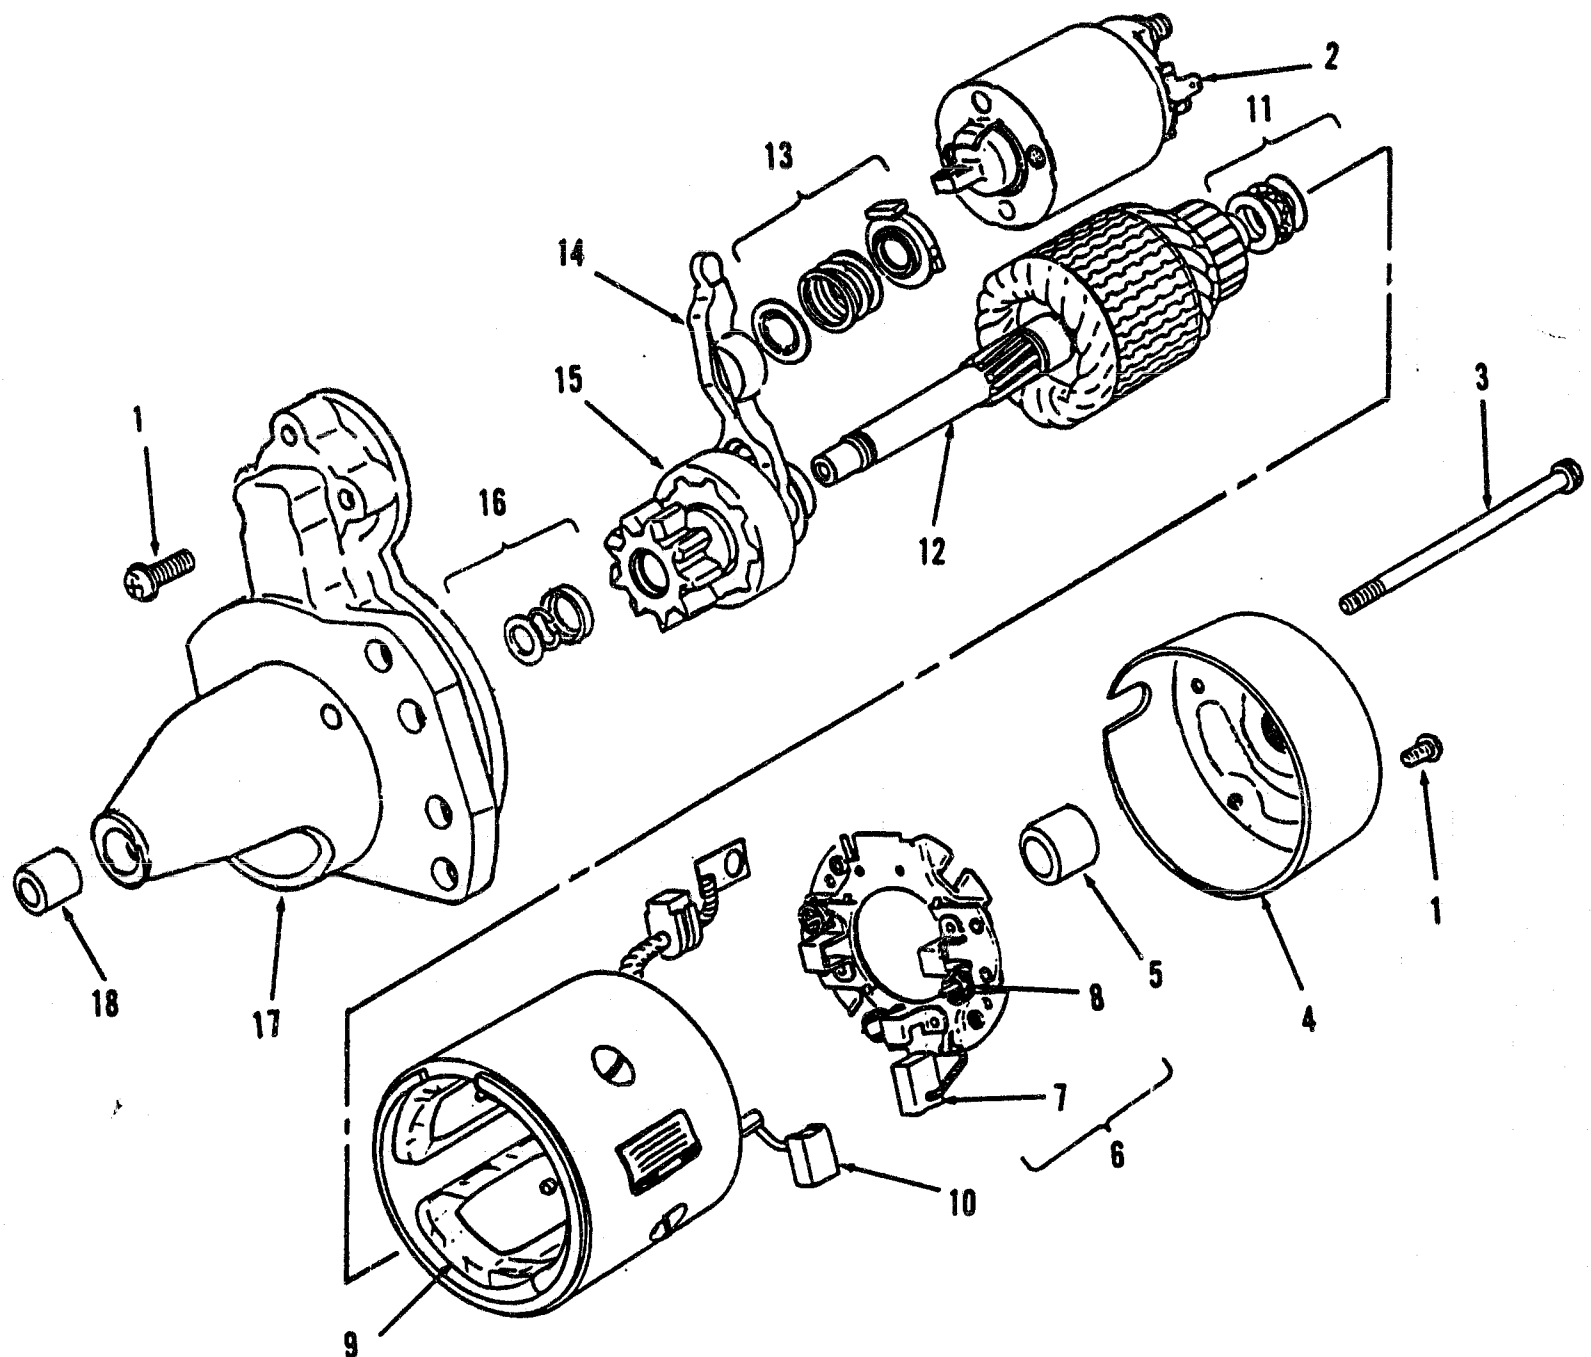


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1011	1	Screw & Washer Set
2	191-0987	1	Switch, Solenoid
3	191-0988	2	Bolt
4	191-1009	1	Plate, Rear (Includes Bearing)
5	191-1010	1	Bearing, Sleeve - Rear
6	191-1006	1	*Holder, Brush (Includes Negative Brushes & Springs)
7	191-1008	1	Brush, Negative
8	191-1007	3	Spring, Brush
9	191-1001	1	Coil Set, Field (Includes Field Coil, Pole Shoes and Positive Brushes)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
10	191-1005	2	Brush, Positive
11	191-0997	1	Washer Set, Thrust
12	191-0996	1	Armature
13	191-0984	1	Plate & Spring Set
14	191-0983	1	Lever
15	191-0995	1	Drive Assembly
16	191-0991	1	Stop Set
17	191-0989	1	Bracket Front (Includes Bearing)
18	191-0990	1	Bearing, Sleeve - Front


* Current Brush Holder 191-1006 is interchangeable with early version that was equipped with two negative brushes and four springs. Only one negative brush is required on all models.

 191-0933

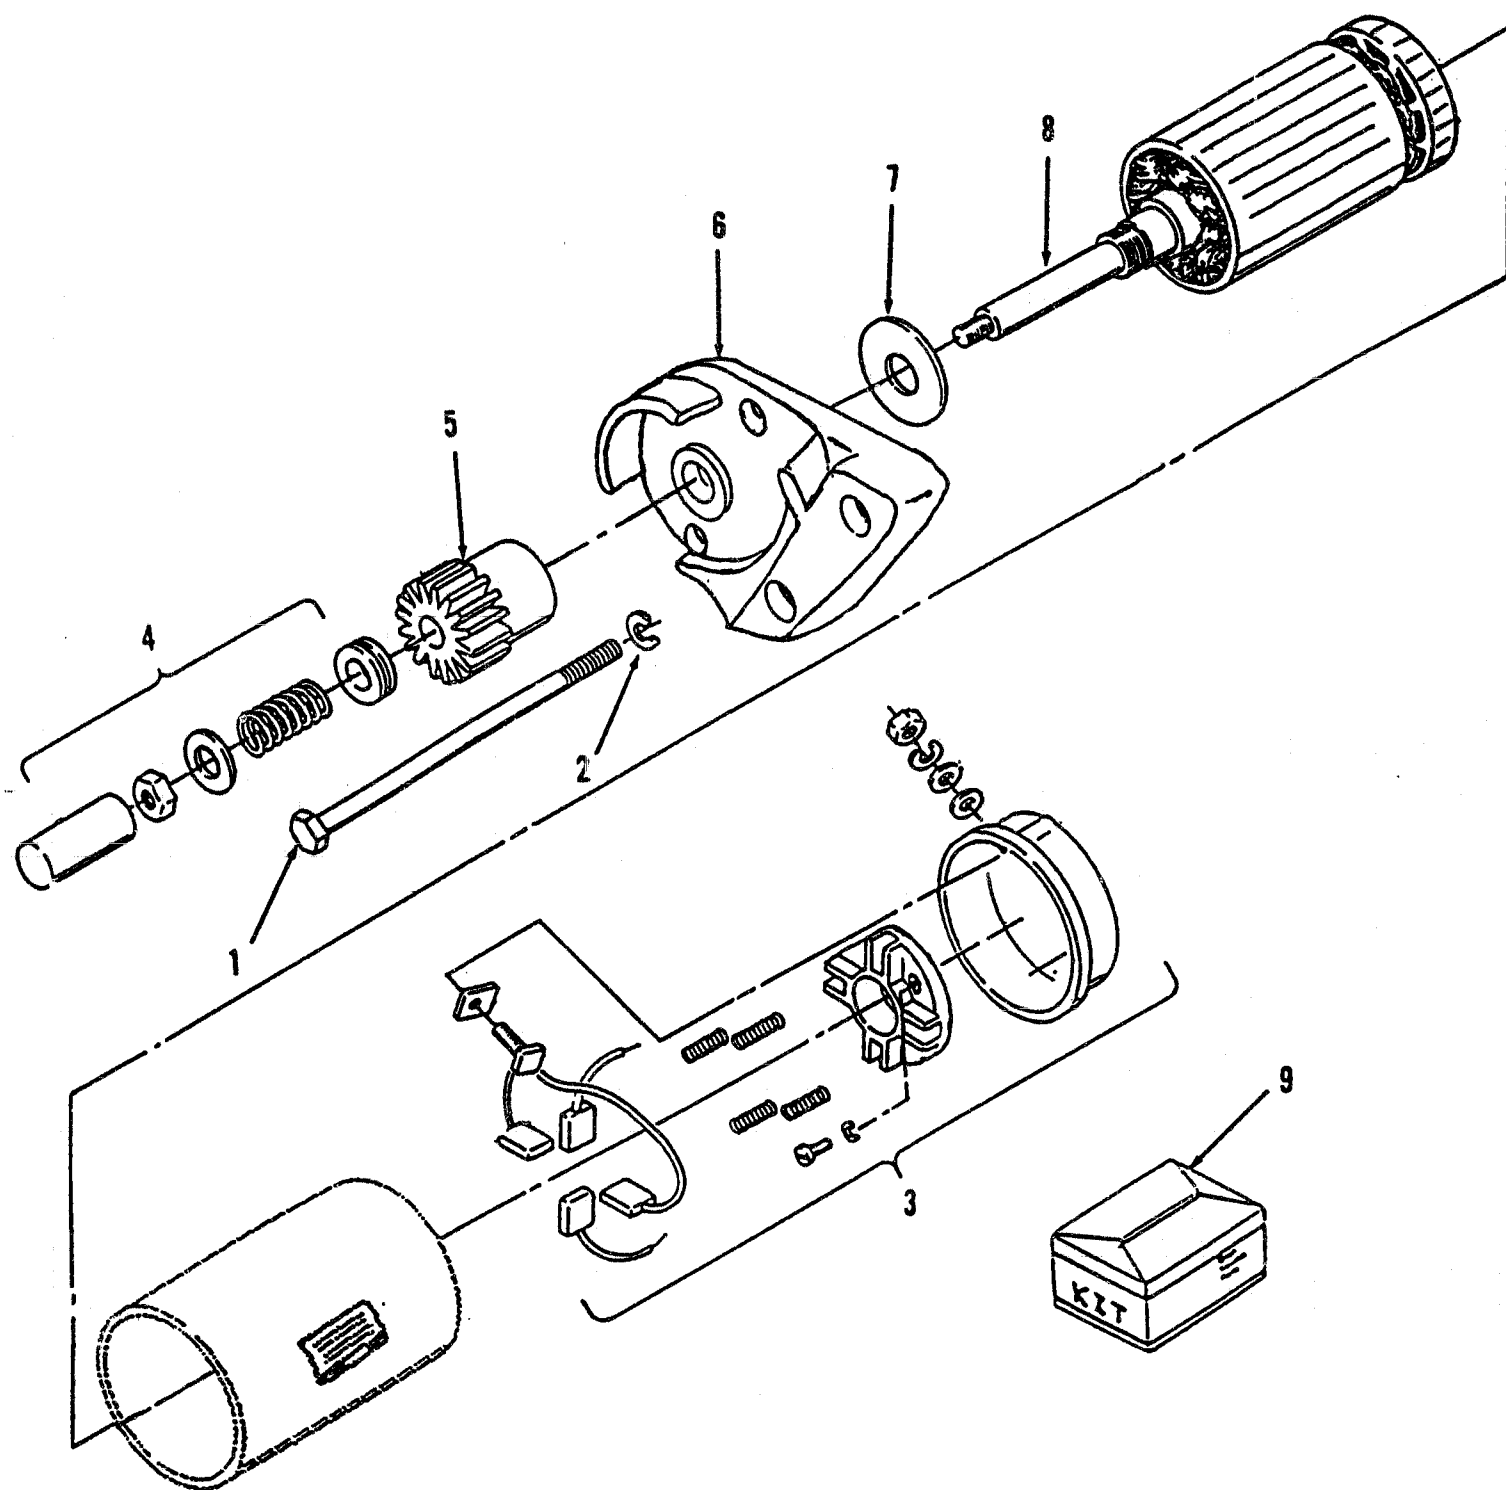

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1048	2	Bolt, Hex Head	5	191-1036	1	Gear, Drive
2	850-0040	2	Washer, Lock - Spring (1/4")	6	191-1037	1	Plate, Endcap - Front
3	191-1040	1	Cap Assembly, End (Includes Cap, Brushholder, Springs, Brushes, & Terminal Hardware)	7	191-1038	1	Washer, Thrust
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut & Washer)	8	191-1039	1	Armature
				9	191-1041	1	Repair Kit (Includes Brush with Stud, Springs & Brushes)

 191-1052

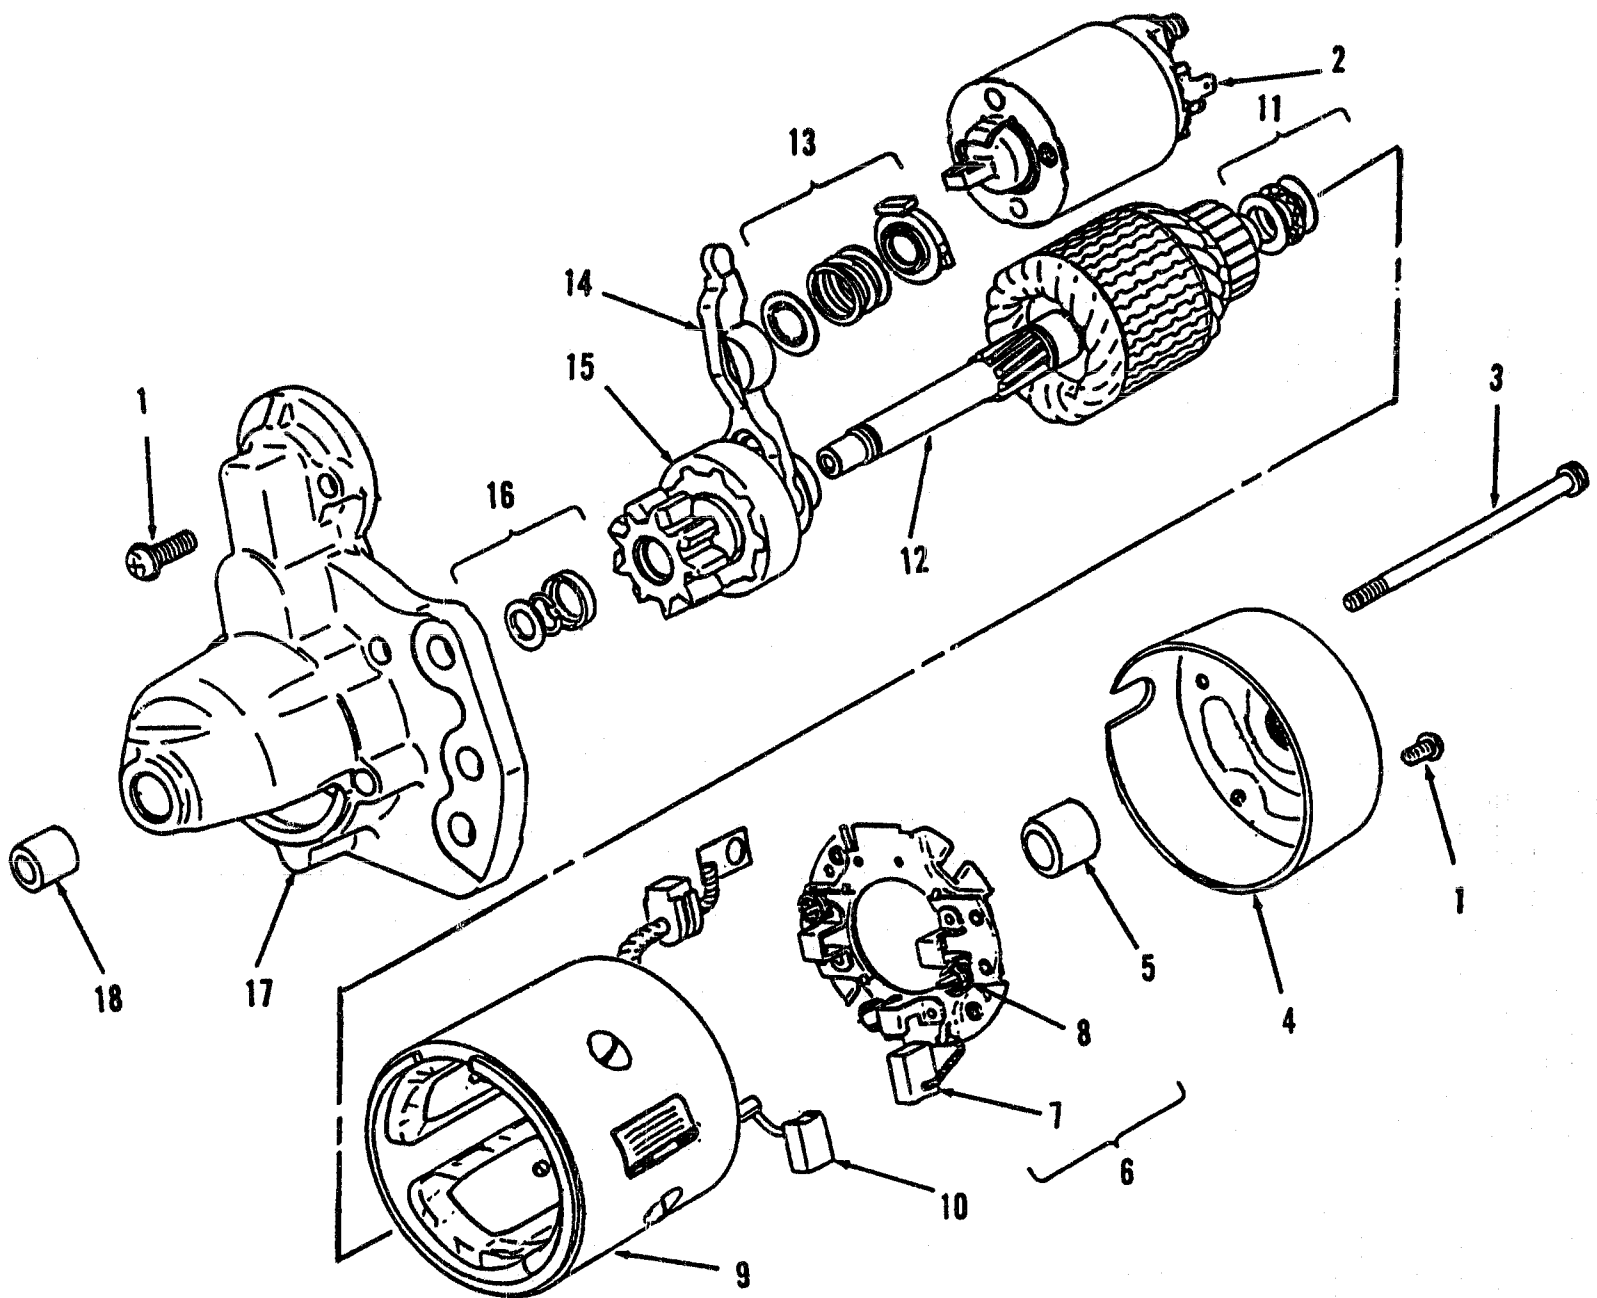

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1011	1	Screw & Washer Set
2	191-0987	1	Switch, Solenoid
3	191-0988	2	Bolt
4	191-1009	1	Plate, Rear (Includes Bearing)
5	191-1010	1	Bearing, Sleeve - Rear
6	191-1006	1	*Holder, Brush (Includes Negative Brushes & Springs)
7	191-1008	1	Brush, Negative
8	191-1007	3	Spring, Brush
9	191-1089	1	Frame Assembly (Includes Frame, Field Coil, Pole Shoes & Positive Brushes)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
10	191-1005	2	Brush, Positive
11	191-0997	1	Washer Set, Thrust
12	191-1088	1	Armature
13	191-0984	1	Plate & Spring Set
14	191-0983	1	Lever
15	191-1087	1	Drive Assembly
16	191-0991	1	Stop Set
17	191-1086	1	Bracket, Front (Includes Bearing)
18	191-0971	1	Bearing, Sleeve - Front

* Current brush holder 191-1006 is interchangeable with early version that was equipped with two negative brushes and four springs. Only one negative brush is required on all models.

191-1097

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1967045	1	*Armature
2	1969128	1	*Coil Assembly, Field
3	1877355	1	*Drive Assembly
4	1946491	4	*Brush
5	1940477	2	*Holder, Brush - Grounded

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	1950546	2	*Holder, Brush - Insulated
7	1945620	2	*Spring, Brush
8	1115510	1	*Switch, Solenoid
9	1883865	2	*Bolt, Thru

* Part Numbers Listed are Delco-Remy

191-1111

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1154	1	Armature
2	191-1155	1	Cap Assembly, Comm
3	191-1037	1	Cap Assembly, End - Drive
4	191-1156	1	Drive Assembly
5	191-1045	1	Nut
6	191-1157	2	Bolt, Thru

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	191-1035	1	Spring, Anti-Drift
8	191-1038	1	Washer
9	850-0040	1	Washer, Lock
10	191-1046	1	Washer
11	191-1047	1	Spacer
12	191-1034	1	Cover

191-1117

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	028300-1280	1	*Drive Assembly
2	053400-1560	1	*Switch, Solenoid
3	028200-1380	1	*Armature
4	028110-1330	1	*Coil Assembly, Field

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	949173-0440	4	*Spring, Brush
6	028530-0480	4	*Brush
7	949042-0751	2	*Bolt, Thru

* Part Numbers Listed are Nippondenso

191-1119

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	053400-1560	1	*Switch, Solenoid
2	949042-1700	2	*Bolt, Thru
3	949042-1691	6	*Bolt, Thru
4	028300-1280	1	*Drive Assembly
5	028200-1260	1	*Armature

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	949042-1680	2	*Bolt, Thru
7	028110-1090	1	*Coil Assembly, Field
8	949173-0440	4	*Spring, Brush
9	028530-0480	4	*Brush


* Part Numbers Listed are Nippondenso

191-1158

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0517	1	Armature
2	191-1019	1	Bearing Assembly, Intermediate
3	191-0271	1	Drive Assembly
4	191-1018	1	Head Assembly, Comm End


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-1020	1	Spring Set, Brush
6	191-0735	1	Bearing, Bronze
7	191-1021	1	Washer Pkg, Thrust
8	191-0513	1	Brush Set

 191-1171

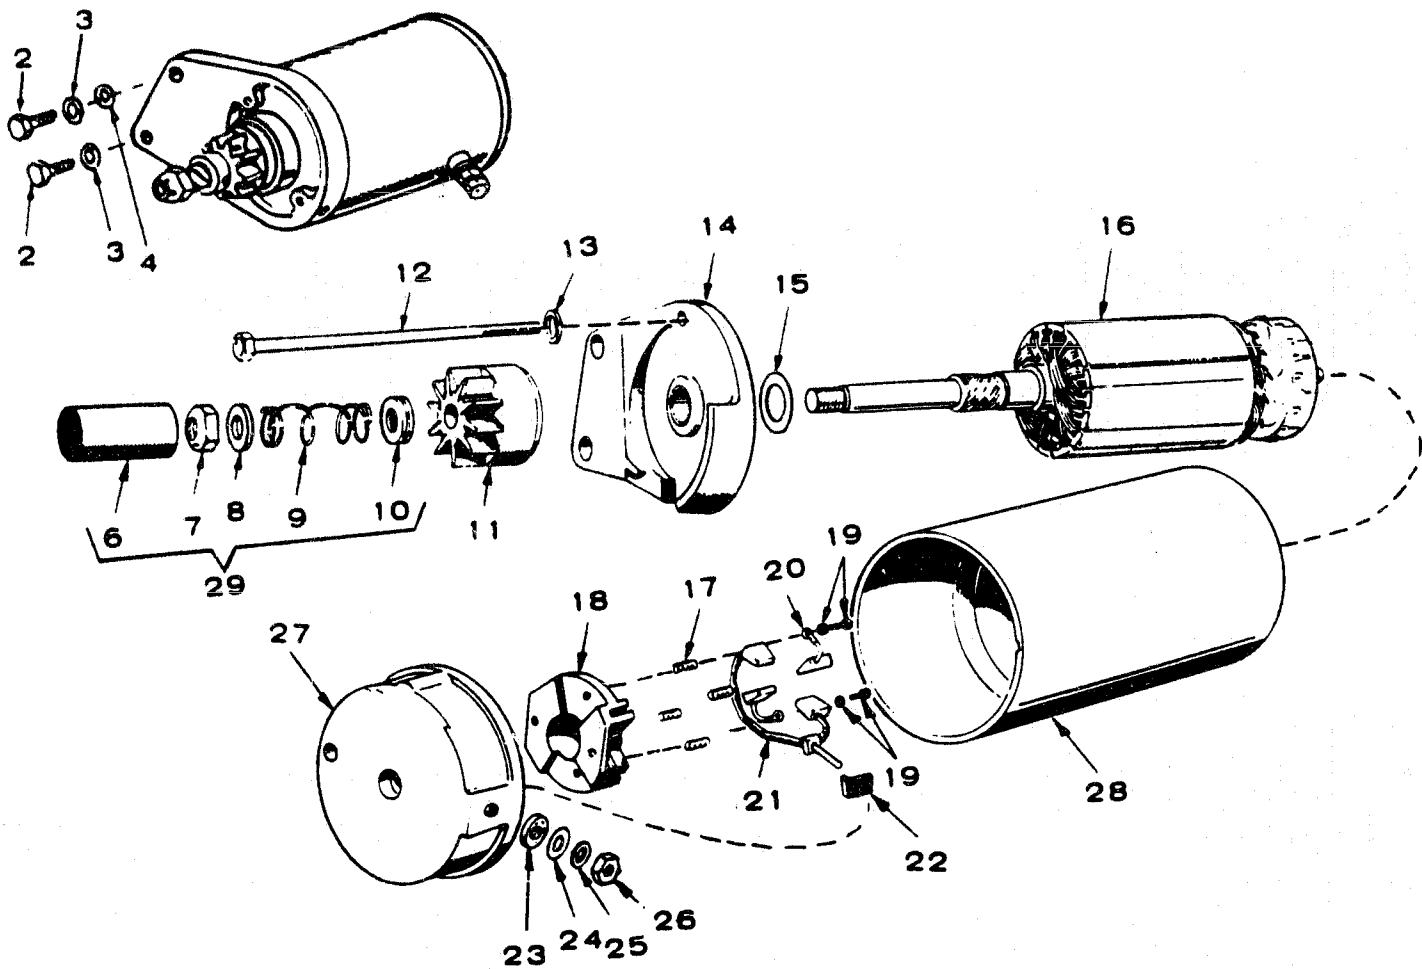

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	800-0552	2	Screw, Cap - Hex Head (5/16-18 x 1")	18	NFS	1	+Holder, Brush
3	850-0045	2	Washer, Lock - Spring (5/16")	19	NFS	2	+Screw & Lockwasher
4	526-0113	1	Washer, Flat (5/16")	20	NFS	2	*+Brush, Ground
6	NFS	1	@Cover, Dust	21	NFS	1	*+Stud & Brush Assembly, Input
7	NFS	1	@Nut, Stop	22	NFS	1	+Brushing, Insulation
8	NFS	1	@Washer, Flat	23	NFS	1	Washer, Insulation
9	NFS	1	@Spring, Anti-Drift	24	NFS	1	+Washer, Flat
10	NFS	1	@Spacer, Cover - Dust	25	NFS	1	+Washer, Lock
11	191-1156	1	Drive Assembly	26	NFS	1	+Nut
12	191-1220	2	Screw, Cap - Hex Head	27	191-1040	1	Cap Assembly, Commutator (Includes parts marked +)
13	850-0040	2	Washer, Lock - Spring (1/4")	28	NFS	1	Housing
14	191-1219	1	Cap Assembly, End - Drive	29	191-1359	1	Service Pkg (Includes parts marked @)
15	191-1038	1	Washer, Thrust - Armature	30	191-1222	1	Repair Pkg (Includes parts marked *)
16	191-1221	1	Armature				
17	NFS	4	*+Spring				

 + Parts included in Commutator Cap Assembly
 * Parts included in Repair Package
 @ Parts included in Service Package

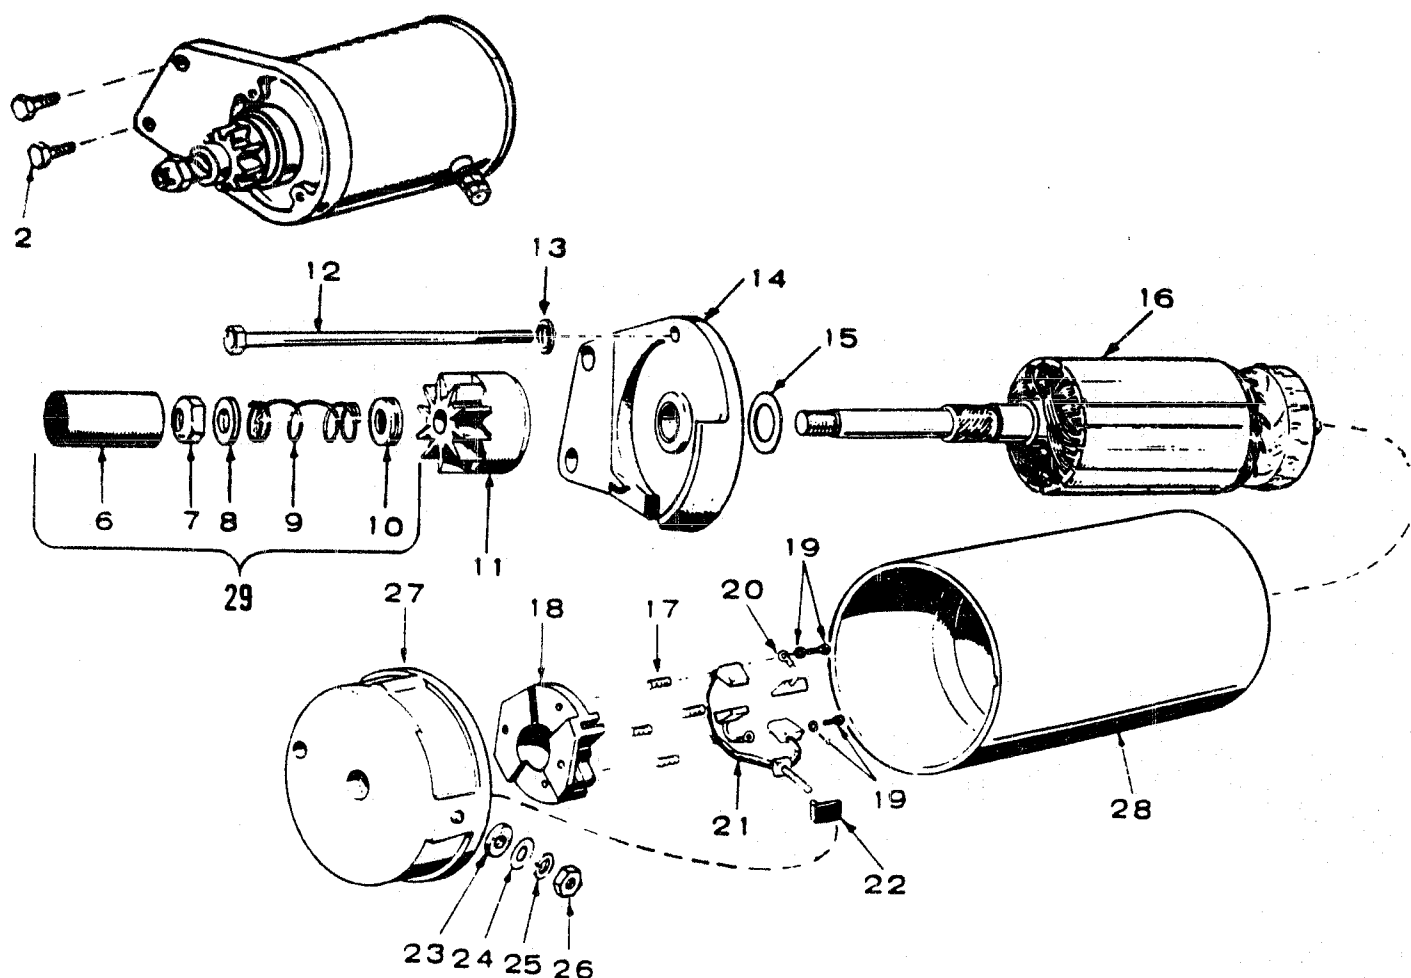

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	815-0570	2	Screw, Cap - Hex Washer Head (5/16-18 x 1")
6	191-1034	1	@Cover, Dust
7	191-1045	1	@Nut, Stop
8	191-1046	1	@Washer, Nut - Stop
9	191-1035	1	@Spring, Anti-Drift
10	191-1047	1	@Spacer, Cover - Dust
11	191-1156	1	Drive Assembly
12	191-1157	2	Screw, Cap - Hex Head
13	850-0040	2	Washer, Lock (1/4")
14	191-1223	1	Cap Assembly, End - Drive
15	191-1038	1	washer, Thrust - Armature
16	191-1154	1	Armature
17	NFS	4	*+Spring, Brush
18	NFS	1	+Holder, Brush

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
19	NFS	2	+Screw & Lockwasher
20	NFS	2	*+Brush, Ground
21	NFS	1	*+Stud & Brush Assembly, Input
22	NFS	1	+Bushing, Insulation - Stud
23	NFS	1	+Washer, Insulation - Stud
24	NFS	1	+Washer, Flat - Stud
25	NFS	1	+Washer, Lock - Stud
26	NFS	1	+Nut, Securing - Stud
27	191-1155	1	Cap Assembly, Commutator (Includes parts marked +)
28	NFS	1	Housing
29	191-1359	1	Cover Assembly, Dust (Includes parts marked @)
30	191-1222	1	Repair Kit (Included parts marked *)

+ Parts included in Commutator Cap Assembly
 @ Parts included in Dust Cover Assembly
 * Parts included in Repair Kit

191-1208

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	2114-61006	1	*Armature Assembly
2	2114-8110	1	*Washer Set, Thrust
3	2114-42103	1	*Coil Assembly, Field
4	2114-5312	2	*Brush, Positive
5	2114-5313	2	*Brush, Negative

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	2114-4314	4	*Spring, Brush
7	2114-1360	1	*Holder Assembly, Brush
8	2114-35501	1	*Drive Assembly
9	2114-37002	1	*Switch, Solenoid
10	2114-8854	2	*Bolt, Thru

* Part Numbers Listed are Hitachi


191-1209

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	MDL-2084	1	*Armature
2	90-328	1	*Brush Holder & Spring Pkg
3	MDL-2012AS	1	*Brush Set
4	MCL-3075	1	*Drive Assembly
5	MDT-1005S	1	*Coil Assembly, Field

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	MP-41A	1	*Bearing, Bronze
7	SAD-4501	1	*Switch, Solenoid
8	SAD-27S	1	*Spring & Plug Pkg
9	GJ-20S	1	*Bolt Pkg, Thru
10	90-81	1	*Washer Pkg, Thrust

* Part Numbers Listed are Prestolite

 191-1246

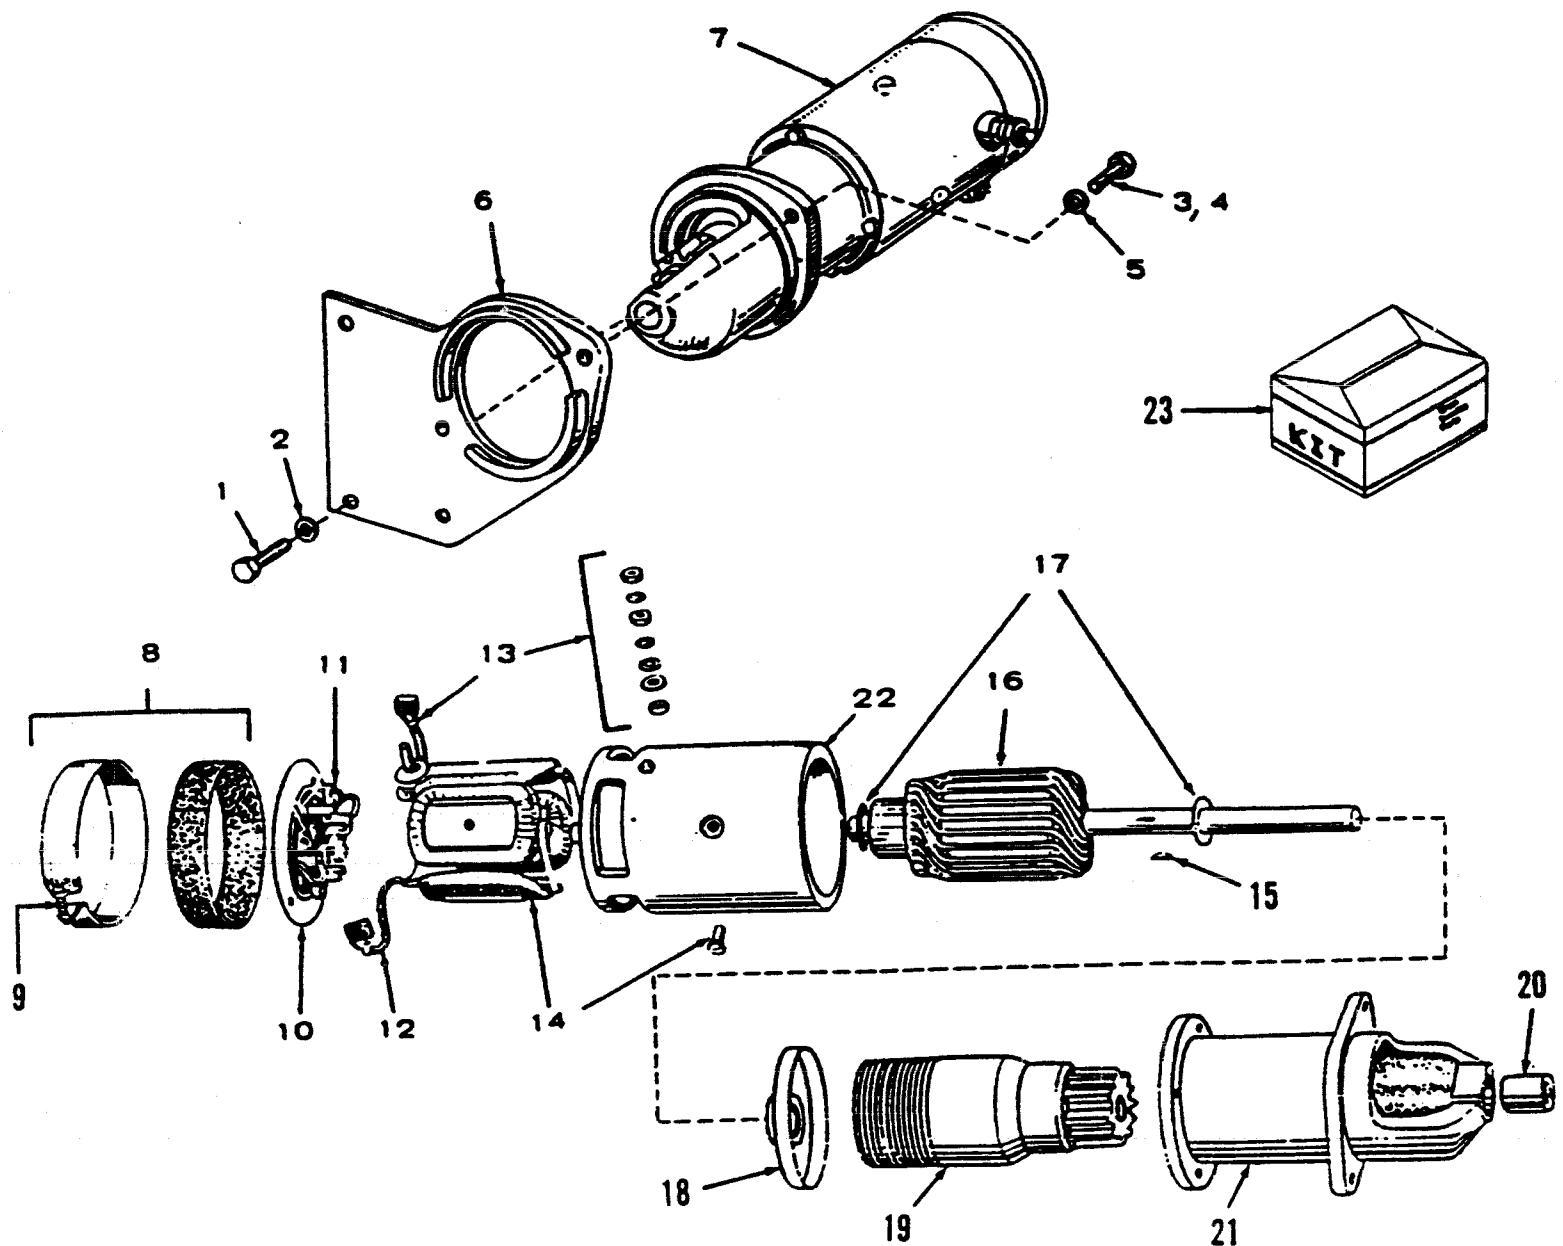

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0051	3	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
2	850-0050	3	Washer, Lock - Spring (3/8")
3	800-0049	1	Screw, Cap - Hex Head (3/8-16 x 7/8")
4	800-0050	1	Screw, Cap - Hex Head (3/8-16 x 1")
5	850-0050	2	Washer, Lock - Spring (3/8")
6	191-0508	1	Flange, Mounting - Starter
7	191-1246	1	Starter, Sealed (Includes Parts Marked *)
8	191-1267	1	+Band, Cover (Includes Gasket and Hardware)
9	813-0110	1	+Screw, Machine - Round Head (#10-32 x 2")
10	191-1018	1	Head Assembly, Commutator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	191-1020	1	Spring Set, Brush
12	191-0513	1	Brush Set
13	191-1022	1	Terminal Package
14	191-1017	1	Coil Assembly, Field
15	515-0094	1	Key, Woodruff (#6)
16	191-0517	1	Armature
17	191-1021	1	Washer Package, Thrust
18	191-1019	1	Bearing Assembly, Intermediate
19	191-0271	1	Drive Assembly
20	191-0735	1	Bearing, Sleeve - Bronze
21	NFS	1	Pinion, Housing (With Drain Hole)
22	NFS	1	Frame, Starter - Sealed Type
23	191-1524	1	Band Kit, Starter (Includes Parts Marked +)

+ Parts included in Starder Band Kit

191-1255

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1048	2	Bolt, Hex Head	5	191-1036	1	Gear, Drive
2	850-0040	2	Washer, Lock - Spring (1/4")	6	191-1037	1	Plate, Endcap - Front
3	191-1040	1	Cap Assembly, End (Includes Cap, Brushholder, Springs, Brushes, & Terminal Hardware)	7	191-1038	1	Washer, Thrust
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut & Washer)	8	191-1039	1	Armature
				9	191-1041	1	Repair Kit (Includes Brush with Stud, Springs & Brushes)

191-1264


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-0712	1	Armature	10	191-1025	1	Spring Set, Brush
2	191-0432	1	Drive Assembly	11	191-1323	1	Switch, Solenoid
3	191-1024	1	Coil Assembly, Field	12	191-1386	1	Plug Pkg, Spring
4	191-1023	1	Head Assembly, Commutator End	13	191-1263	1	Switch Connection & Grommet Pkg
5	191-0497	1	Bearing, Bronze	14	191-1139	1	Washer Pkg, Thrust
6	191-1028	1	Core Assembly, Moving	15	191-1032	1	Yoke
7	191-1134	1	Cap, Rubber	16	191-1382	1	Yoke Cover & Misc Parts Pkg
8	191-1383	1	Drive Assembly	17	191-1384	1	Brush Set
9	191-1025	1	Plate Assembly, Brush	18	191-1385	1	Switch Cover & Stud Pkg

191-1282

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1967045	1	*Armature	6	1950546	2	*Holder, Brush - Insulated
2	1946386	1	*Coil, Field	7	1945620	4	*Spring, Brush
3	1877355	1	*Drive Assembly	8	1115510	1	*Switch, Solenoid
4	1906987	4	*Brush	9	1883865	2	*Bolt, Thru
5	1940477	2	*Holder, Brush - Ground				

* Part Numbers Listed are Delco Remy

 191-1294

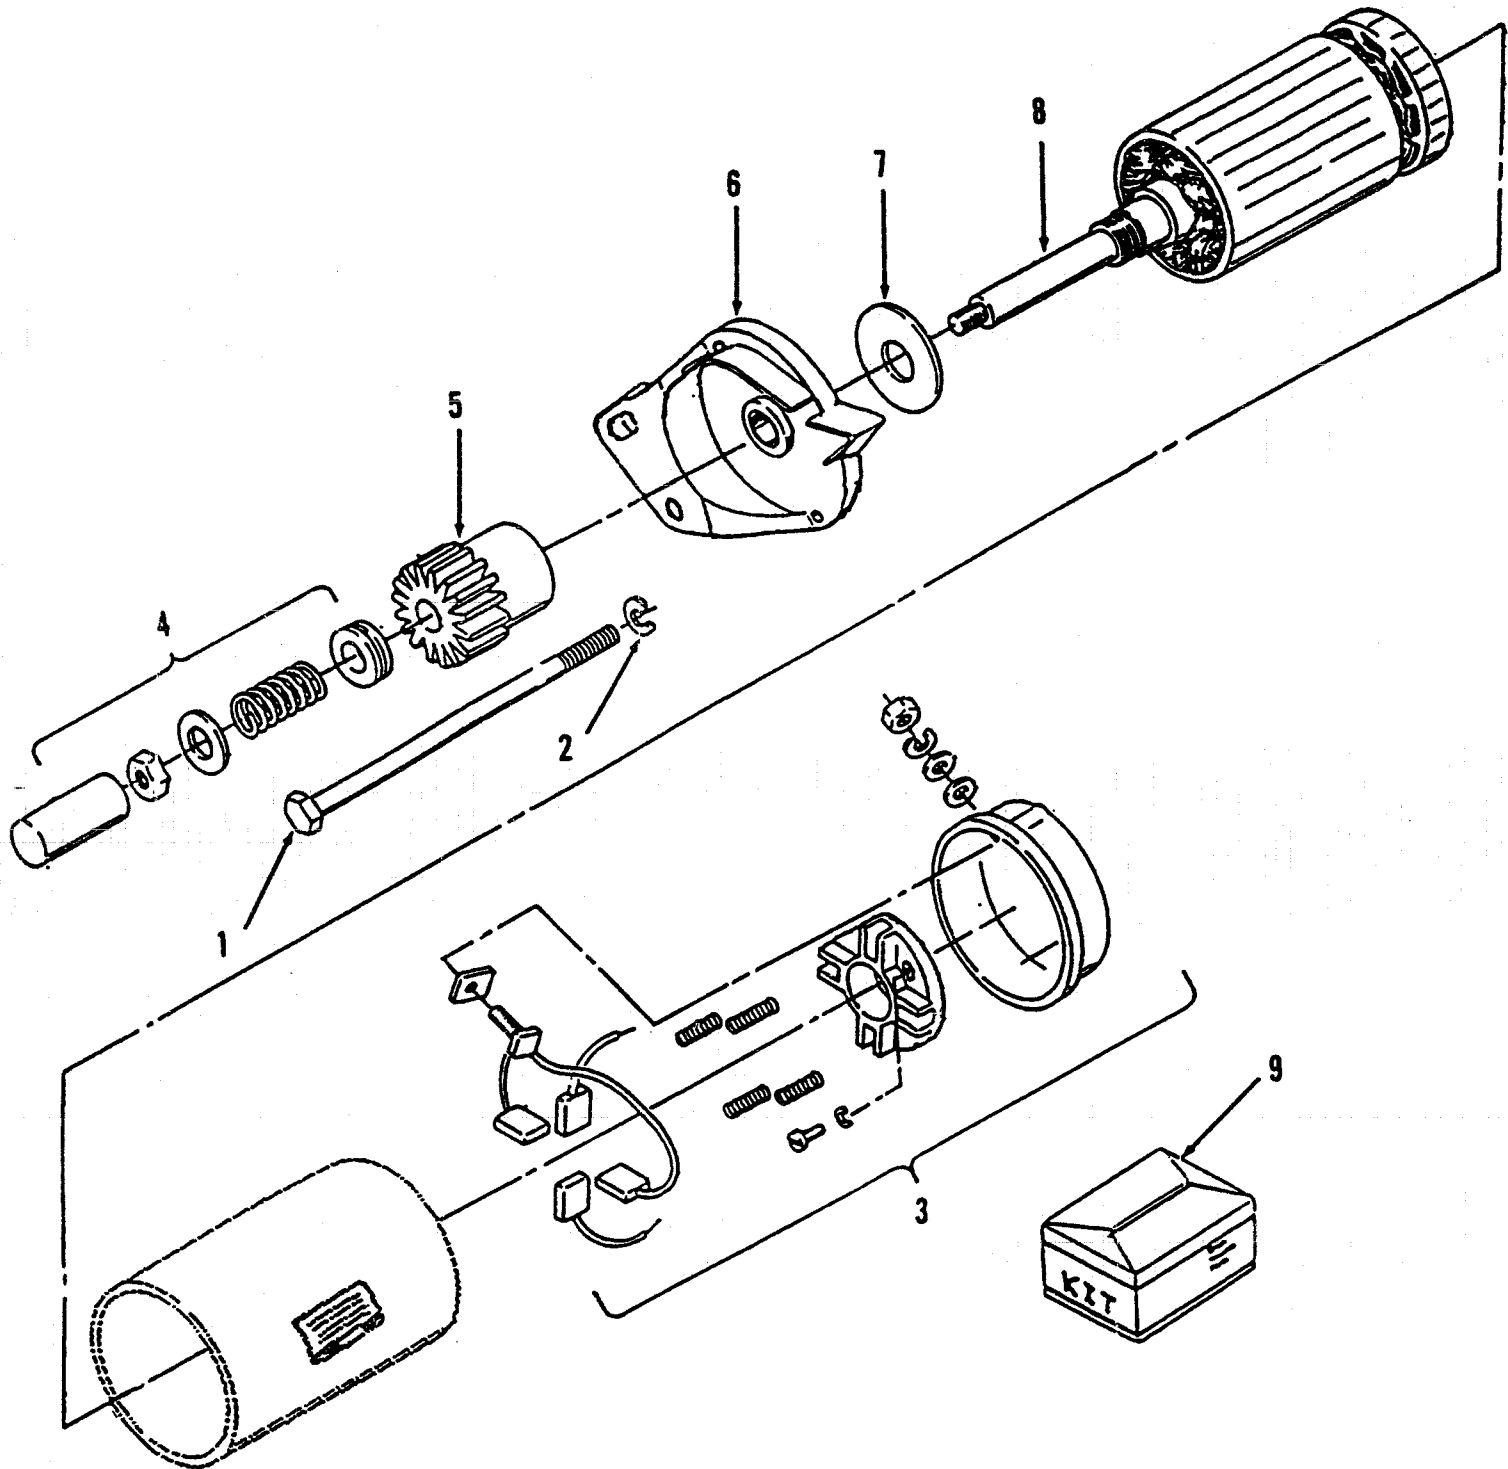

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1157	2	Bolt, Hex Head	5	191-1156	1	Gear, Drive
2	850-0040	2	Washer, Lock - Spring (1/4")	6	191-1597	1	Plate, End-Cap - Front
3	191-1155	1	Cap Assembly, End (Includes Cap, Brushholder, Springs, Brushes, & Terminal Hdw)	7	191-1038	1	Washer, Thrust
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut & Washer)	8	191-1154	1	Armature
				9	191-1222	1	Repair Kit (Includes Brush With Stud, Springs & Brushes)

191-1305

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	60600616	1	*Bracket Assembly, End - Comm	11	54247027	1	*Sundry Parts Kit (Includes Spire Washer, Terminal Pin, Nuts, Washers, Insul Bushing Four C.E. Bracket Screws, Four Brush Springs, Four Screw Pole Shoe Fixing, a Jump Ring, & Thrust Collar
2	60600056	1	*Brush Set				
3	54260252	1	*Coil Assembly, Field				
4	54247025	1	*Armature				
5	54245339	1	*Retention Kit (Includes Jump Ring, & Thrust Collar)				
6	76889	1	*Switch, Solenoid	12	54160560	1	*Washer, Spire
7	54244686	1	*Drive Assembly				
8	54261090	1	*Pin, Pivot				
9	54245343	1	*Bushing Kit (Includes Comm End & Drive End Bushings)				
10	60600569	1	*Sealing Kit (Includes Two Grommets, 2 Sealing Caps, Two Gaskets, Sealing Boot, Sealing Piece, Felt Pad & "O" Ring				

* Part Numbers Listed are Lucas

191-1318

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1967044	1	*Armature	5	1940477	2	*Holder, Brush - Ground
2	1852026	1	*Coil Assembly, Field	6	1950546	2	*Holder, Brush - Insulated
3	830622	1	*Drive Assembly	7	1945620	4	*Spring, Brush
4	1906990	4	*Brush	8	1119848	1	*Switch, Solenoid

* Part Numbers Listed are Delco Remy

191-1348

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1945500	1	*Armature	4	1115559	1	*Switch, Solenoid
2	1974929	1	*Coil Assembly, Field	5	1852883	4	*Brush
3	1976884	1	*Drive Assembly	6	1979391	4	*Spring, Brush


* Part Numbers Listed are Delco Remy

191-1349

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1967044	1	*Armature	5	1940477	2	*Holder, Brush - Ground
2	1852026	1	*Coil Assembly, Field	6	1950546	2	*Holder, Brush - Insulated
3	1906990	4	*Brush	7	1115559	1	*Switch, Solenoid
4	1945620	2	*Spring, Brush	8	830622	1	*Drive Assembly


* Part Numbers Listed are Delco Remy

 191-1394

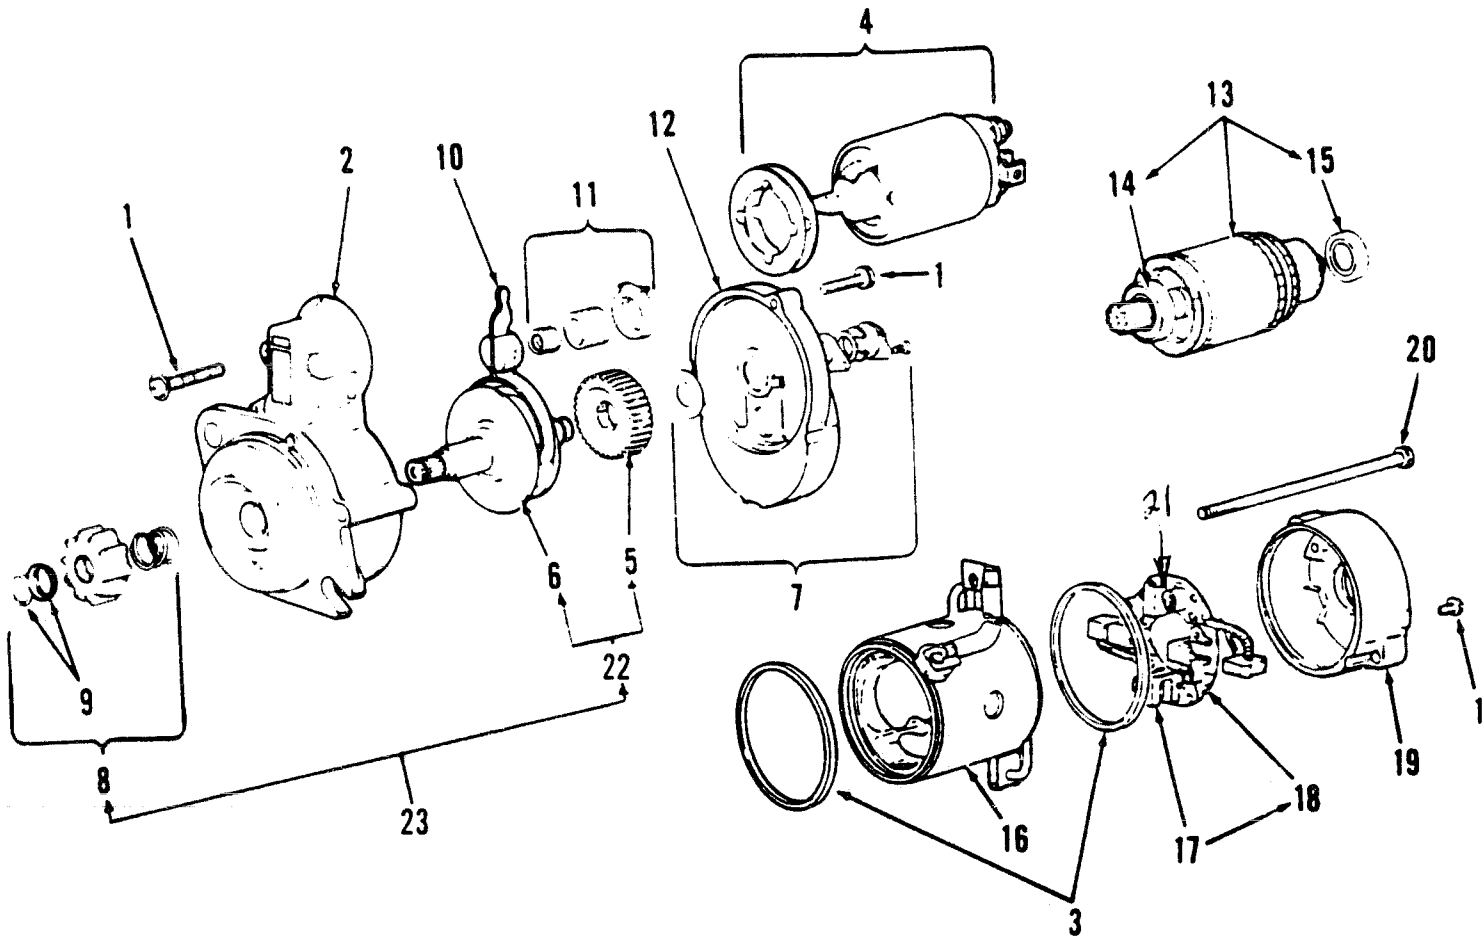

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1450	1	Screw Set	13	191-1438	1	Armature Assembly (Includes Bearings)
2	191-1449	1	Bracket Assembly, Front (Includes Bearing)	14	191-1437	1	Bearing, Center
4	191-1430	1	Switch, Solenoid	15	191-1436	1	Bearing, Rear
5	191-1446	1	Gear	16	191-1435	1	Yoke Assembly (Includes Pole Shoes, Field Coil and Positive Brushes)
6	191-1445	1	Drive Assembly	17	191-1434	1	Holder, Brush (Includes Negative Brushes)
7	191-1444	1	Cover Set (Includes Cover Plate, Washers, Snap Ring and Screws)	18	191-1433	4	Spring, Brush
8	191-1443	1	Pinion Set (Includes Pinion, Spring and Stopper Set)	19	191-1432	1	Bracket, Rear
9	191-1442	1	Stopper Set (Includes Stopper and Ring)	20	191-1431	1	Bolt Set
10	191-1441	1	Lever Assembly	21	191-1945	4	Brush
11	191-1440	1	Spring Set	22	191-1447	1	Gear Set
12	191-1439	1	Bracket Assembly, Center	23	191-1448	1	Drive Assembly

 
191-1398

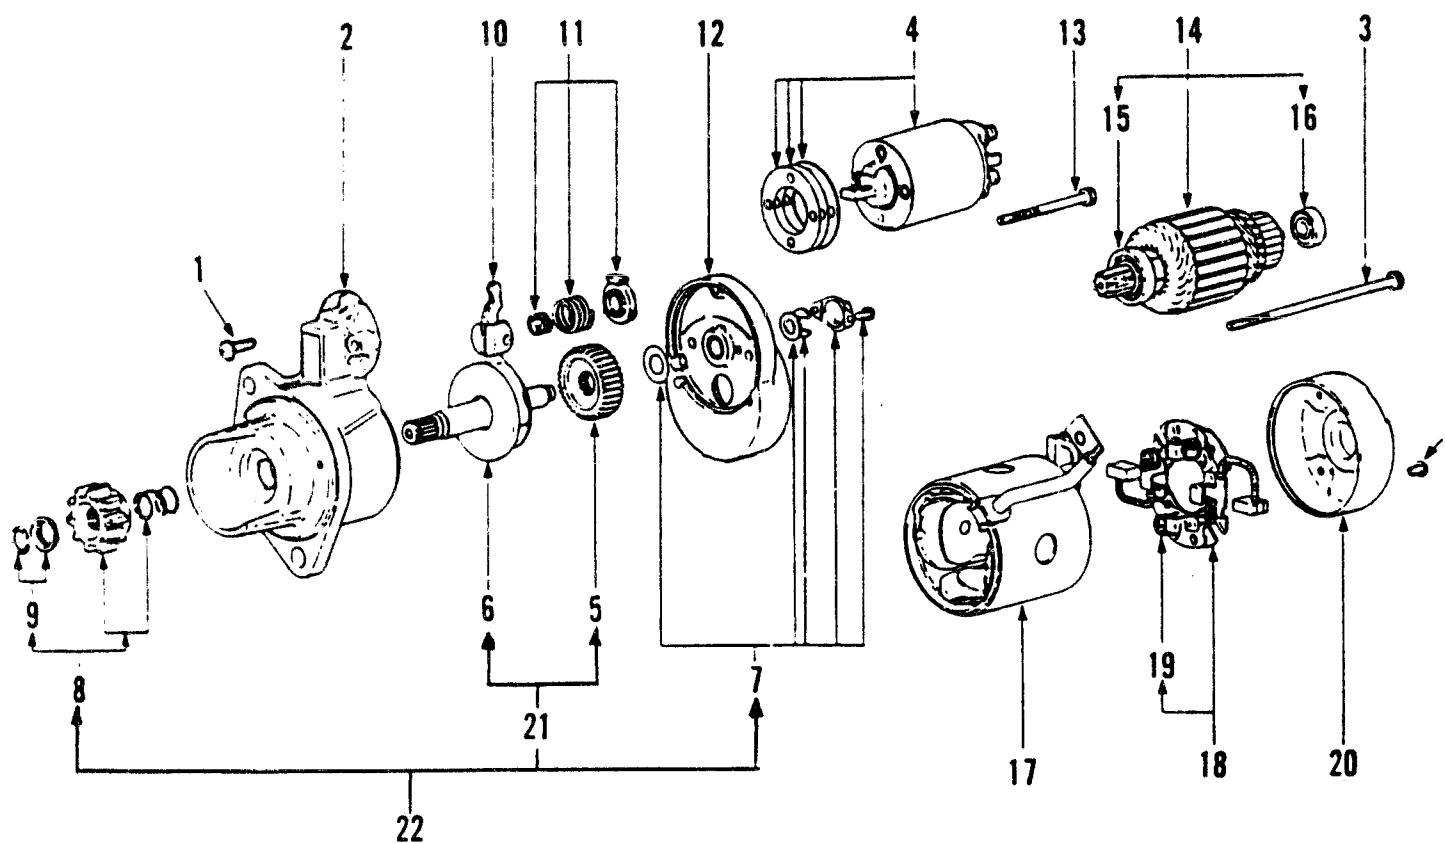

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1458	1	Screw Set
2	191-1459	1	Bracket, Front (Includes Bearing)
3	191-1477	1	Bolt, Thru
4	191-1478	1	Switch, Solenoid
5	191-1462	1	Gear
6	191-1463	1	Drive
7	191-1464	1	Cover Set
8	191-1465	1	Pinion Set (Includes Stopper Set)
9	191-1466	1	Stopper Set
10	191-1467	1	Lever
11	191-1468	1	Spring Set
12	191-1469	1	Bracket, Center
13	191-1470	1	Bolt, Thru


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
14	191-1471	1	Armature Assembly (Includes Center, & Rear Bearings)
15	191-1472	1	Bearing, Center
16	191-1473	1	Bearing, Rear
17	191-1474	1	Yoke Assembly (Includes Pole Shoes Field Coil & Positive Brushes)
18	191-1475	1	Holder Assembly, Brush (Includes Negative Brushes & Brush Springs)
19	191-1007	4	Spring, Brush
20	191-1476	1	Bracket, Rear
21	191-1461	1	Gear Set
22	191-1460	1	Drive Assembly

 191-1399

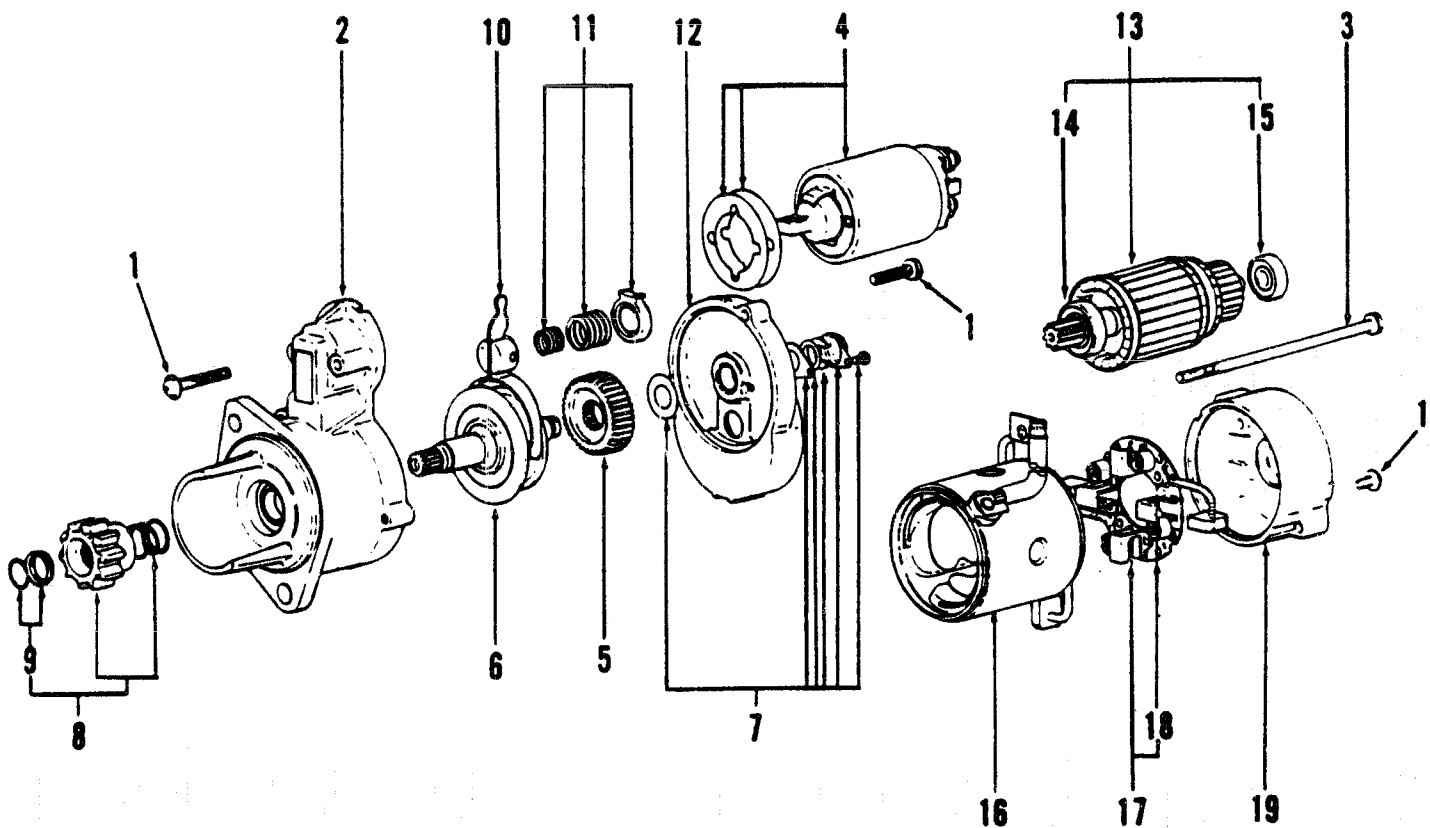

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1450	1	Screw Set	12	191-1439	1	Bracket, Center
2	191-1479	1	Bracket, Front (Includes Bearing)	13	191-1438	1	Armature Assembly (Includes Center, & Rear Bearings)
3	191-1431	1	Bolt Set	14	191-1437	1	Bearing, Center
4	191-1486	1	Switch, Solenoid	15	191-1436	1	Bearing, Rear
5	191-1446	1	Gear	16	191-1485	1	Yoke Assembly (Includes Pole Shoes Field Coil & Positive Brushes)
6	191-1482	1	Drive Assembly	17	191-1434	1	Holder Assembly, Brush (Includes Negative Brushes & Brush Springs)
7	191-1444	1	Cover Set	18	191-1433	4	Spring, Brush
8	191-1483	1	Pinion Set (Includes Stopper Set)	19	191-1432	1	Bracket, Rear
9	191-1442	1	Stopper Set				
10	191-1484	1	Lever				
11	191-1440	1	Spring Set				

 
191-1550

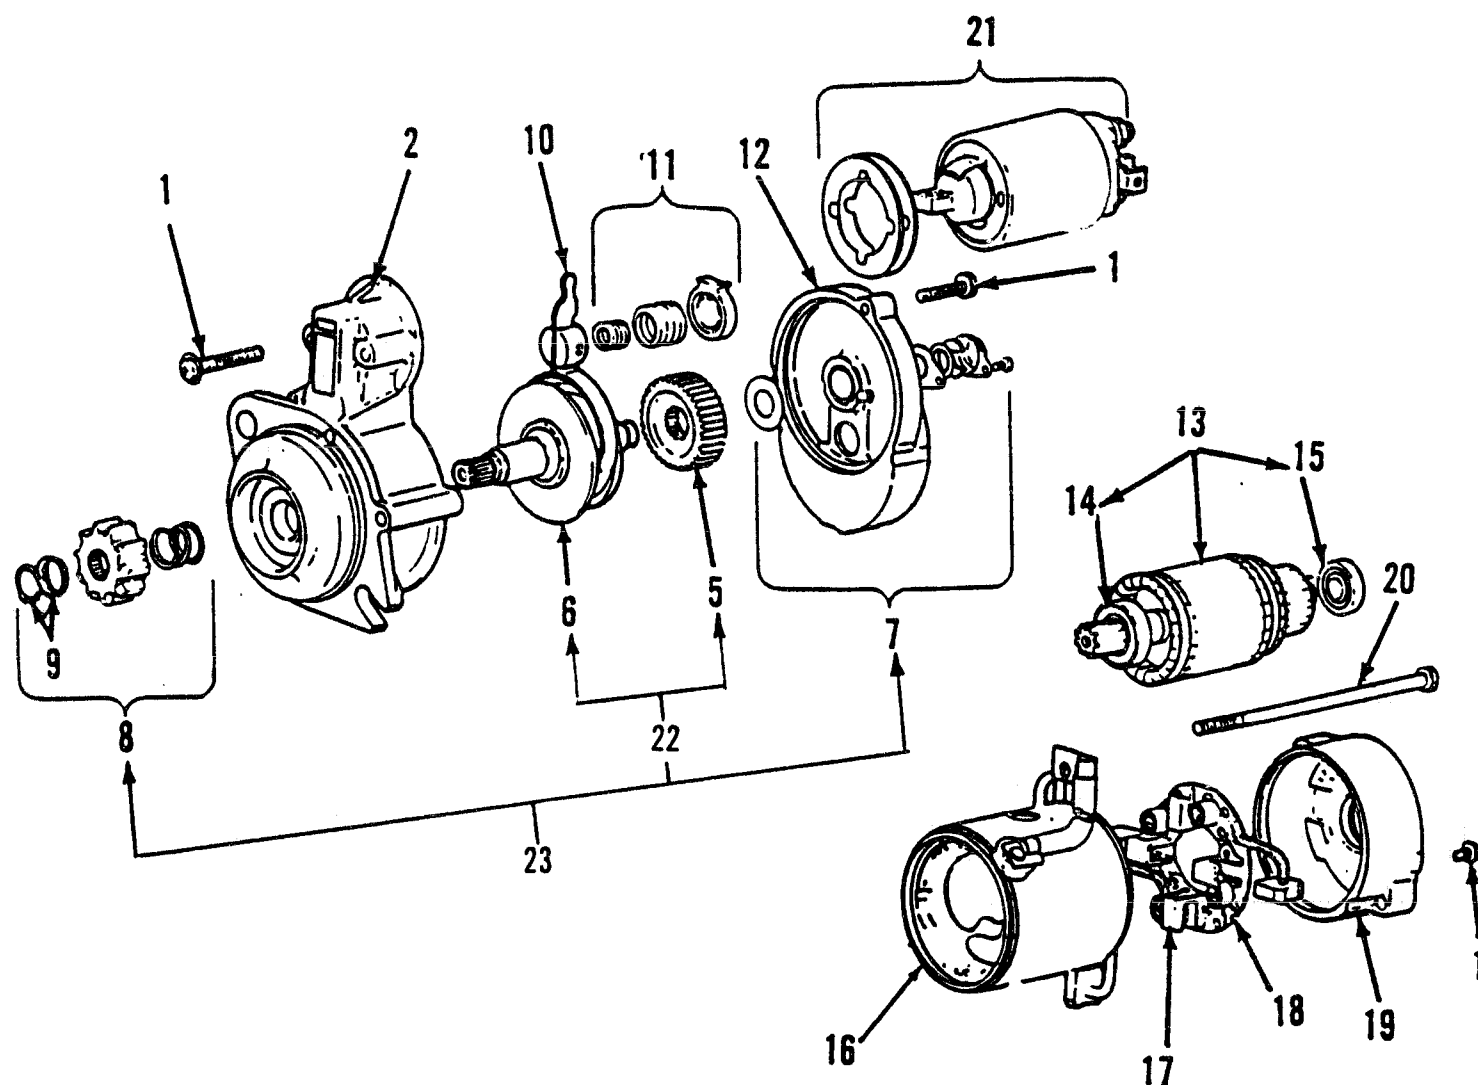

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1450	1	Screw Set
2	191-1449	1	Bracket Assembly, Front (Includes Bearing)
5	191-1446	1	Gear
6	191-1445	1	Drive
7	191-1444	1	Cover Set, Rear (Includes Cover, Plate, Washers, Screws and Snap Ring)
8	191-1443	1	Pinion Set (Includes Pinion, Spring & Stopper Set)
9	191-1442	1	Stopper Set (Includes Stopper & Ring)
10	191-1441	1	Lever
11	191-1440	1	Spring Set
12	191-1439	1	Bracket, Center


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
13	191-1606	1	Armature (Includes Bearings)
14	191-1437	1	Bearing, Sleeve - Center
15	191-1436	1	Bearing, Sleeve - Rear
16	191-1607	1	Yoke (Includes Pole Shoes, Field Coil, Positive Brushes)
17	191-1608	1	Holder, Brush (Includes Negative Brushes)
18	191-1433	4	Spring, Brush
19	191-1432	1	Bracket, Rear
20	191-1431	1	Bolt Set
21	191-1609	1	Switch, Solenoid (Includes Shims)
22	191-1447	1	Gear Set
23	191-1448	1	Drive Assembly

 191-1567

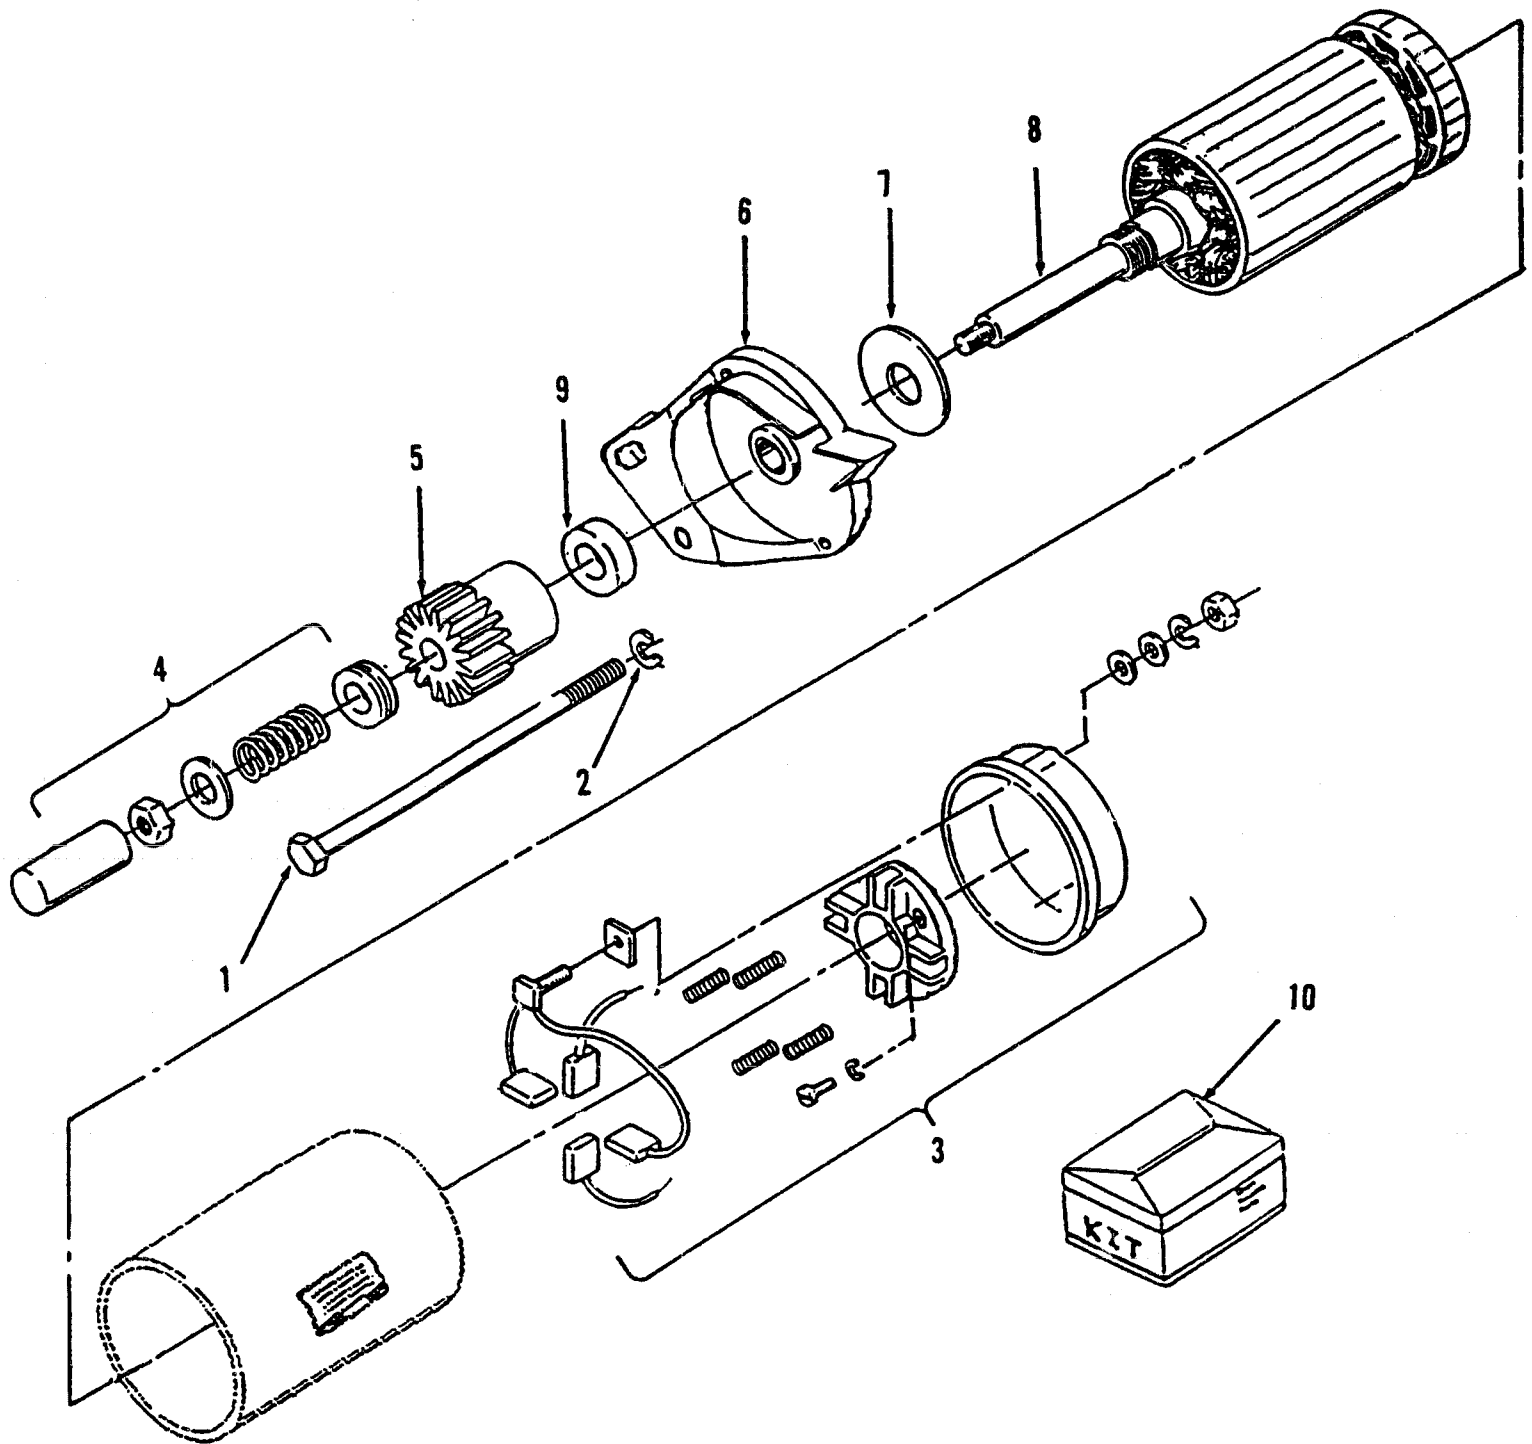

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1157	2	Bolt, Hex Head	5	191-1036	1	Gear, Drive
2	850-0040	2	Washer, Lock - Spring (1/4")	6	191-1597	1	Plate, End-Cap - Front
3	191-1532	1	Cap Assembly, End (Includes Cap, Brushholder, Springs, Brushes, Terminal Hardware)	7	191-1038	1	Washer, Thrust
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut and Washer)	8	191-1039	1	Armature
				9	191-1534	1	Seal, Dust
				10	191-1533	1	Repair Kit (Includes Brush With Stud, Springs & Brushes)

 191-1587

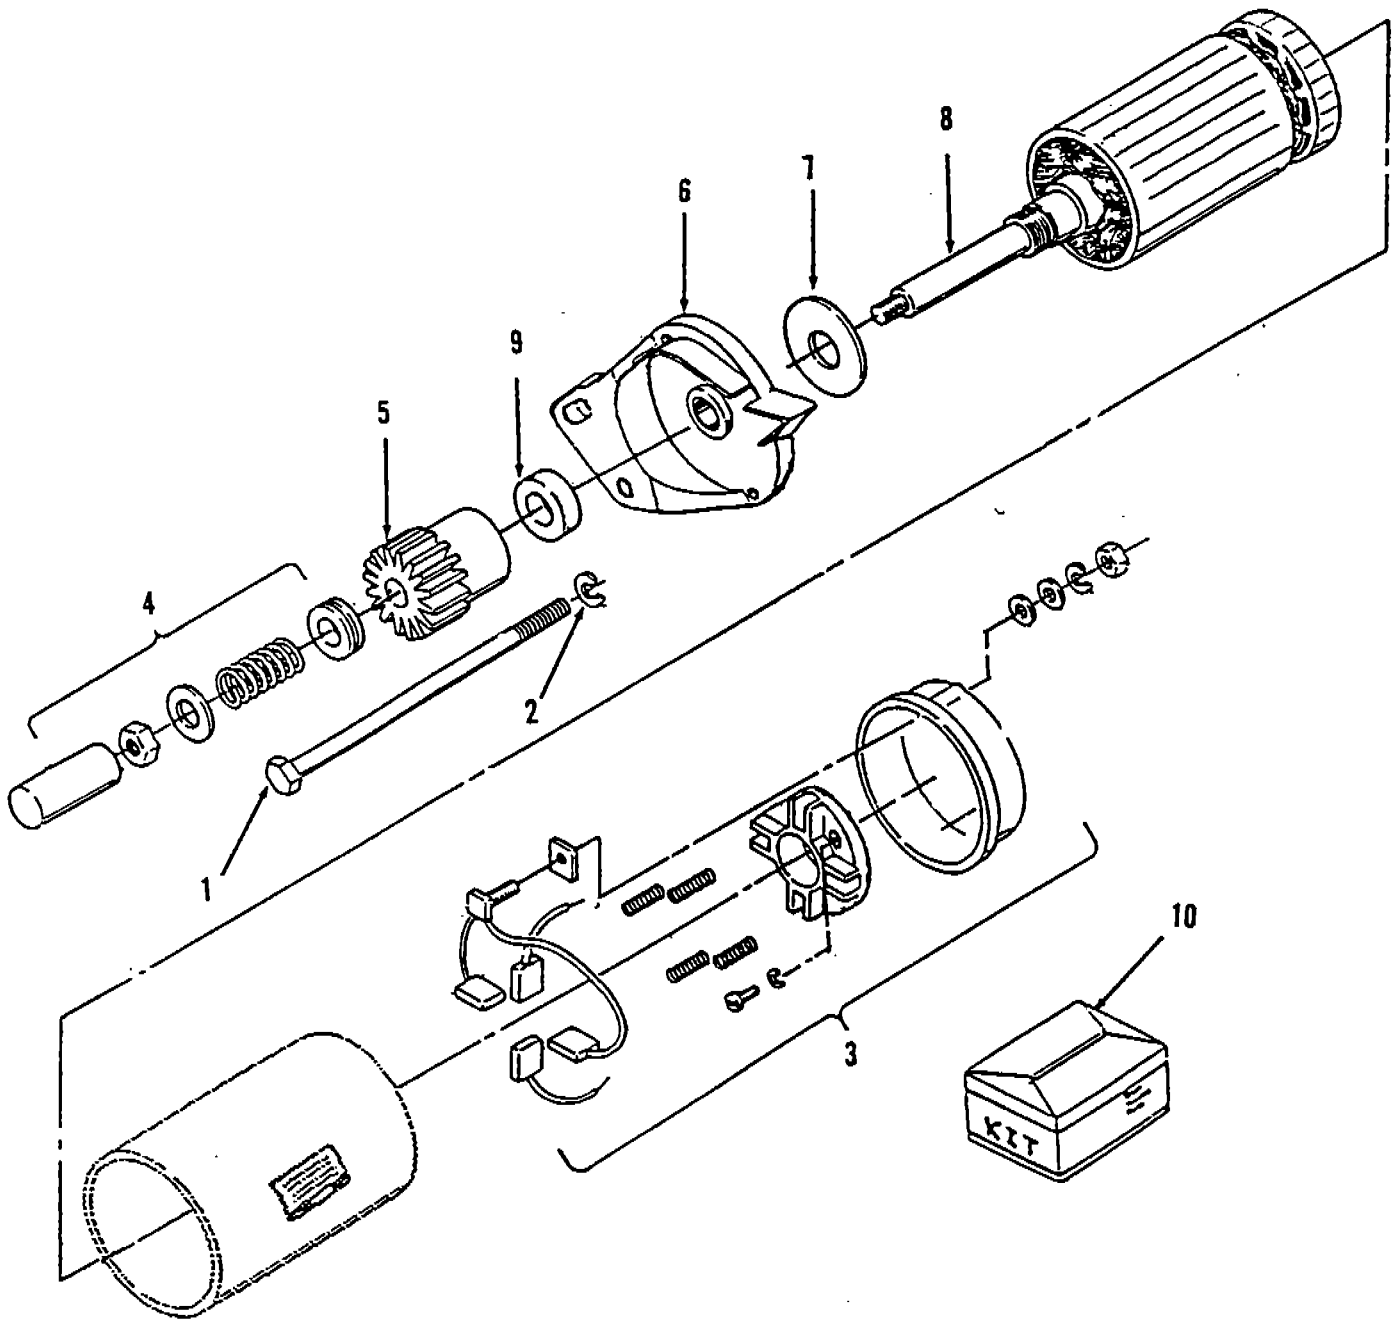

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1157	2	Bolt, Hex Head	5	191-1156	1	Gear, Drive
2	850-0040	2	Washer, Lock - Spring (1/4")	6	191-1597	1	Plate, End-Cap - Front
3	191-1155	1	Cap Assembly, End (Includes Cap, Brushholder, Springs, Brushes, Terminal Hardware)	7	191-1038	1	Washer, Thrust
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut and Washer)	8	191-1154	1	Armature
				9	191-1534	1	Seal, Dust
				10	191-1222	1	Repair Kit (Includes Brush With Stud, Springs & Brushes)


191-1588

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	1945840	1	*Armature
2	1945853	1	*Coil Assembly, Field
3	1976884	1	*Drive Assembly

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	1115559	1	*Switch, Solenoid
5	1852888	4	*Brush
6	1984979	4	*Spring, Brush

* Part Numbers Listed are Delco-Remy

 
191-1099

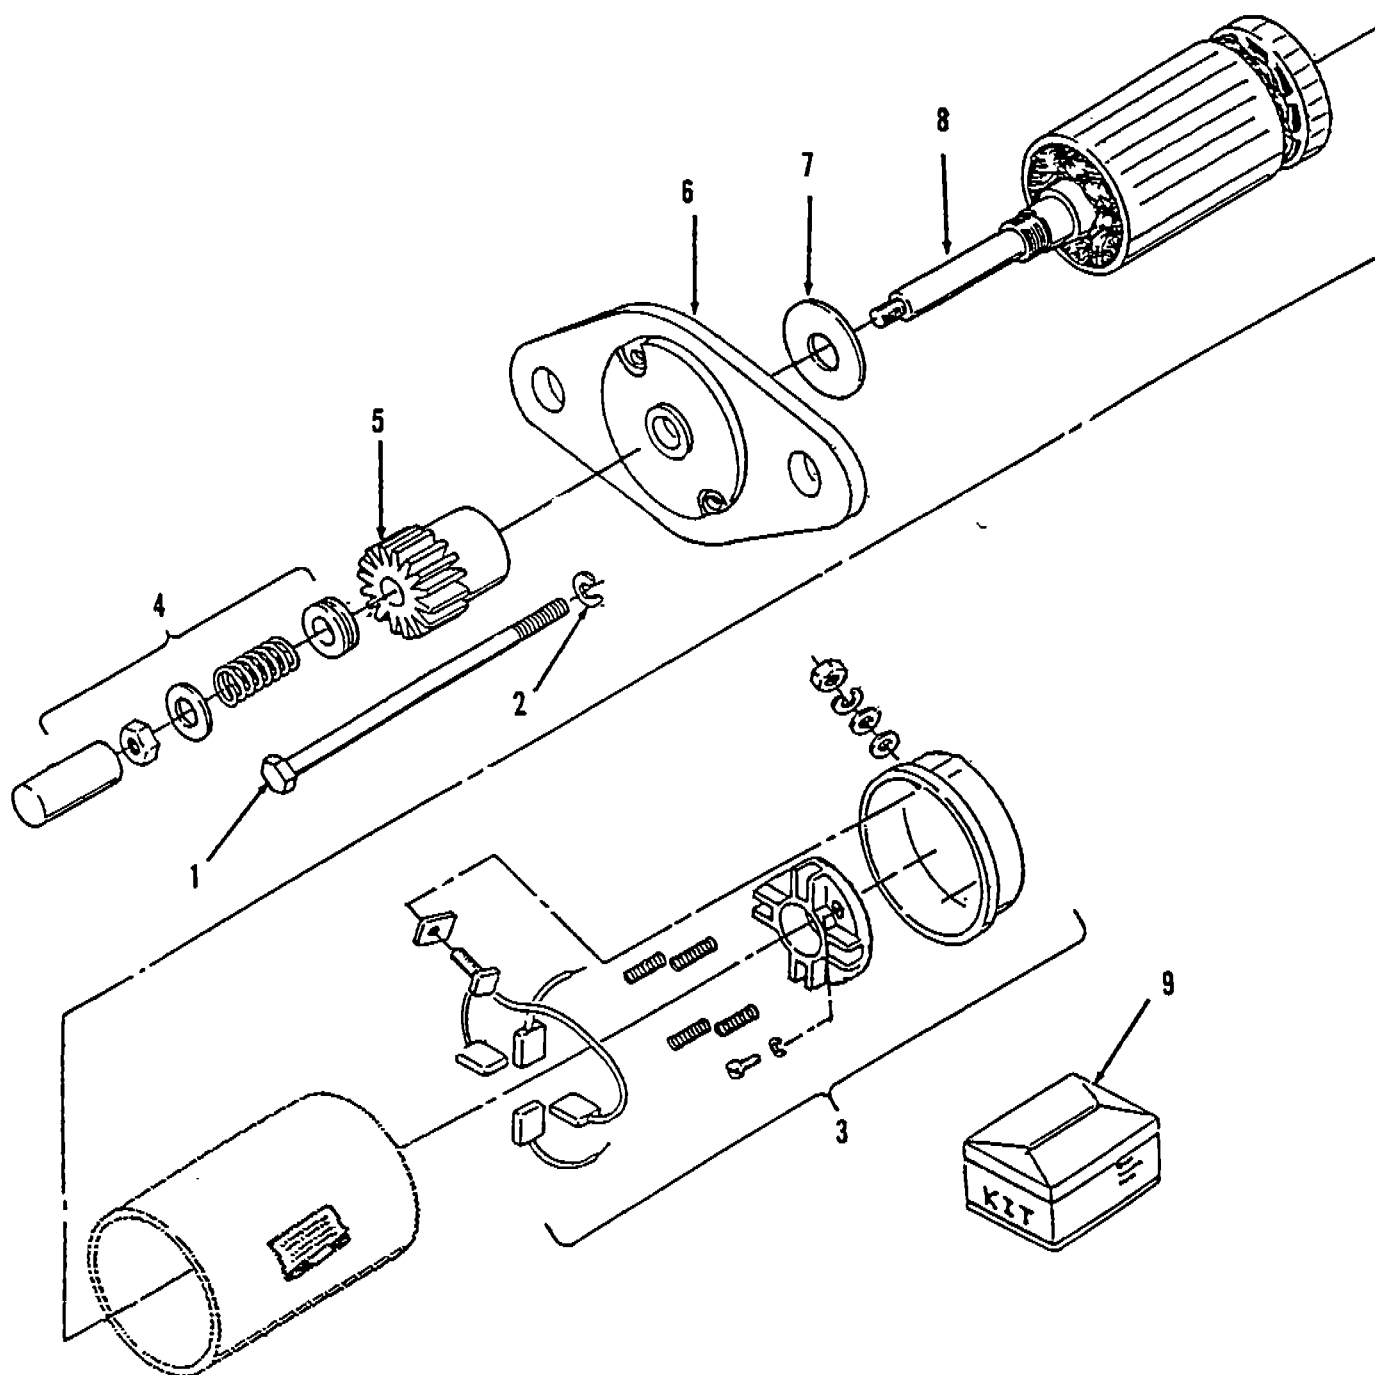

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1048	2	Bolt, Hex Head	5	191-1156	1	Gear, Drive
2	850-0040	2	Washer, Lock - Spring (1/4")	6	191-1633	1	Plate, End-Cap - Front
3	191-1040	1	Cap Assembly, End (Includes Cap, Brushholder, Springs, Brushes, Terminal Hardware)	7	191-1038	1	Washer, Thrust
4	191-1359	1	Cover Assembly (Includes Dust	8	191-1039	1	Armature
				9	191-1041	1	Repair Kit (Includes Brush

BGD

 191-1630 → Sps to 191-2132 → Sps to 191-2158

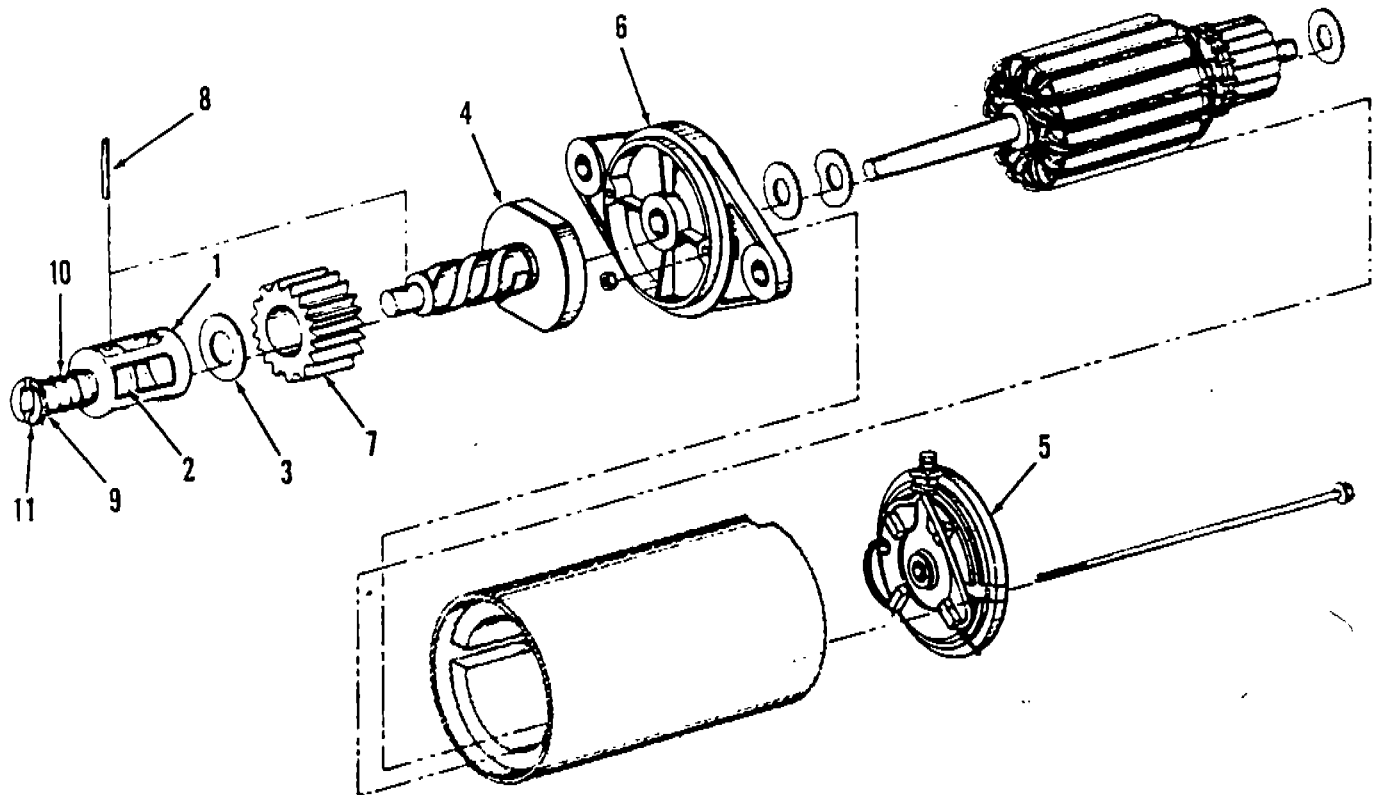


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1817	1	Cover, Spring
2	191-1818	1	Retainer, Clutch
3	191-1785	1	Washer, Drive
4	191-1784	1	Clutch & Spline
5	191-1781	1	Cap, End
6	191-1776	1	Cap, End - Drive
7	191-1819	1	Gear, Drive

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8	191-1786	1	Pin, Roll
9	191-1822	1	Washer, Pinion
10	191-1820	1	Spring, Pinion
11	191-1821	1	Retainer, Spring
12			*Brush
	398883	2	Negative
	398884	2	Positive

* Part Numbers Listed are Briggs & Stratton
191-2129 Kit

 191-1667

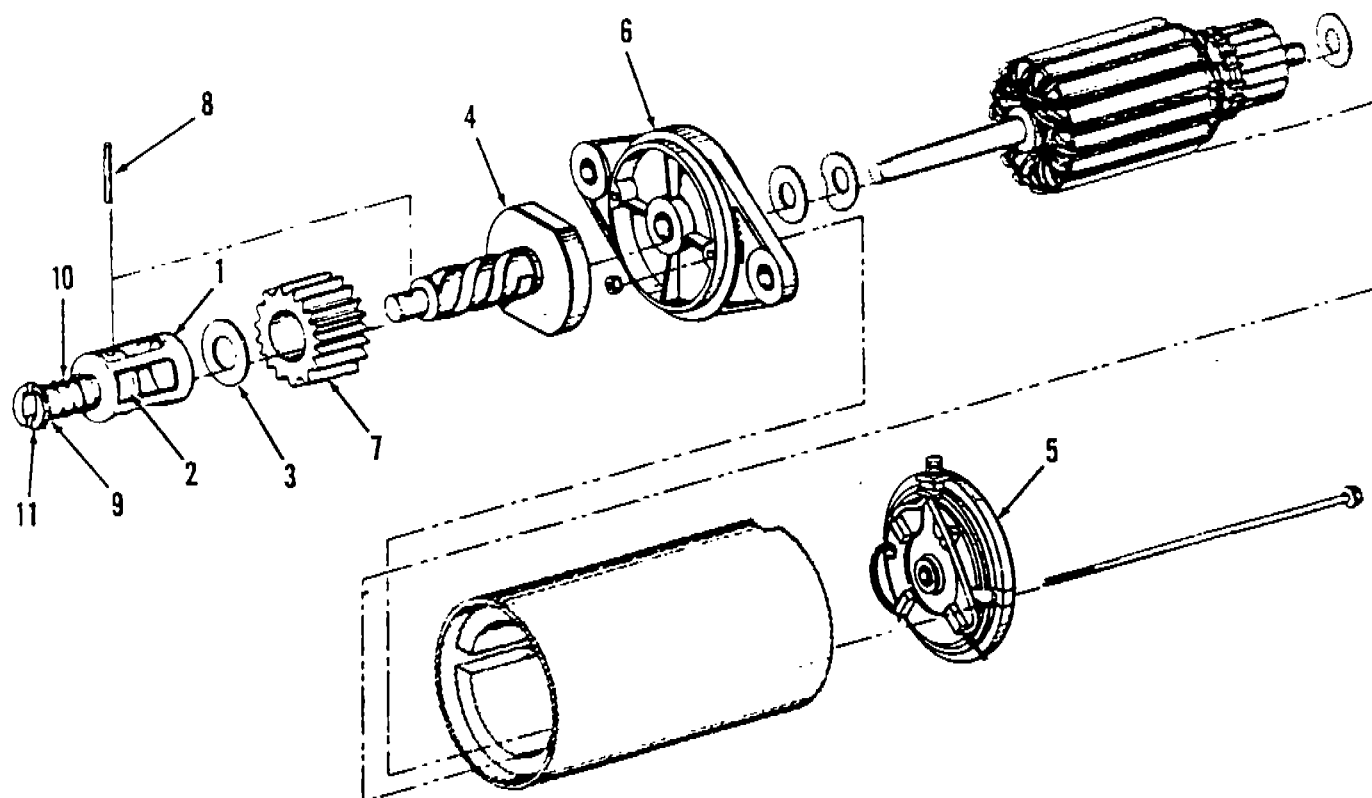


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1817	1	Cover, Spring
2	191-1818	1	Retainer, Clutch
3	191-1785	1	Washer, Drive
4	191-1784	1	Clutch & Spline
5	191-1781	1	Cap, End
6	191-1776	1	Cap, End - Drive
7	191-1819	1	Gear, Drive

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8	191-1786	1	Pin, Roll
9	191-1822	1	Washer, Pinion
10	191-1820	1	Spring, Pinion
11	191-1821	1	Retainer, Spring
12			*Brush
	398883	2	Negative
	398884	2	Positive

* Part Numbers Listed are Briggs & Stratton

 Starter Components → Sps to 191-2132 → Sps to 191-2158

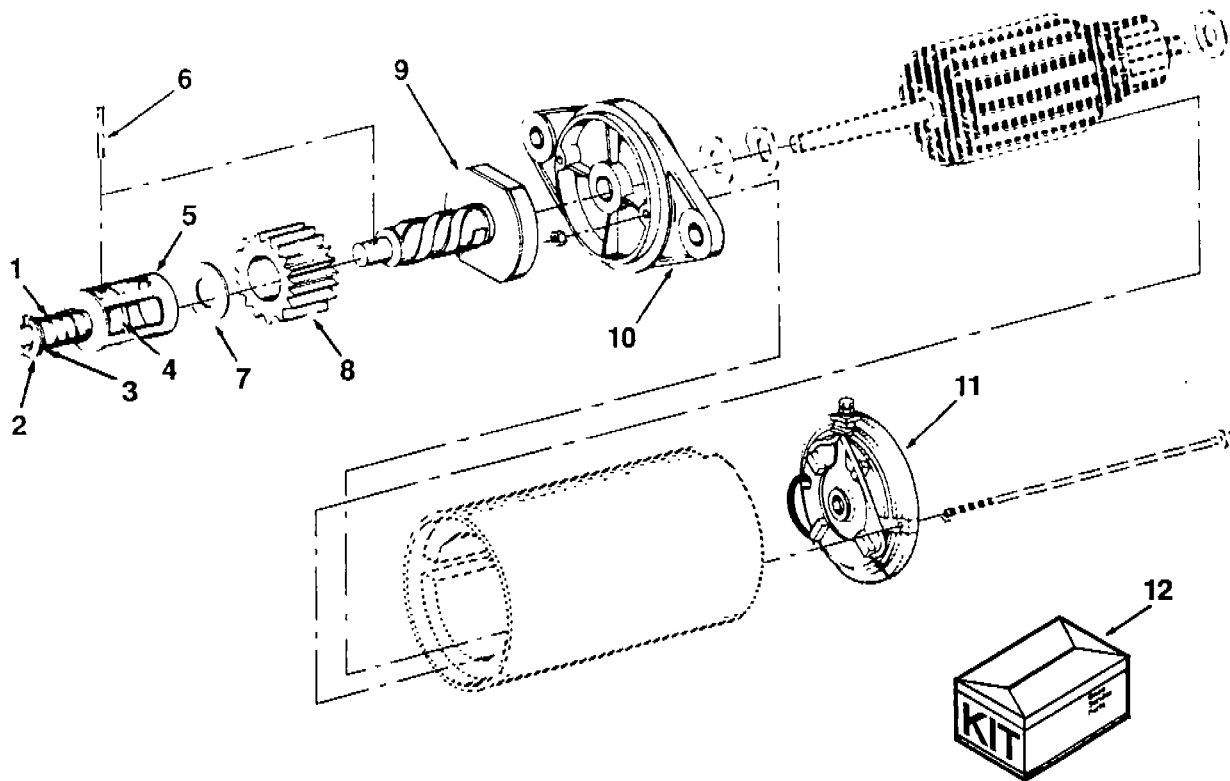


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	191-1630	1	Starter (B1)
-1	191-1820	1	*Spring, Pinion
-2	191-1821	1	*Retainer, Spring
-3	191-1822	1	*Washer, Pinion
-4	191-1818	1	*Retainer, Clutch
-5	191-1817	1	*Cover, Spring
-6	191-1786	1	*Pin, Roll
-7	191-1785	1	*Washer, Drive
-8	191-1819	1	*Gear, Starter

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
-9	191-1784	1	*Clutch and Spline
-10	191-1776	1	*Cap, Drive End
-11	191-1781	1	*Cap, End
12	191-2129	1	Kit, Starter Drive (Includes Parts Marked *)


* - Parts Included in Starter

 191-1682
-01 Thru -05

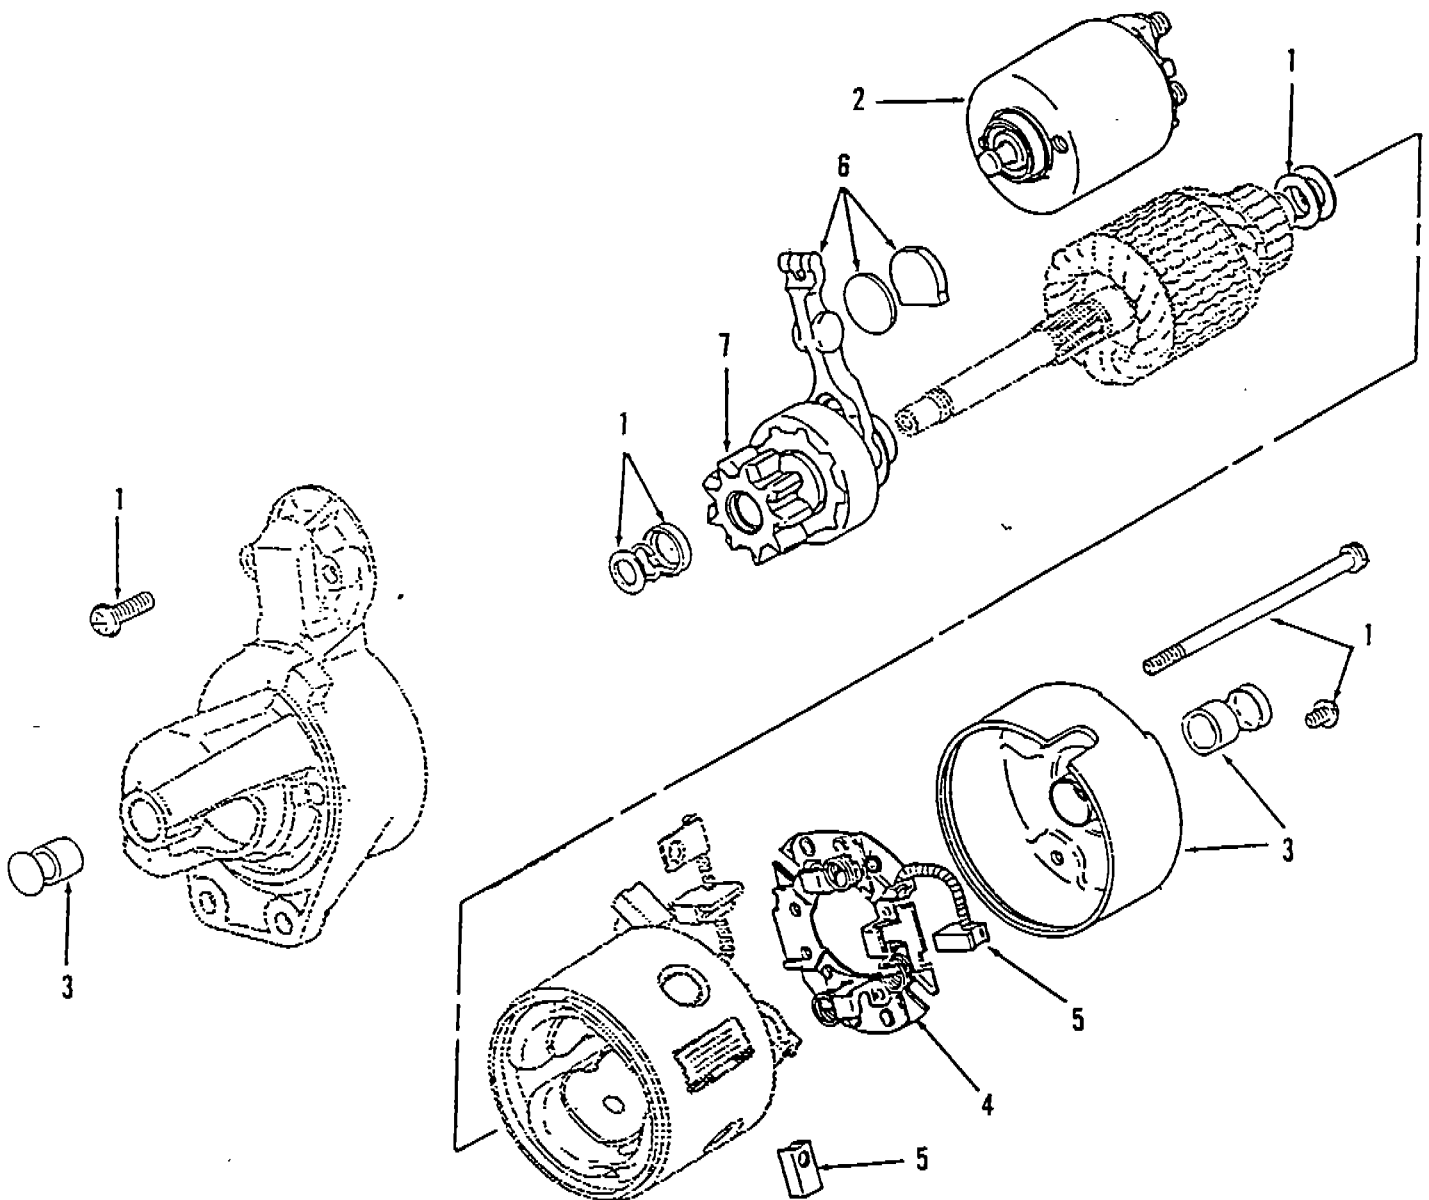

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1765	1	Hardware Kit, (Includes two Solenoid Mounting Screws, two Thru Bolts, Armature Shims, Pinion Collar and Retaining Ring)	4	191-1764	1	Holder, Brush (Includes Negative Brush)
2	191-1809	1	Solenoid Kit (Includes Solenoid and Spring Plunger)	5	191-1763	1	Brush Kit (Includes two Negative & two Positive Brushes)
3	191-1762	1	Bushing Kit (Includes Rear Cap with Bushing and Front Bushing)	6	191-1766	1	Lever Kit, Shift (Includes Lever, Wear Plate & Rubber Plug)
				7	191-1767	1	Drive Assembly

 
191-1797

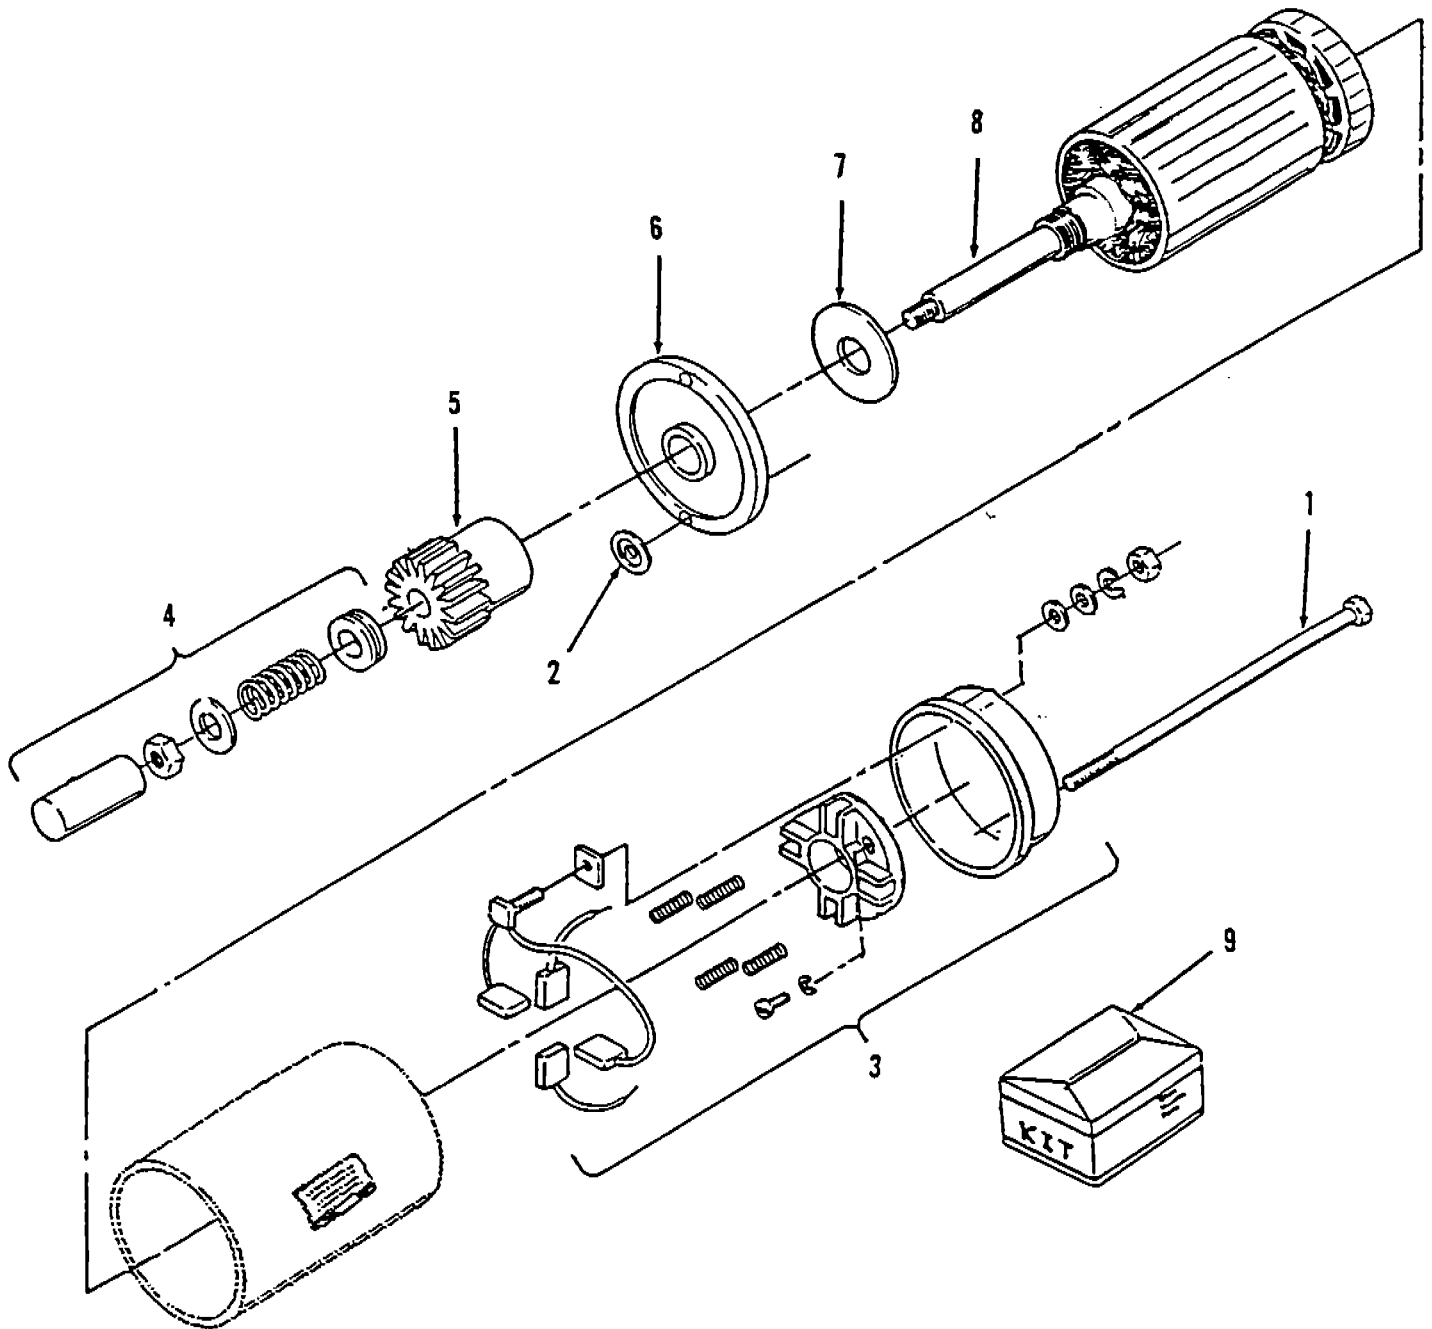

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1048	2	Bolt, Hex Head
2	870-0438	2	Retainer, Bolt
3	191-1532	1	Cap Assembly, End (Includes Cap, rusholder, Springs, Brushes, Terminal Hardware)
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-1156	1	Gear, Drive
6	191-1840	1	Plate, End-Cap - Front
7	191-1038	1	Washer, Thrust
8	191-1039	1	Armature
9	191-1841	1	Repair Kit (Includes Brush With Stud, Springs and Brushes)

 Starter Components

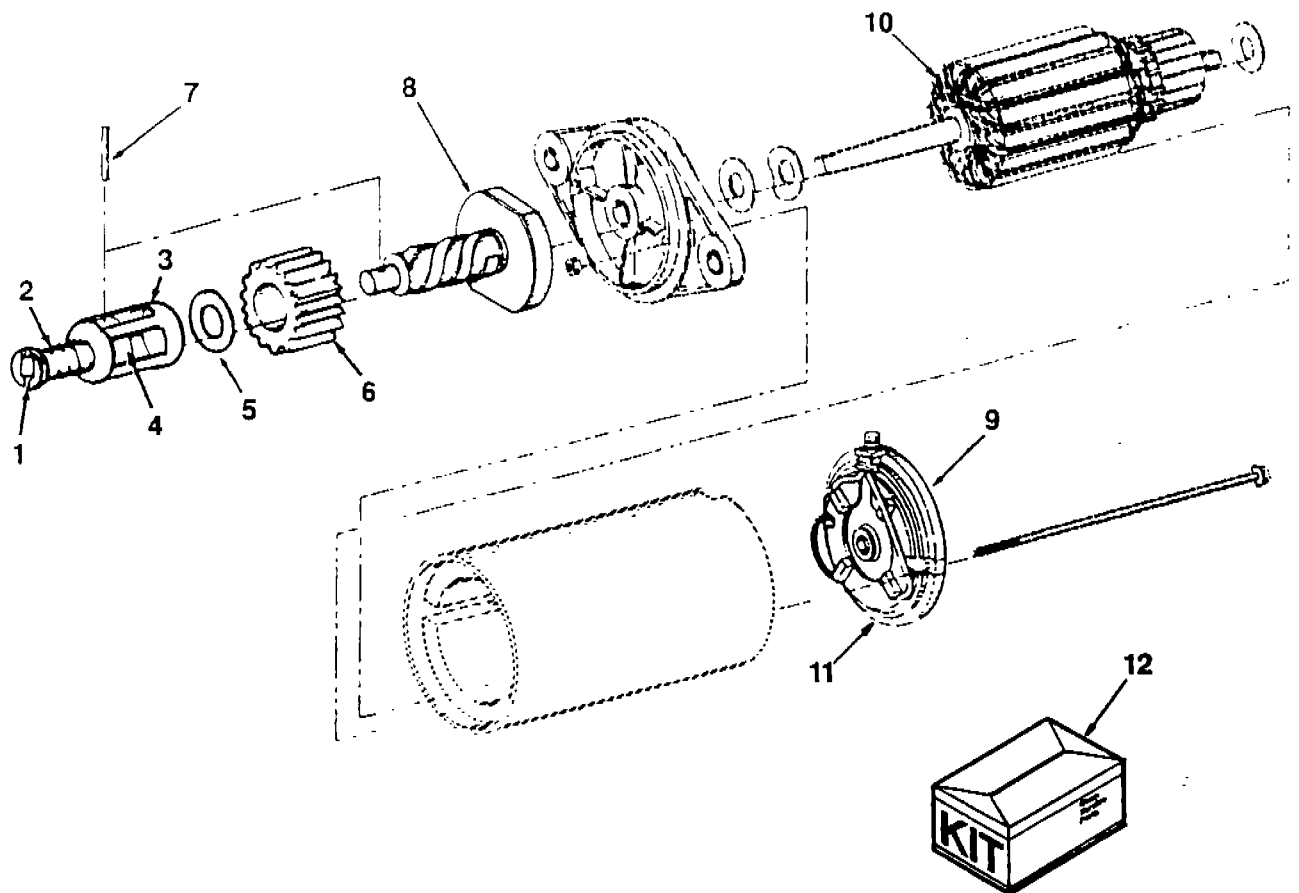


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	191-1798	1	Starter, Complete (B1)
✓ 1	191-1821	1	Retainer, Spring
✓ 2	191-1870	1	Spring, Pinion
✓ 3	191-1863	1	Cover, Spring
✓ 4	191-1864	1	Retainer, Clutch
✓ 5	191-1865	1	Washer
✓ 6	191-1868	1	Gear, Starter
✓ 7	191-1869	1	Pin, Spiral Roll

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
✓ 8	191-1866	1	Clutch and Spline
✓ 9	191-1867	1	Cap, End (Includes Brushes)
10	191-2155	1	Armature
11	191-2156	1	Cap Assy, Commutator
12	191-2157	1	Drive Kit (Includes Retainer, washers, Spring Cover, Clutch Retainer, Drive Pin)

* - Parts Included in Carburetor. ~~Cap Assy, Comm~~
Ret Pin, Pin on Spring

 
191-1803

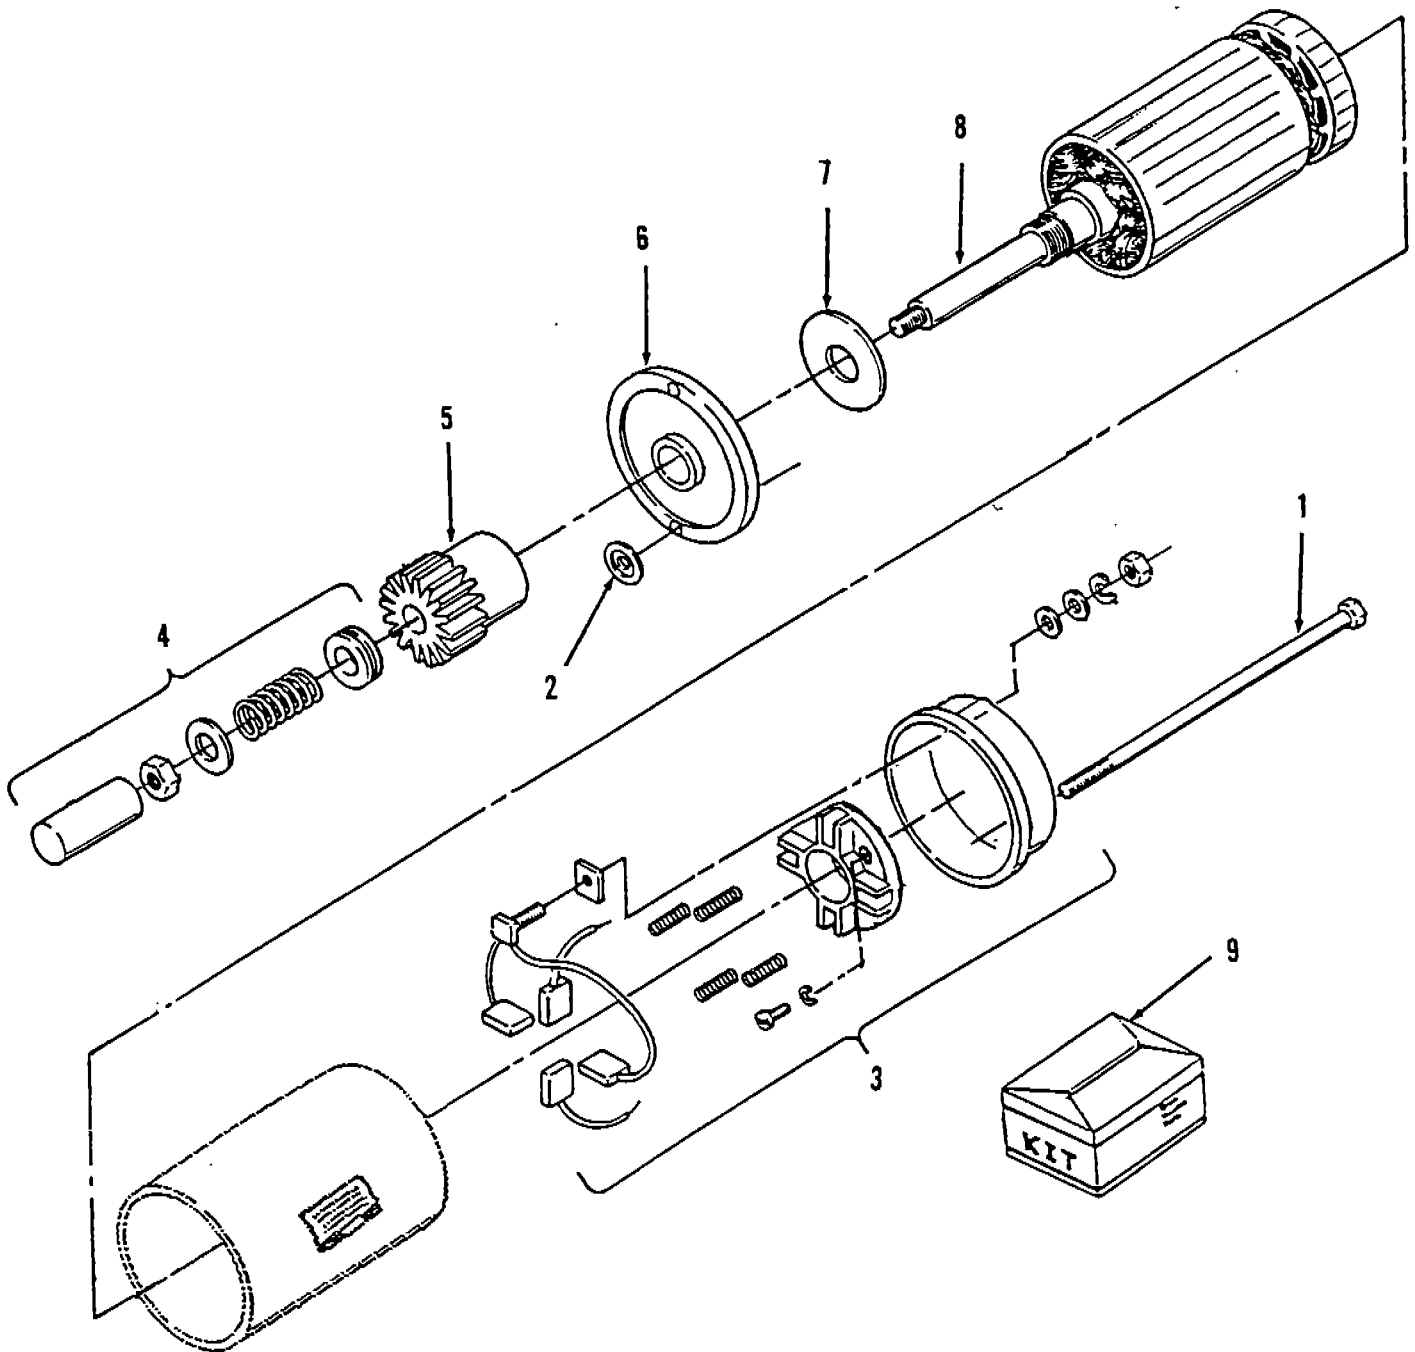

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1048	2	Bolt, Hex Head
2	870-0438	2	Retainer, Bolt
3	191-1532	1	Cap Assembly, End (Includes Cap, rusholder, Springs, Brushes, Terminal Hardware)
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	191-1156	1	Gear, Drive
6	191-1840	1	Plate, End-Cap - Front
7	191-1038	1	Washer, Thrust
8	191-1039	1	Armature — 7.525" \pm .00
9	191-1841	1	Repair Kit (Includes Brush With Stud, Springs and Brushes)

 
191-1807

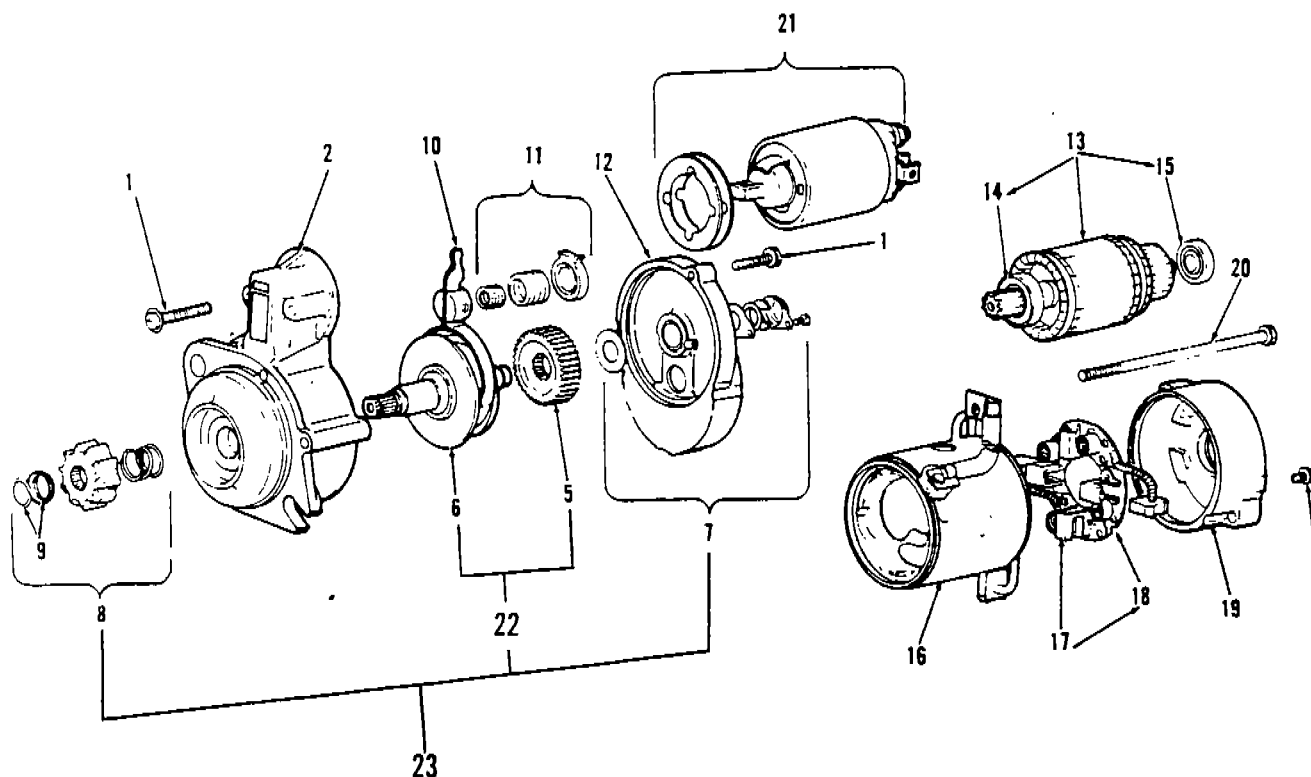

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1450	1	Screw Set
2	191-1449	1	Bracket Assembly, Front (Includes Bearing)
5	191-1446	1	Gear
6	191-1445	1	Clutch
7	191-1444	1	Cover Set (Includes Cover, Plate, Washers, Snap Ring, & Screws)
8	191-1443	1	Pinion Set (Includes Pinion, Spring, & Stopper Set)
9	191-1442	1	Stopper Set (Includes Stopper & Ring)
10	191-1441	1	Lever Assembly
11	191-1440	1	Spring Set
12	191-1439	1	Bracket Assembly, Center

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
13	191-1854	1	Armature Assembly (Includes Bearings)
14	191-1437	1	Bearing, Center
15	191-1436	1	Bearing, Rear
16	191-1853	1	Yoke Assembly, (Includes Pole Shoes, Field Coil & Positive Brushes)
17	191-1852	1	Holder, Brush (Includes Negative Brushes)
18	191-1851	4	Spring, Brush
19	191-1432	1	Bracket, Rear
20	191-1850	1	Bolt Set
21	191-1430	1	Switch, Solenoid
22	191-1447	1	Gear Set
23	191-1448	1	Drive Assembly

 
191-1808
-01 Thru -05

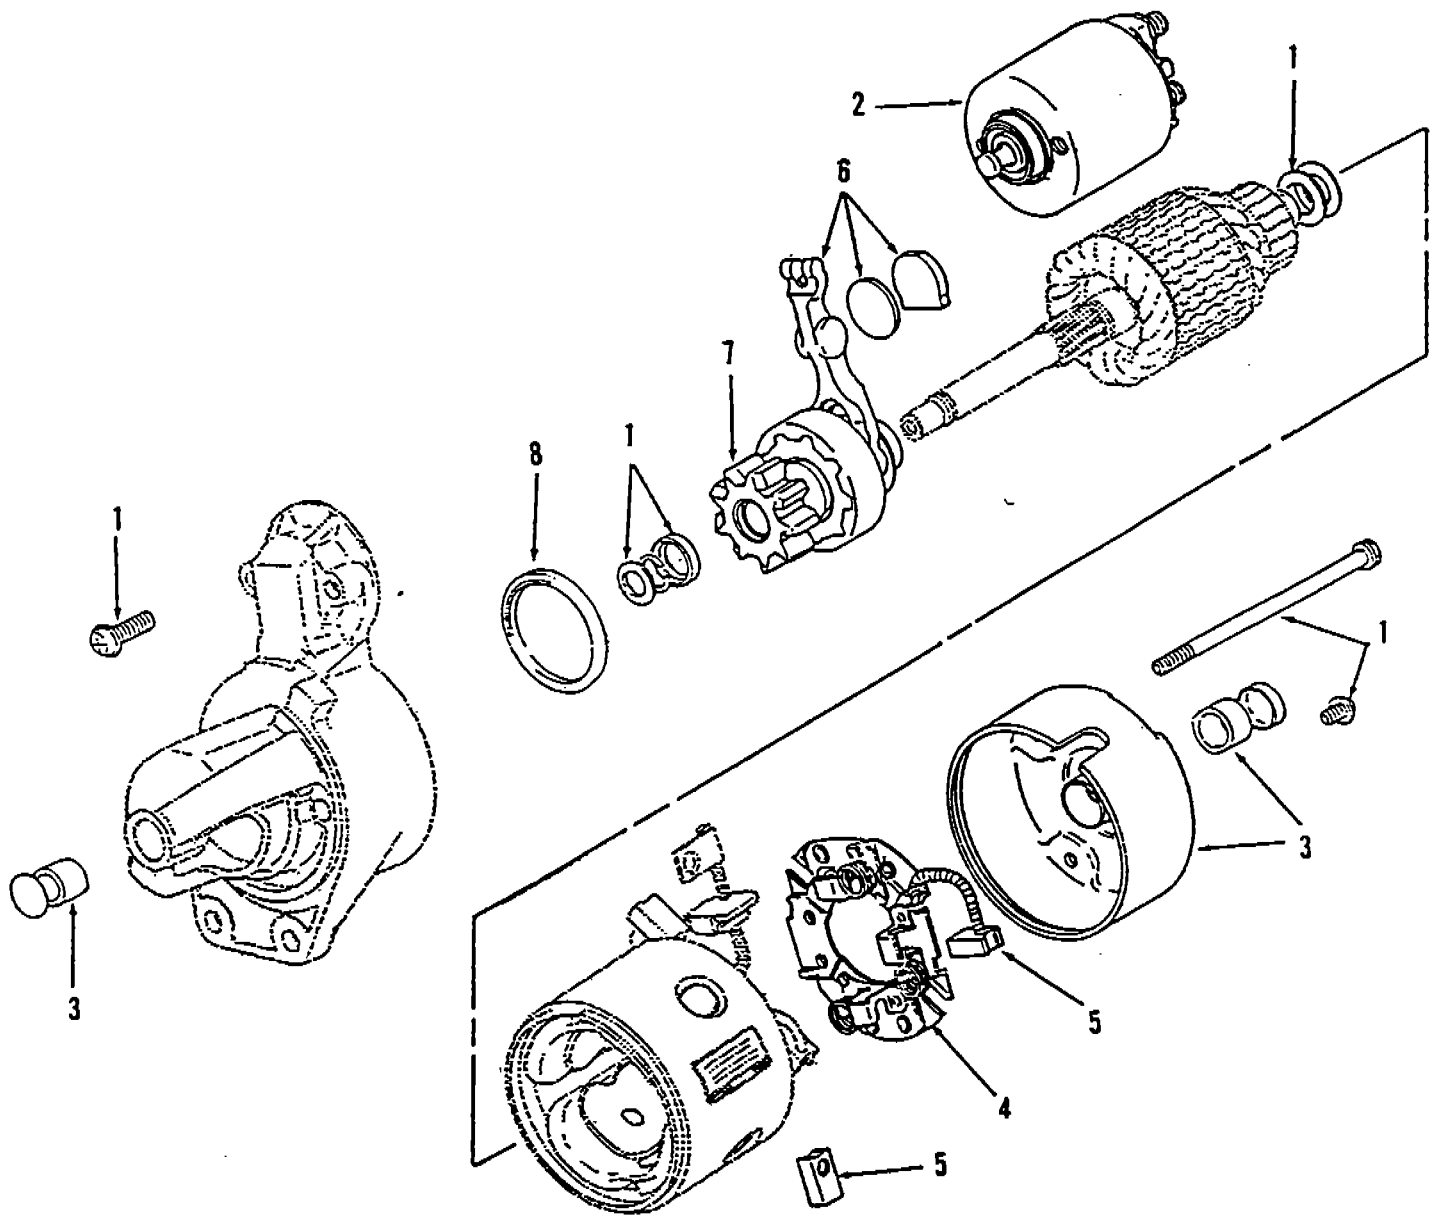

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1765	1	Hardware Kit, (Includes two Solenoid Mounting Screws, two Thru Bolts, Armature Shims, Pinion Collar and Retaining Ring)
2	191-1809	1	Solenoid Kit (Includes Solenoid and Spring Plunger)
3	191-1762	1	Bushing Kit (Includes Rear Cap with Bushing and Front Bushing)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	191-1764	1	Holder, Brush (Includes Negative Brush)
5	191-1763	1	Brush Kit (Includes two Negative & two Positive Brushes)
6	191-1766	1	Lever Kit, Shift (Includes Lever, Wear Plate & Rubber Plug)
7	191-1810	1	Drive Assembly
8	191-1811	1	Seal, Dust

 191-1828

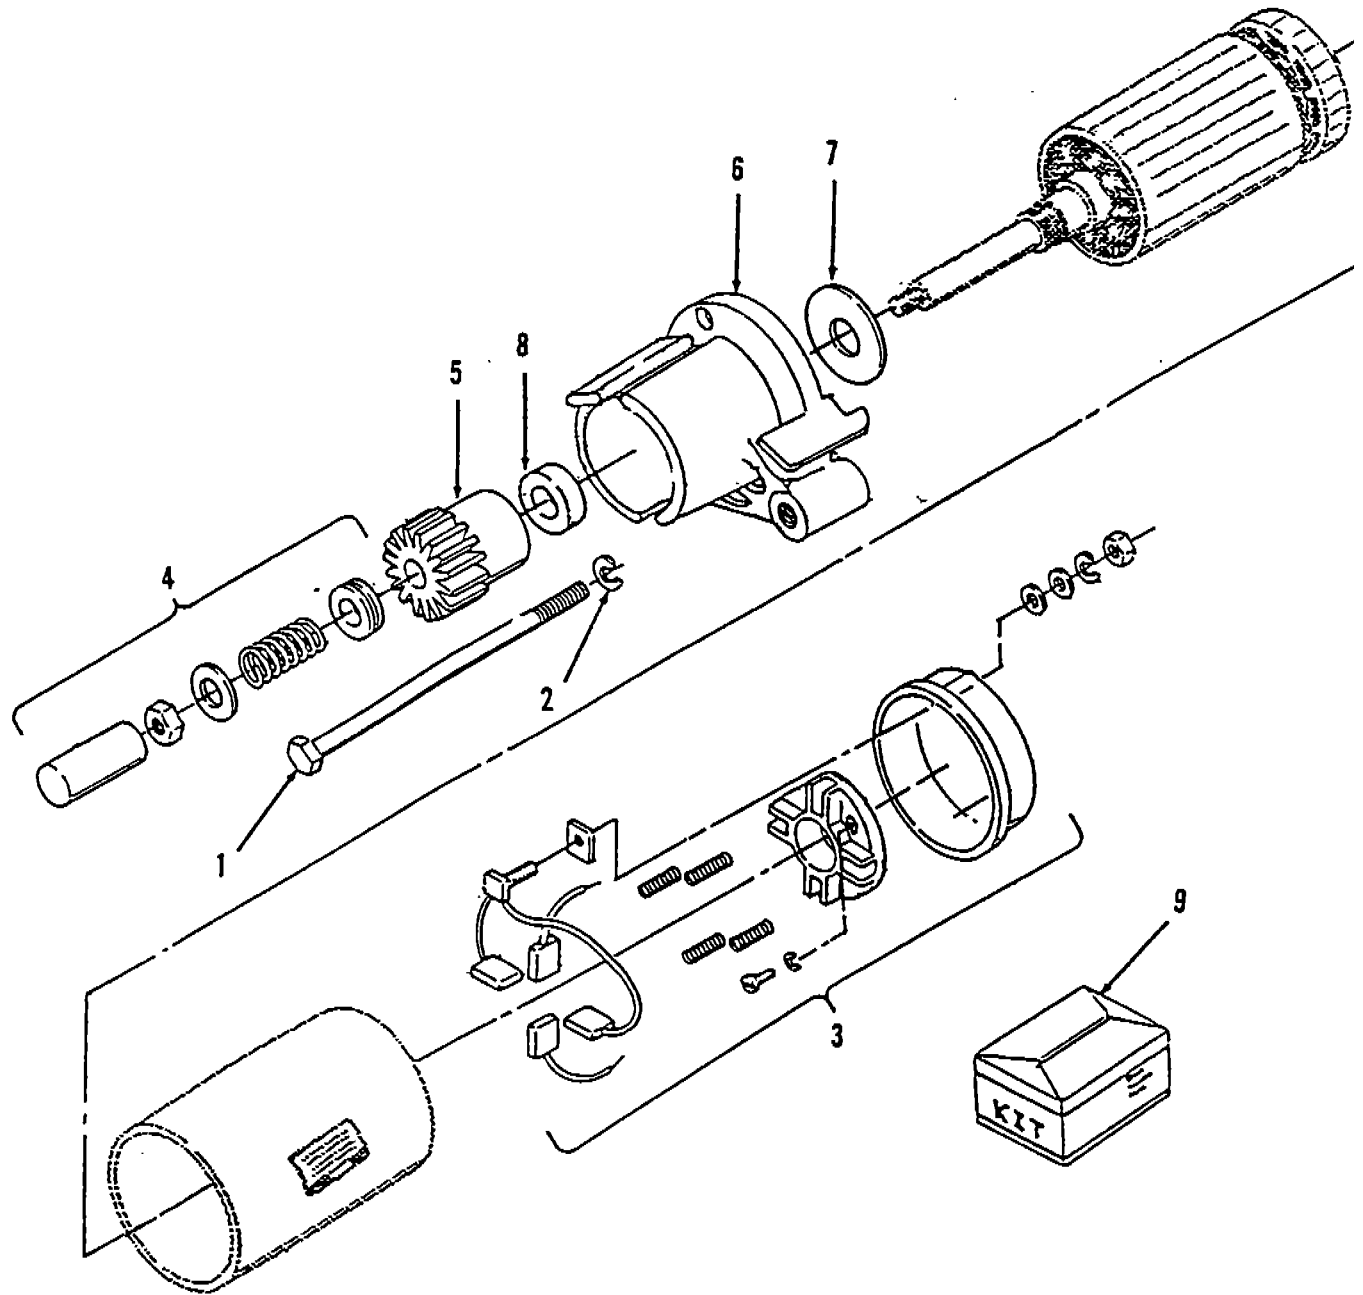


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1048	2	Bolt, Hex Head	5	191-1156	1	Gear, Drive
2	870-0438	2	Retainer, Bolt	6	191-1671	1	Plate, End-Cap - Front
3	191-1532	1	Cap Assembly, End (Includes Cap, brushholder, Springs, Brushes, Terminal Hardware)	7	191-1038	1	Washer, Thrust
4	191-1359	1	Cover Assembly (Includes Dust Cover, Spring, Spacer, Nut & Washer)	8	191-1534	1	Seal, Dust
				9	191-1841	1	Repair Kit (Includes Brush With Stud, Springs and Brushes)

 191-1888

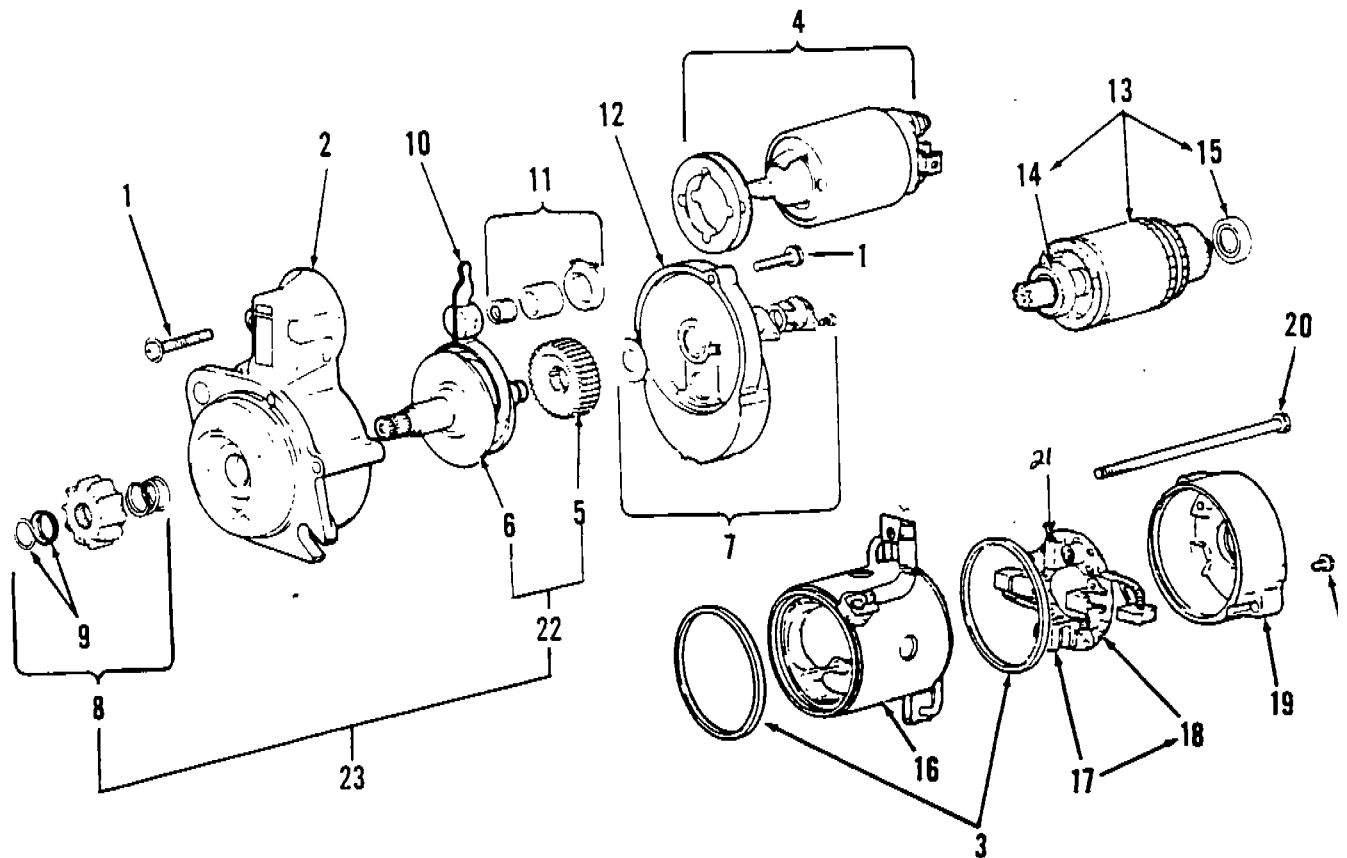

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1450	1	Screw Set	12	191-1439	1	Bracket Assembly, Center
2	191-1449	1	Bracket Assembly, Front (Includes Bearing)	13	191-1438	1	Armature Assembly (Include Bearings)
3	191-1893	2	Ring, "O" - Sealing	14	191-1437	1	Bearing, Center
4	191-1430	1	Switch, Solenoid	15	191-1436	1	Bearing, Rear
5	191-1446	1	Gear	16	191-1435	1	Yoke Assembly (Includes Po Shoes, Field Coil and Positive Brushes)
6	191-1445	1	Drive Assembly	17	191-1434	1	Holder, Brush (Includes Negative Brushes)
7	191-1444	1	Cover Set (Includes Cover Plate, Washers, Snap Ring and Screws)	18	191-1433	4	Spring, Brush
8	191-1443	1	Pinion Set (Includes Pinion, Spring and Stopper Set)	19	191-1432	1	Bracket, Rear
9	191-1442	1	Stopper Set (Includes Stopper and Ring)	20	191-1431	1	Bolt Set
10	191-1441	1	Lever Assembly	21	191-1945	4	Brush
11	191-1440	1	Spring Set	22	191-1447	1	Gear Set
				23	191-1448	1	Drive Assembly

 191-1906

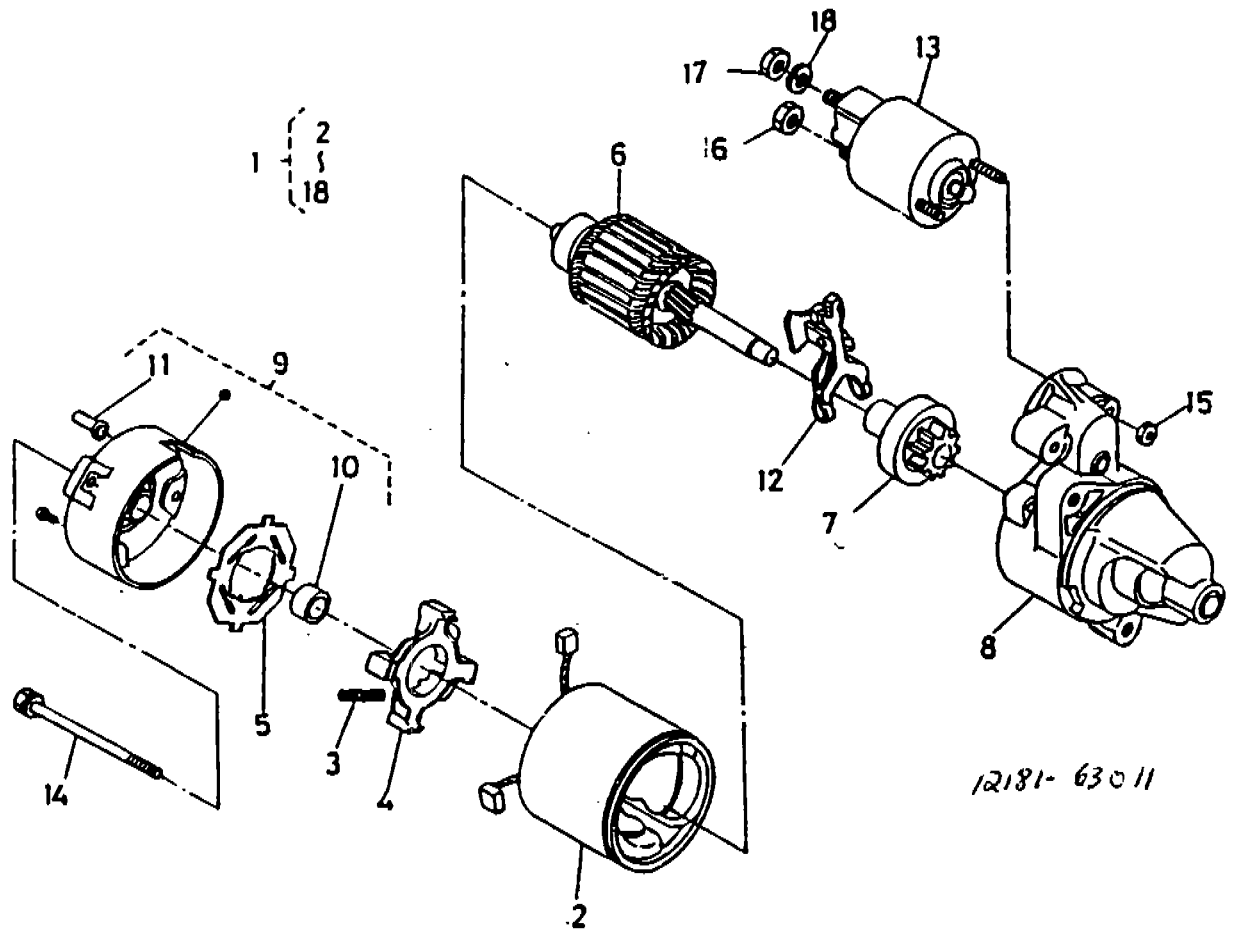

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	185-2659	1	Frame
3	185-2662	4	Spring, Brush
4	185-2661	1	Holder, Brush
5	185-2664	1	Insulator
6	185-2657	1	Armature
7	NFS/185-2713	1	Clutch, Sub 12181-63040
8	NFS	1	Housing 12181-63030
9	185-2707	1	Frame, Commutator
10	185-2663	1	Bearing, Oilless


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	185-2965	1	Cover
12	185-2656	1	Lever, Drive
13	185-2658	1	Switch, Solenoid
14	185-2660	2	Bolt, Thru
15	185-2334	2	Nut
16	185-2660	1	Nut
17	185-2657	1	Nut
18	185-2334	1	Washer, Spring
19	185-6386	1	RING, SNAP (12181-63220)
20	12181-63470	1	NUT ASSY, PINION SHAFT

Where, what, no ONAN P/N

Elite V-Gasco
LP

191-1949
-01 Thru -08

 -09 same but does
not use #4,

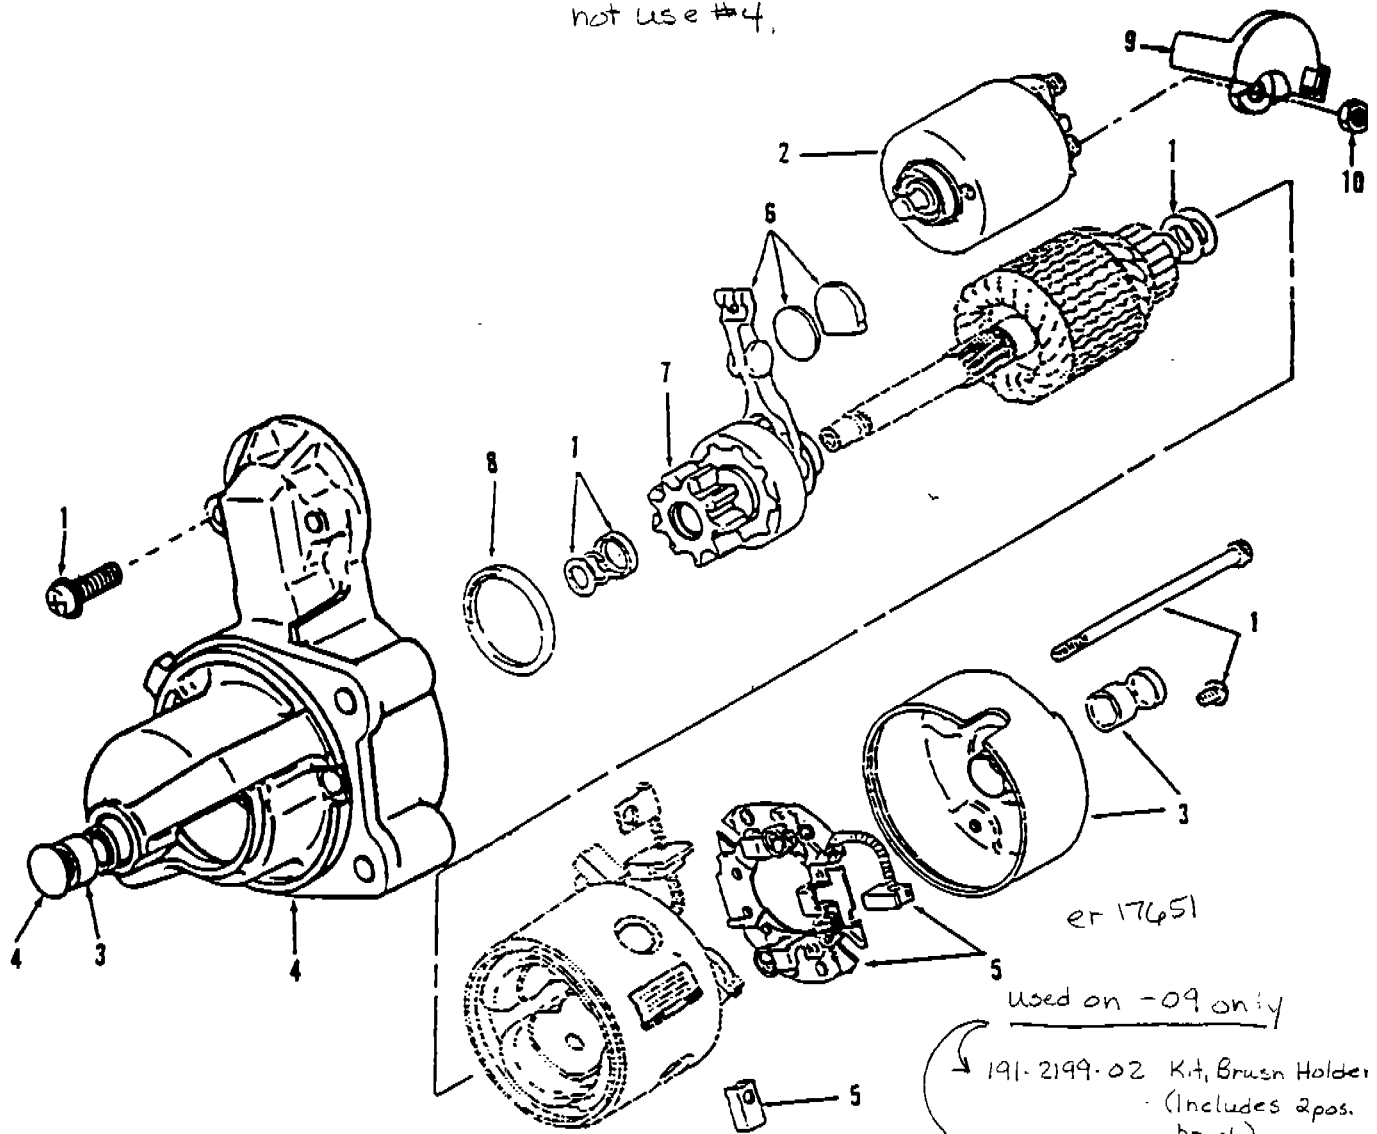

used on -09 only

191-2199-02 Kit, Brush Holder
(Includes 2 pos.
brush)
191-2199-01 Solenoid
(probably includes
per Jim T.)
Not
interchangeable
with -01-08

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1954	1	Hardware Kit (Includes two Solenoid Mounting Screws, two Thru Bolts, Armature Shims, Pinion Stop Collar, Retaining Ring & Solenoid Terminal Nuts)	5	191-1951	1	Brush Kit (Includes two Negative and two Positive Brushes & Brush Holder)
2	191-1956	1	Solenoid Kit (Includes Solenoid & Spring Plunger)	6	191-1766	1	Lever Kit, Shift (Includes Lever, Wear Plate, Rubber Plug & Grease)
3	191-1931	1	Bushing Kit (Includes Rear Cap With Bushing & Front Bushing)	7	191-1953	1	Drive Kit (Includes Pinion Gear & Drive Assembly)
4			Bracket Kit, Mounting (Includes Front Bracket, Front Bushing Dust Seal, Thrust Washer, Cap Plug & OD Pinion Seal)	8	191-1955	1	Seal Kit, Dust (Includes ID OD Pinion Seals)
				9	191-1947	1	Cap, Solenoid
				10	750-1006	1	Nut, Hex (M8)

-9 = Loss

191-1959

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1991	1	Spring Set
2	191-1992	1	Yoke Assembly
3	191-1993	1	Holder Assembly, Brush
4	191-1994	1	Switch, Solenoid
5	191-1431	1	Bolt Set
6	191-1432	1	Bracket, Rear
7	191-1433	1	Spring, Brush
8	191-1436	1	Bearing, Rear
9	191-1437	1	Bearing, Center
10	191-1438	1	Armature

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	191-1439	1	Bracket Assembly, Center
12	191-1441	1	Lever Assembly
13	191-1442	1	Stopper Set
14	191-1444	1	Cover Set
15	191-1445	1	Drive Assembly
16	191-1446	1	Gear
17	191-1447	1	Gear Set
18	191-1448	1	Drive Assembly
19	191-1949	1	Bracket, Assembly, Front
20	191-1450	1	Screw Set